


Factory Reset Instruction




M Motorized TV Lift Medium



EAN: 735007373 5976

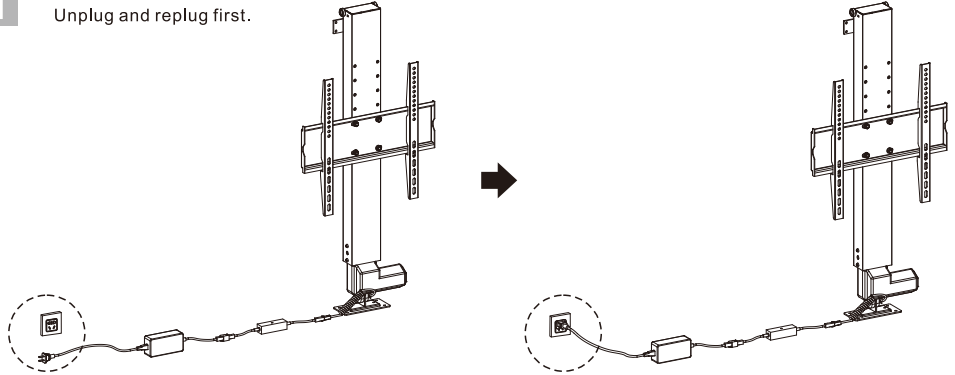
1 Unplug and replug first.

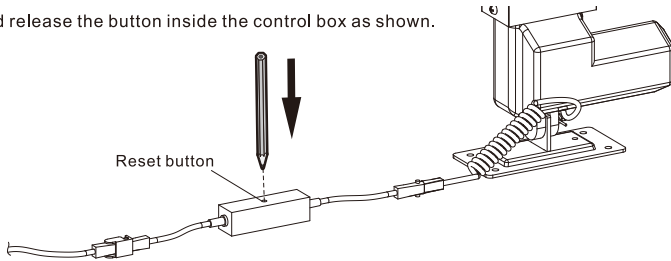

2 Press and release the button inside the control box as shown.



3 Press and release  or  button on the remote control, the remote control and the control box begin to match. Now, you can control your TV lift directly from the remote control.

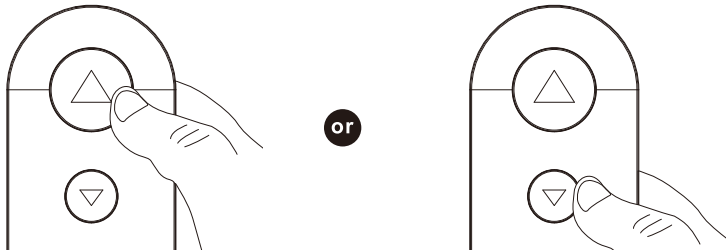

Please keep the power on during the resetting.