



## Remote control operation instructions

**STEP 1:** When the motorized wall mount is powered on, you will hear it beeps once and the system is now on standby.

**STEP 2:** Push the wall mount by hand until it folds flat against the wall. Press **OK** and then hear one beep from the buzzer, the system will then enter a working condition.

**STEP 3:** Follow the Key function instructions below for further operation.

**Note:** • Encountering obstacles or damage of mechanical parts during operating will make the TV wall mount stop automatically and the buzzer will beep three times as a warning.

• When the wall mount meets with an obstacle in the process, please remove the obstacle and push the wall mount by hand until it folds flat against the wall. Pressing **▲** button to gain an initial wall mount position, the wall mount can be operated normally afterwards.

### Buttons function instructions

**▼** Out button. Press and release **▼**. The TV wall mount will fully unfold.

**▲** In button. Press and release **▲**. The TV wall mount will return to rest against the wall.

**OK** Stop button

**◀** Left button. Press and release **◀**, the TV wall mount will swivel to the left until **OK** is pressed or the TV wall mount swings to its 30° max angle. (Note: this button is valid only when the wall mount is fully extended)

**▶** Right button. Press and release **▶**, the TV wall mount will swivel to the right until **OK** is pressed or the TV wall mount swings to its 30° max angle. (Note: this button is valid only when the wall mount is fully extended)

**mem1** Memory button1. Press and hold for 5 seconds, two continuous beeps will be heard. The LED light on the remote control turns on for one second to indicate current position memorized successfully as mem 1.

**mem2** Memory button2. Press and hold for 5 seconds, two continuous beeps will be heard. The LED light on the remote control turns on for one second to indicate current position memorized successfully as mem 2.

**1** + **OK** To recall the **mem1** button(mem 1). Press and release **1** button, and then press **OK** button, The TV wall mount will automatically swivel to the location1 after the buzzer sounds once.

**2** + **OK** To recall the **mem2** button(mem 2). Press and release **2** button, and then press **OK** button, The TV wall mount will automatically swivel to the location2 after the buzzer sounds once.

**SET** + **OK** Learning button, Please read the instructions below for more info.

### LEARN MODE operation instructions

The loss of wall mount remote control would result in TV wall mount being unusable. The **LEARN MODE** is only used to copy some of the button functions to TV controllers(suitable for most popular brands) for more convenience in using.

#### Note:

- TV remote cannot replace the wall mount remote controller, only to **LEARN** five button functions which are **◀**, **▶**, **OK**, **▲** and **▼**.
- The user must follow the rules below when using the TV remote to control TV wall mount. Select null keys on the TV remote so it won't affect original TV controlling after functions copied.

• **LEARN MODE** instructions as shown below:

**STEP1:** Press and hold **SET** for 5 seconds until LED light on the wall mount remote control turns flickering to staying on, then press **OK** and the buzzer will beep once, and the red LED light on the IR receiver will stay on, then the **LEARN MODE** will be accessed.

**STEP2:** To **LEARN** **◀**, please press **◀** on the wall mount remote control until the buzzer beeps twice. The red LED light on the IR receiver will change from being steady to slow flashes.

**STEP3:** Aim the TV remote at the IR receiver, and press the button on the TV remote that you need to set as the function of **◀** button until the buzzer beeps three times. The red LED light on the IR receiver will change from slow flashes to fast flashes.

**STEP4:** Press **OK** button on the wall mount remote control until the buzzer beeps four times. The red LED light on the IR receiver will turn off, showing **◀** button is **LEARNED** successfully. If the buzzer only beeps once, the **LEARNING** process is failed. (The TV remote doesn't support **LEARNING** function.)

The rest button functions can be **LEARNED** by the same steps above.

#### Learn "Power" button on the TV remote:

Press and hold **SET** for 5 seconds until LED light on the wall mount remote control turns flickering to staying on, then press **OK**. The buzzer will beep once, and the red LED light on the IR receiver will stay on, then press and hold **1** button on the wall mount remote control until the buzzer beeps twice, then release the **1** button. The red LED light on the IR receiver will change from being steady to slow flashes.

Aim the TV remote at the IR receiver, and press "Power" button. The buzzer will beep three times. The red LED light on the IR receiver will change from slow flashes to fast flashes. Press **OK** button on the wall mount remote control until the buzzer beeps four times. The red LED light on the IR receiver will turn off, indicating "Power" button is learned successfully. Pressing "Power" button will automatically fold wall mount to the wall while turning off the TV.

**Note:** Any interval over 20 seconds with no operations done to buttons will exit the wall mount control from **LEARN MODE**.