

Installation manual

M Motorized Public Floorstand Dual Pillar 180 HD

EAN: 7350105213120

(en) Installation manual

(ar) تثبيت الجال لي لد

(cz) Instalační manuál

(da) Installationsmanual

(de) Installationsanleitung

(ee) Paigaldusjuhend

(el) Οδηγίες εγκατάστασης

(es) Manual de instalación

(fi) Asennusohje

(fr) Installation Manuel

(he) הנקתה יירדם

(hu) Szerelési kézikönyv

(it) Manuale di installazione

(jp) 取り付け説明書

(kr) 설치 설명서

(li) Montavimo instrukcija

(lt) Uždėdėšanas rokasgrāmata

(nl) Installatie handleiding

(no) Installasjonshåndbok

(pl) Instrukcja instalacji

(pt) Manual de instalação

(ro) Manual de instalare

(ru) Инструкция по установке

 
(sk) Inštalčný manuál

(sl) Navodila za montažo

(sv) Installationsmanual

(tr) Montaj kılavuzu

(zh) 安装手册

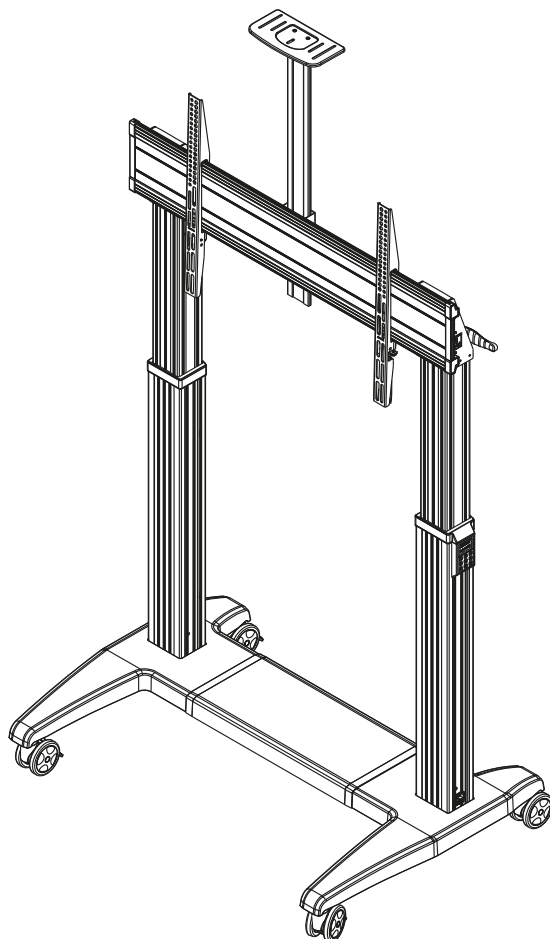

en

IMPORTANT!

Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value.
If screws are included they may not be suitable for the material of your wall, ceiling or floor. Replace the screws with suitable ones if needed.
In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

ar

ألم
ثالثة الأجزاء أو LCD أو التلفاز أو جهاز العرض أو شاشة جهاز العرض أو أجهزة ذات قيمة عالية
التي كانت التوازي مرصها قد لا تكون مناسبة لمادة الجدار أو السقف أو الأرضية.
لذلك نوصيكم بأخذ استشارة فني متخصص.

cz

DŮLEŽITÉ!

Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je výsoce hodnotné.
Pokud jsou součástí balení produktu šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlaze v místě instalace.
V případě, že nebudou přibalené šrouby vyhovovat, vyměňte je.
Pokud budete mít při montáži tohoto produktu potíže, obraťte se na zkušného odborníka.

da

VIGTIGT!

Din plasmaskærmn, LCD-skærm, tv, projektor, projektorskærmn eler andet HiFi-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.
Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

nl

BELANGRIJK!

Uw Plasma,LCD TV, Projector, Projector scherm of andere HiFi-apparatuur vertegenwoordigt een aanzienlijke waarde.
Het kan zijn dat de bijgeleverde schroeven niet geschikt zijn voor uw toepassing. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Twijfelt U, raadpleeg dan een professional.

ee

TÄHTISI!

Teie teler, projektor, projektori ekraan või muu HiFi seade on suure väärtusega.
Kui kinnitusel on komplektis paigalduskruidid, siis ei pruugi need sobida Teie seinale, lae või põranda materjaliga. Vajadusel vahetage kruidid sobivate vastu.
Kui Te ei ole seadme paigaldamise detailides kindel, siis konsulteerige spetsialistiga.

de

ACHTUNG!

Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellt einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.
Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachman

el

ΣΗΜΑΝΤΙΚΟ!

Οι τηλεοράσεις Plasma, LCD, α κανονικές τηλεοράσεις, οι οθόνες προβολέων ή άλλες συσκευές HiFi έχουν μία αξιολογούμενη αξία. Αν περιλαμβάνονται βίδες ίσως να μην είναι κατάλληλες για το υλικό του τοίχου, του ταβανιού ή του πτωμάστός σας. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο.
Στην περίπτωση που δεν είστε σίγουροι για κάποιες ζητήματα σχετικά με την προσάρτηση αυτού του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.

es

IMPORTANTE!

Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que estén formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso.
Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

fi

TÄRKEÄÄ!

Plasma- tai nestekidenäyttöjen, televisioiden, projektorien ja niiden valkokankaiden sekä muiden hiifi4aitteiden arvo on huomattava. Laitteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla.
Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämisessä liittyvästä seikasta, ota yhteyttä asiantuntijaan.

fr

IMPORTANT!

Vos écrans plasma. LCD. télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées.
Si vous avez des doutes quant au montage de ce produit, veuillez consulter un professionnel.

hu

FONTOS!

Plazma, LCD TV-d, projektorod, vetítővásznad vagy egyéb műszaki berendezéseid tekintélyes értéket képvisel. Ha a csavarokat tartalmazza, akkor sem biztos, hogy alkalmas a berendezés, hogy falra, mennyezetre, vagy a padlóhoz rögzítsd. Cseréld ki a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beépítésével kapcsolatban, forduljon szakemberhez.

it

IMPORTANTE!

I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità.
Nel caso riscontriate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

jp

重要！
あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のハイファイ機器はかなりの値を表します。
ネジが含まれている場合、彼らはあなたの壁、天井や床の材質に適していないかもしれません。
必要に応じて適切なものでネジを取り付けます。
ケースでは、本製品の取り付けのいずれかの側面に關して不明な点があるプロに相談してください。

no

VIKTIG!

Din plasma, LCD, TV, projektor, projektorskjerm eller annet HiFi-utstyr har betydelig verdi. Hvis skruer følger med, er det ikke sikkert at de passer til materialet i veggen, taket eller gulvet. Bytt skruene i skruer som er egnet om nødvendig.
Hvis du er usikker når det gjelder monteringen av dette produktet, må du kontakte en profesjonell.

pl

UWAGA!

Monitor plazmowy, LCD, telewizor, projektor, ekran projekcyjny lub inny sprzęt HiFi stanowi znaczną wartość. Jeśli dołączono do niego śruby mocujące, mogą one nie być odpowiednie do materiału, z którego wykonane są dane ściany, sufit lub podłoga. W razie potrzeby należy je zastąpić odpowiednimi śrubami.
W razie jakichkolwiek wątpliwości dotyczących montowania tego urządzenia należy zasięgnąć porady u specjalisty.

pt

IMPORTANTE!

O seu Plasma. LCD, TV, projetor, tela de projeção ou outro equipamento de HiFi representa um valor considerável.
Se os parafusos estão incluídos eles podem não ser adequados para o material da sua parede, teto ou chão.
Substitua os parafusos com os adequados, se necessário.
Em caso de dúvida sobre quaisquer aspectos da montagem deste produto, consulte um profissional.

li

SVARİGI !

Jūsu Plasma. LCD, TV, projektors, projektora ekrāns vai cita HiFi iekārtas veido ievērojamu vērtību.
Iekārtās skrūves var būt nepiemērotas jūsu sienai, griestu vai grīdas materiāliem. Nomainiet skrūves ar piemērotām skrūvēm, ja nepieciešams.
Gadījumā, ja jūs neesat pārliecināts par jebkuriem šo produktu montāžas un stiprinājumu aspektiem, lūdzu, konsultējieties ar speciālistu

it

SVARBU!

Jūsų plazminis TV, LCD, LED televizorius, projektorius, projektoriaus ekranas ar kita HiFi įranga turi didelę vertę.
Jei varžtai yra komplekte, jie gali netikti pas Jus panaudotoms sienų, lubų ar grindų medžiagoms.
Pakeiskite varžtus į tinkamus, jei reikia.
Jei nesate tikras dėl bet kurio šio produkto montavimo aspekto- prašome kreiptis į profesionalus.

ro

IMPORTANT!

Plasma ta. LCD, TV, proiector, ecran de proiectie sau alte echipamente HiFi reprezintă o valoare considerabilă.
În cazul în care șuruburile sunt incluse ele nu pot fi potrivite pentru materialul peretelui dvs., tavan sau podea.
Remontați șuruburile cu cele adecvate, dacă este necesar.
În cazul în care nu sunteți sigur cu privire la orice aspecte ale montării acestui produs vă rugăm să consultați un profesionist.

ru

ВНИМАНИЕ!

Каким бы оборудованием HiFi вы ни пользовались, будь то плазменный, ЖК или стандартный телевизор. проектор или проекционный экран, - все они представляют значительную ценность. Не всегда крепления, прилагаемые в комплекте, подходят к материалу ваших стен, потолка или пола. При необходимости замените их на более подходящие.
Если у вас есть какие-либо сомнения относительно того, как крепить данный продукт. пожалуйста, проконсультируйтесь у квалифицированного специалиста.

sv

VIKTIGT!

Din plasmaskärm, LCD-skärm, TV, projektor, projektorskärm eller annan HiFi-utrustning representerar ett ansenligt värde. Om skruvar medföljer utrustningen är det inte säkert att de passar för materialet i väggen, taket eller golvet! Byt ut skruvarna mot lämpliga skruvar om så krävs. Kontakta en expert om du är osäker på något i samband med monteringen av produkten.

sk

DŔLEŽITÉ!

Váš plazmový alebo LCD televizor, projektor, plátno a ďalšie elektrotechnické vybavenie je vysoko hodnotné.
Pokiaľ sú súčasťou balenia produktu skrutky, skontrolujte, či sú vhodné pre upevnenie k stene, stropu alebo podlahe v mieste inštalácie.
V prípade, že nebudú pribalené skrutky vyhovovať, vymeňte ich.
Pokiaľ budete mať pri montáži produktu potiaže, obráťte sa na skúseného odborníka

sl

POMEMBNO!

Vaš Plasma. LCD, TV, projektor, projekcijsko platno ali drugo HiFi oprema predstavlja pomembno vrednost.
Če so vkljućeni vijaki ne smejo biti primerni za material svojega steno, strop ali tla.
Ponovno namestite vijake z ustreznimi tiste, če je potrebno.
V primeru, da ste preprićani o vseh vidikih vgradnje tega izdelka se obrnite na strokovnjaka.

tr

ÖNEMLİ!

Plazma, LCD, TV, Projektör, Projektör Ekranınız veya diğer HiFi cihazınız son derece değerlidir. Birlikte verilen vidalar duvar, tavan veya döşeme teçhizatınıza uygun olmayabilir. Gerektiğinde vidaları uygun olanlarla değiştirin.
Bu ürünün monte şekilleri ile ilgili sorunlarınız olmasa halinde bir uzmandan yardım alın.

zh

重要提示！

您的等离子、LCD、TV、投影机、投影机屏幕或其它HiFi设备都有着不菲的价值。如果附带有螺钉它们可能不适合您的墙壁、天花板或地板。如果需要请将螺钉更换为适当的型号。
如果对本产品安装的任何方面有疑问请咨询专业人员。

**Warning!**

Always check the depth of the holes before starting an installation.

تحذير!

الفحص دائمًا عمق الثقوب قبل أن تبدأ في عملية التركيب.

ADVARSEL!

Kontroller altid hullernes dybde, før du går i gang med en installation.

WARNUNG!

Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ!

Ελέγχετε πάντοτε το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.

WARNING!

Always check the depth of the holes before starting an installation.

¡AVISO!

Controle siempre la profundidad de los agujeros antes de iniciar una instalación.

VAROITUS!

Selvitä reikien syvyyden ennen asentamisen aloittamista.

ATTENTION !

Vérifiez toujours la profondeur des trous avant de commencer l'installation.

ATTENZIONE!

Verificare sempre la profondità dei fori prima dell'installazione.

Varován!

Před začátkem instalace vždy zkontrolujte potřebnou hloubku všech otvorů.

ADVARSEL!

Sjekk alltid hvor dype hullene er før du begynner å montere.

OSTRZEŻENIE!

Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość

otworów.

ПРЕДУПРЕЖДЕНИЕ!

Перед установкой всегда проверяйте глубину отверстий.

VARNING!

 
Kontrollera alltid hållens djup innan en installation påbörjas.

UYARI!

Montaja başlamadan önce daima deliklerin derinliğini kontrol edin.

警告!

请始终在开始安装前检查孔洞的深度。

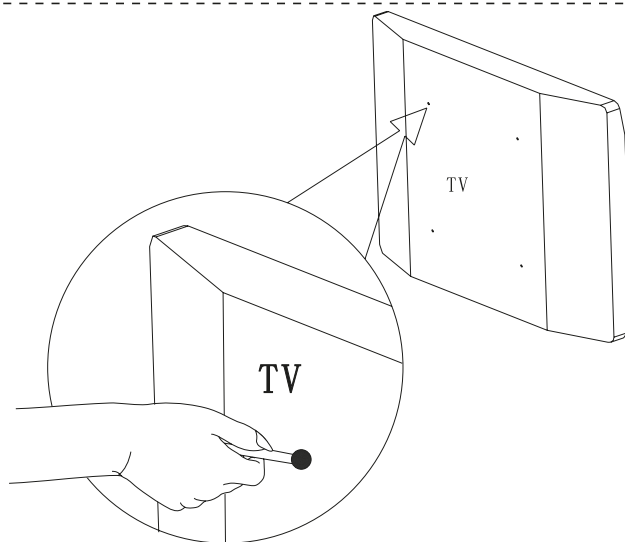**WARRANTY CARD****MULTIBRACKETS.COM****MULTIBRACKETS™ Limited Warranty**

Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- **FIVE (5) years** for metal video monitor mounts; all racks and non-electrical rack accessories
- **TWO (2) years** for gaslifts and sit-stand workstations
- **ONE (1) year** for all motorized and/or automated products, plastic speaker mounts; all speaker stands; all furniture; all wood (MDF) accessories

 
For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges.

This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.

Multibrackets™ Stockholm Sweden 2024
www.multibrackets.com

The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: www.multibrackets.com

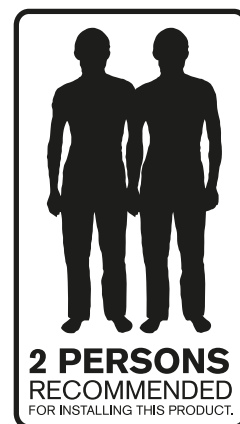


Content

Content	4/16
Safety instructions (Read carefully)	5/16
Assembly Kit	6/16

Assembly and Installation


1. Base installation	7/16
2. Columns to base installation	8/16
3. TV plate installation	9/16
4. Touch control panel instruction	10/16
5. VESA rails to TV back installation	11/16
6. TV assembly to cart installation	12/16
7. Camera shelf installation	13/16
8. Cable management	14/16
9. Remote control instruction	15/16
10. Troubleshooting solution	16/16

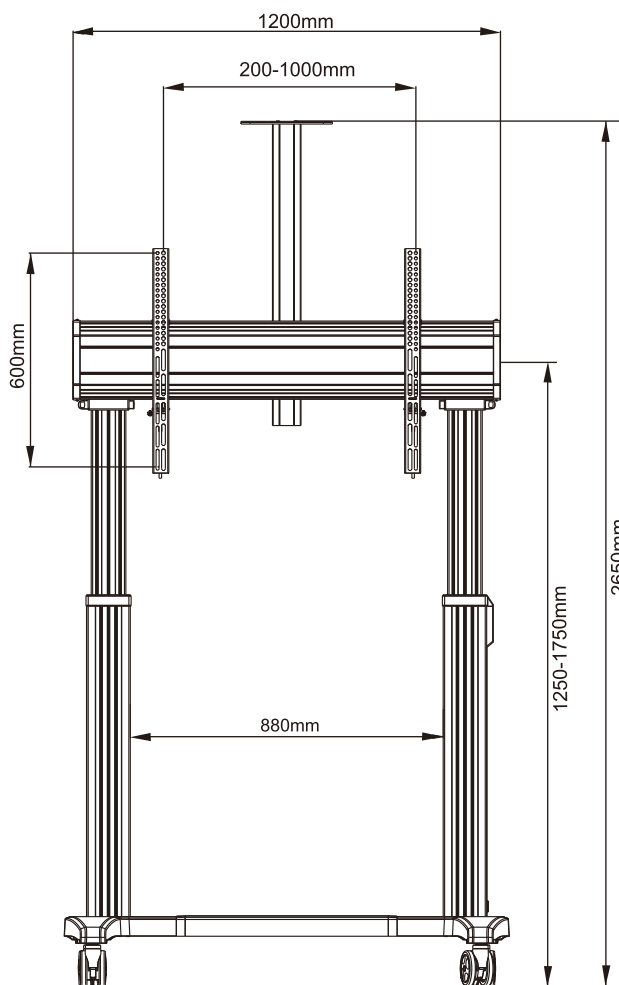 

← CAMERA TRAY LOAD
4.5KG MAX

VESA: 200×200-1000×600mm

 ← LOAD CAPACITY
136.4 KG MAX

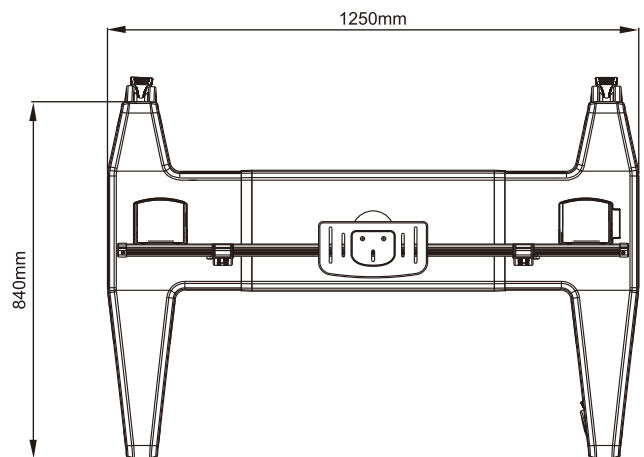

Pay attention when use

 
 
 
 
 
 
 
 
 
 
 
Standard: Q/320583 A JHJ001-2022

Please read the entire instructions and safety guidelines prior to assembly.



Failure to do so may cause personal injury, product damage and additional property damage.

1. We want you to be completely satisfied with your new unit. If you have any questions, issues or safety concerns, please contact our professional team. We will respond promptly.
2. If you have questions about the assembly and operation of the product and if the product is damaged or parts lost, please contact local customer service for support immediately.
3. The maximum load of this unit is 136.4kg/300lbs. It fits 65"-110" screen. The maximum load of camera tray is 4.5kg/10lbs. DO NOT exceed the maximum permissible weight.
4. DO NOT make non-factory approved modifications. DO NOT use the unit outside of its factory approved purpose.
5. The unit contains sliding parts and electronic components. For safety's sake, please be careful in using.
6. We DECLARE that we CAN NOT be liable for damage or injury caused by improper mounting, incorrect assembly .or inappropriate use
7. Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
8. Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.
9. No user serviceable parts inside.
10. Tip over Warning
Serious or fatal crushing injuries can occur from tip over. To help prevent tipping over:
Never allow children to climb, stand, hang, or play on any part of TV or TV cart.
Use tip over restraint or anchor stand to wall.
Use of tip over restraints may only reduce, but not eliminate the risk of tip over.
We declare that we cannot be liable for any damage, injury or death caused by tip over.
11. Choking Hazard Warning
Small parts are not for children under 3 years. Adult supervision is required. Keep children away from the assembly hardware. Small pieces may result in choking if swallowed.
12. Do not expose to direct sunlight or hot surface. Do not place the product close to heat elements, as well as near an open fire.
13. Keep all electrical components away from liquids.
14. Make sure TV is mounted in the middle to avoid any damage or loss caused by uneven loading weight.
15. Make sure there is no obstacles around when the cart is moving to avoid collision causing losses or casualties.
16. Electric wire should be long enough when moving cart up, to avoid any damage to the wires by over-stretching, in case of accidents like creepage or electric shock.
17. Do not locate cart on inclined or uneven surface to avoid any damage or loss caused by cart tipping over.
18. Unlock the caster brakes before moving cart. Push and move cart slowly to the specific location. Please make sure to lock the caster brakes after move.
19. Do not use old power cord to avoid accidents.
20. Please hold the plug to pull out, do not pull out the plug with the power cord directly.


Assembly Kit

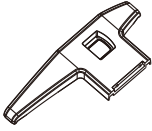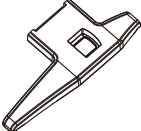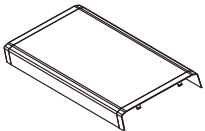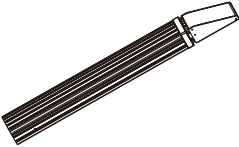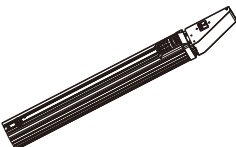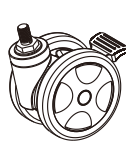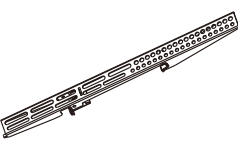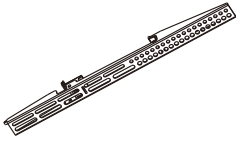1  1X	L	2  1X	R	3  1X
4  1X	L	5  1X	R	6  4X
7  1X	L	8  1X	R	9  1X
10  5X		11  2X		12  1X
13  1X		14  1X		15  1X
16  2X		17  2X		18  1X


 
 
Hardware kit

A  M10×15mm 4x	B  M5×25mm 4x	C  M6×25mm 4x	D  M8×25mm 4x	E  M8×40mm 4x
F  16×Φ6.2×1.5 4x	G  Φ8.2×10mm 4x	H  Φ10.2×5mm 8x	I  Φ9×15mm 4x	J  Φ16.2×Φ12×2mm 4x
K  M6×15mm 6x	L  M8×12mm 8x	M  M8×15mm 12x	N  M8×40mm 8x	O  6mm 1x
				P  21mm 1x


 
Manual

							
Tightening	Loosening	Phillips Screwdriver	Tape Measure	Adjustment	By Hand	Allen Key	+ Tightening - Loosening

   
1. Base installation

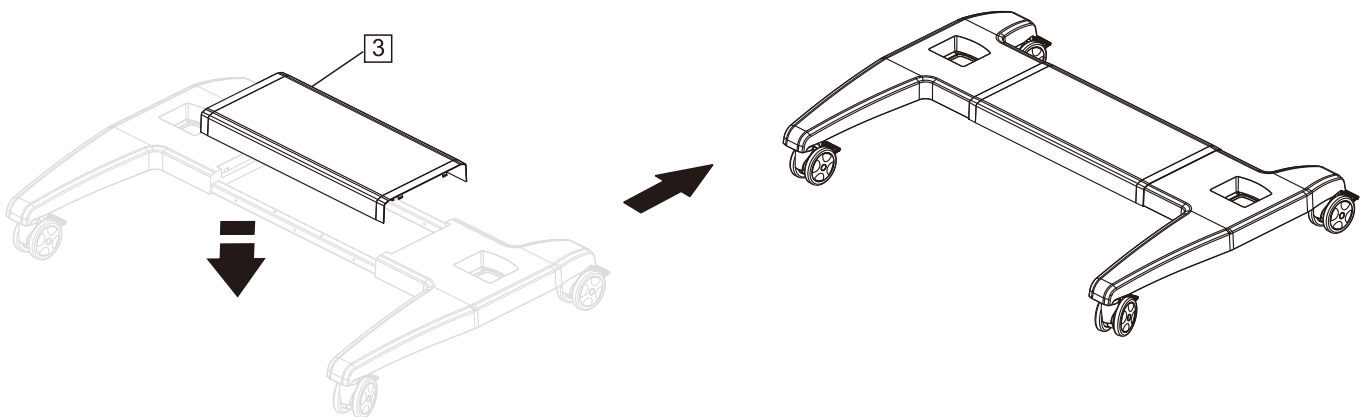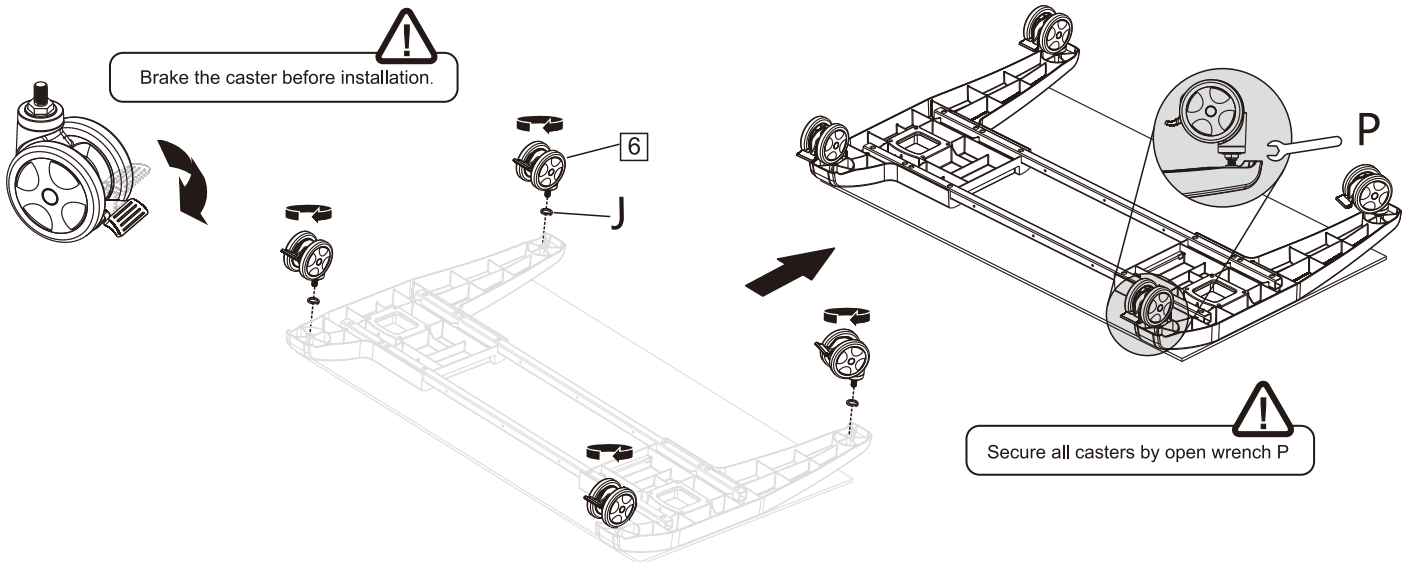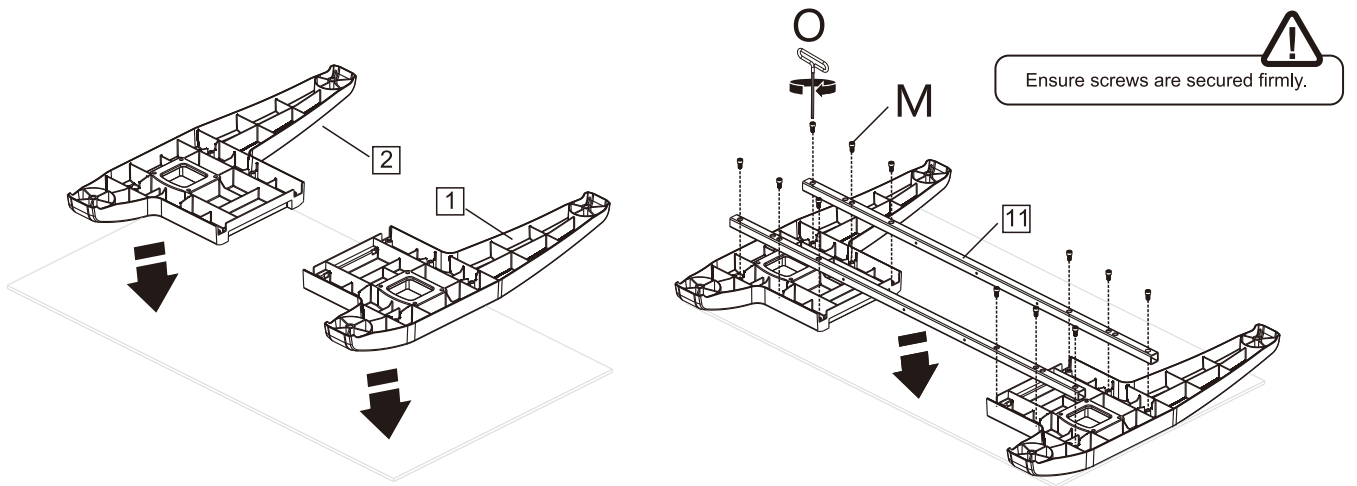

  
2. Columns to base installation

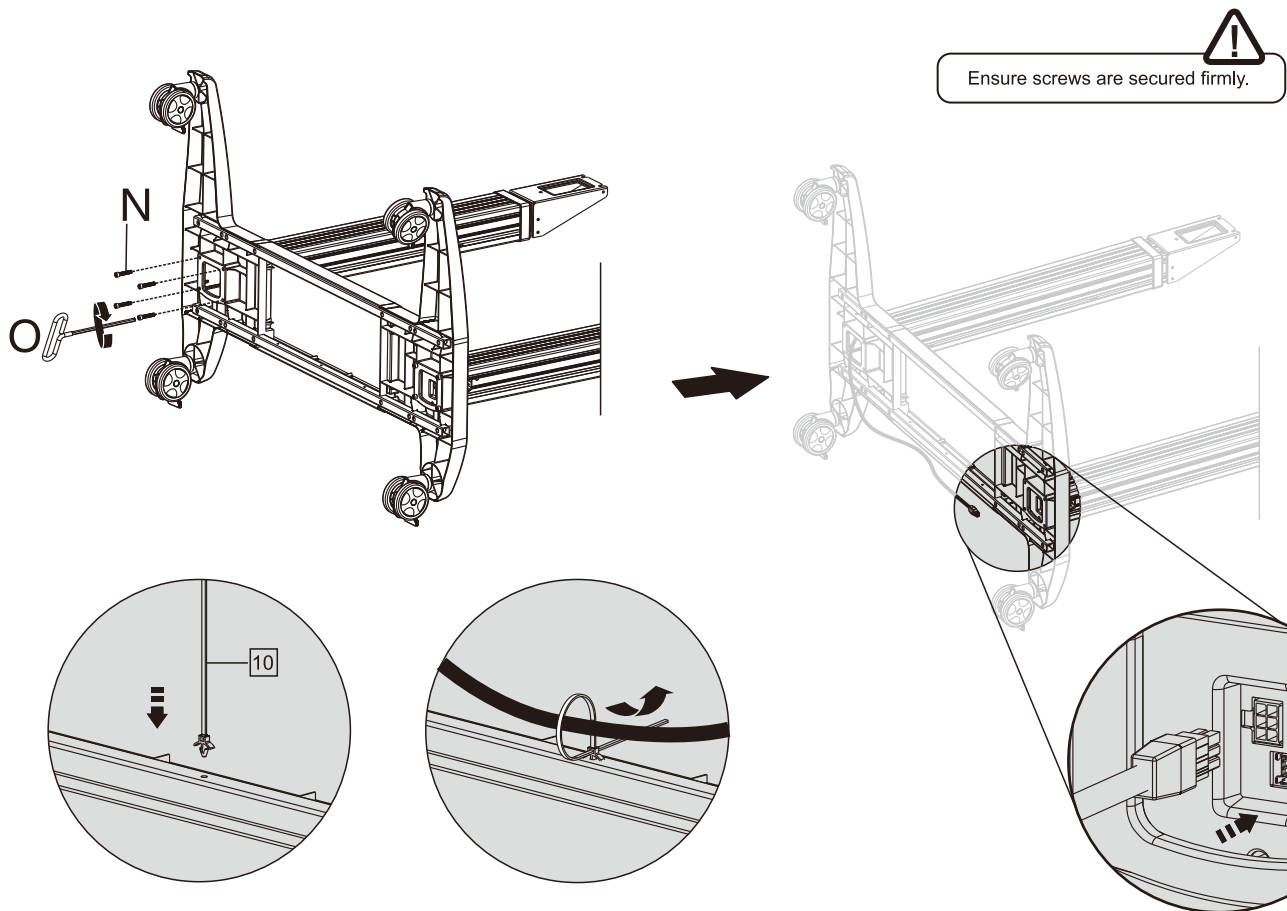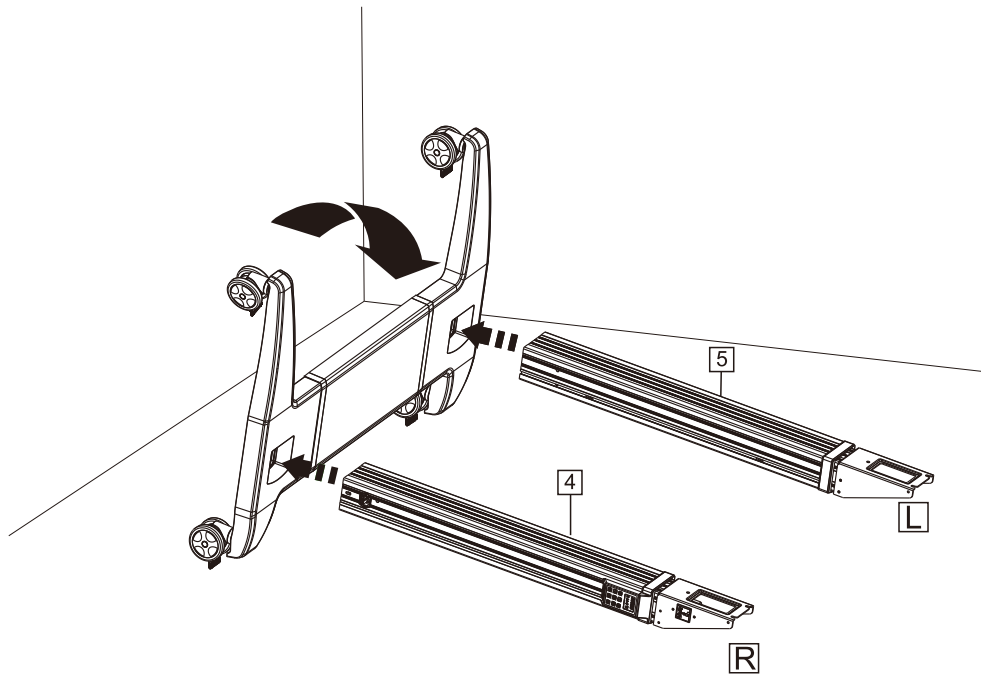

 3. TV plate installation

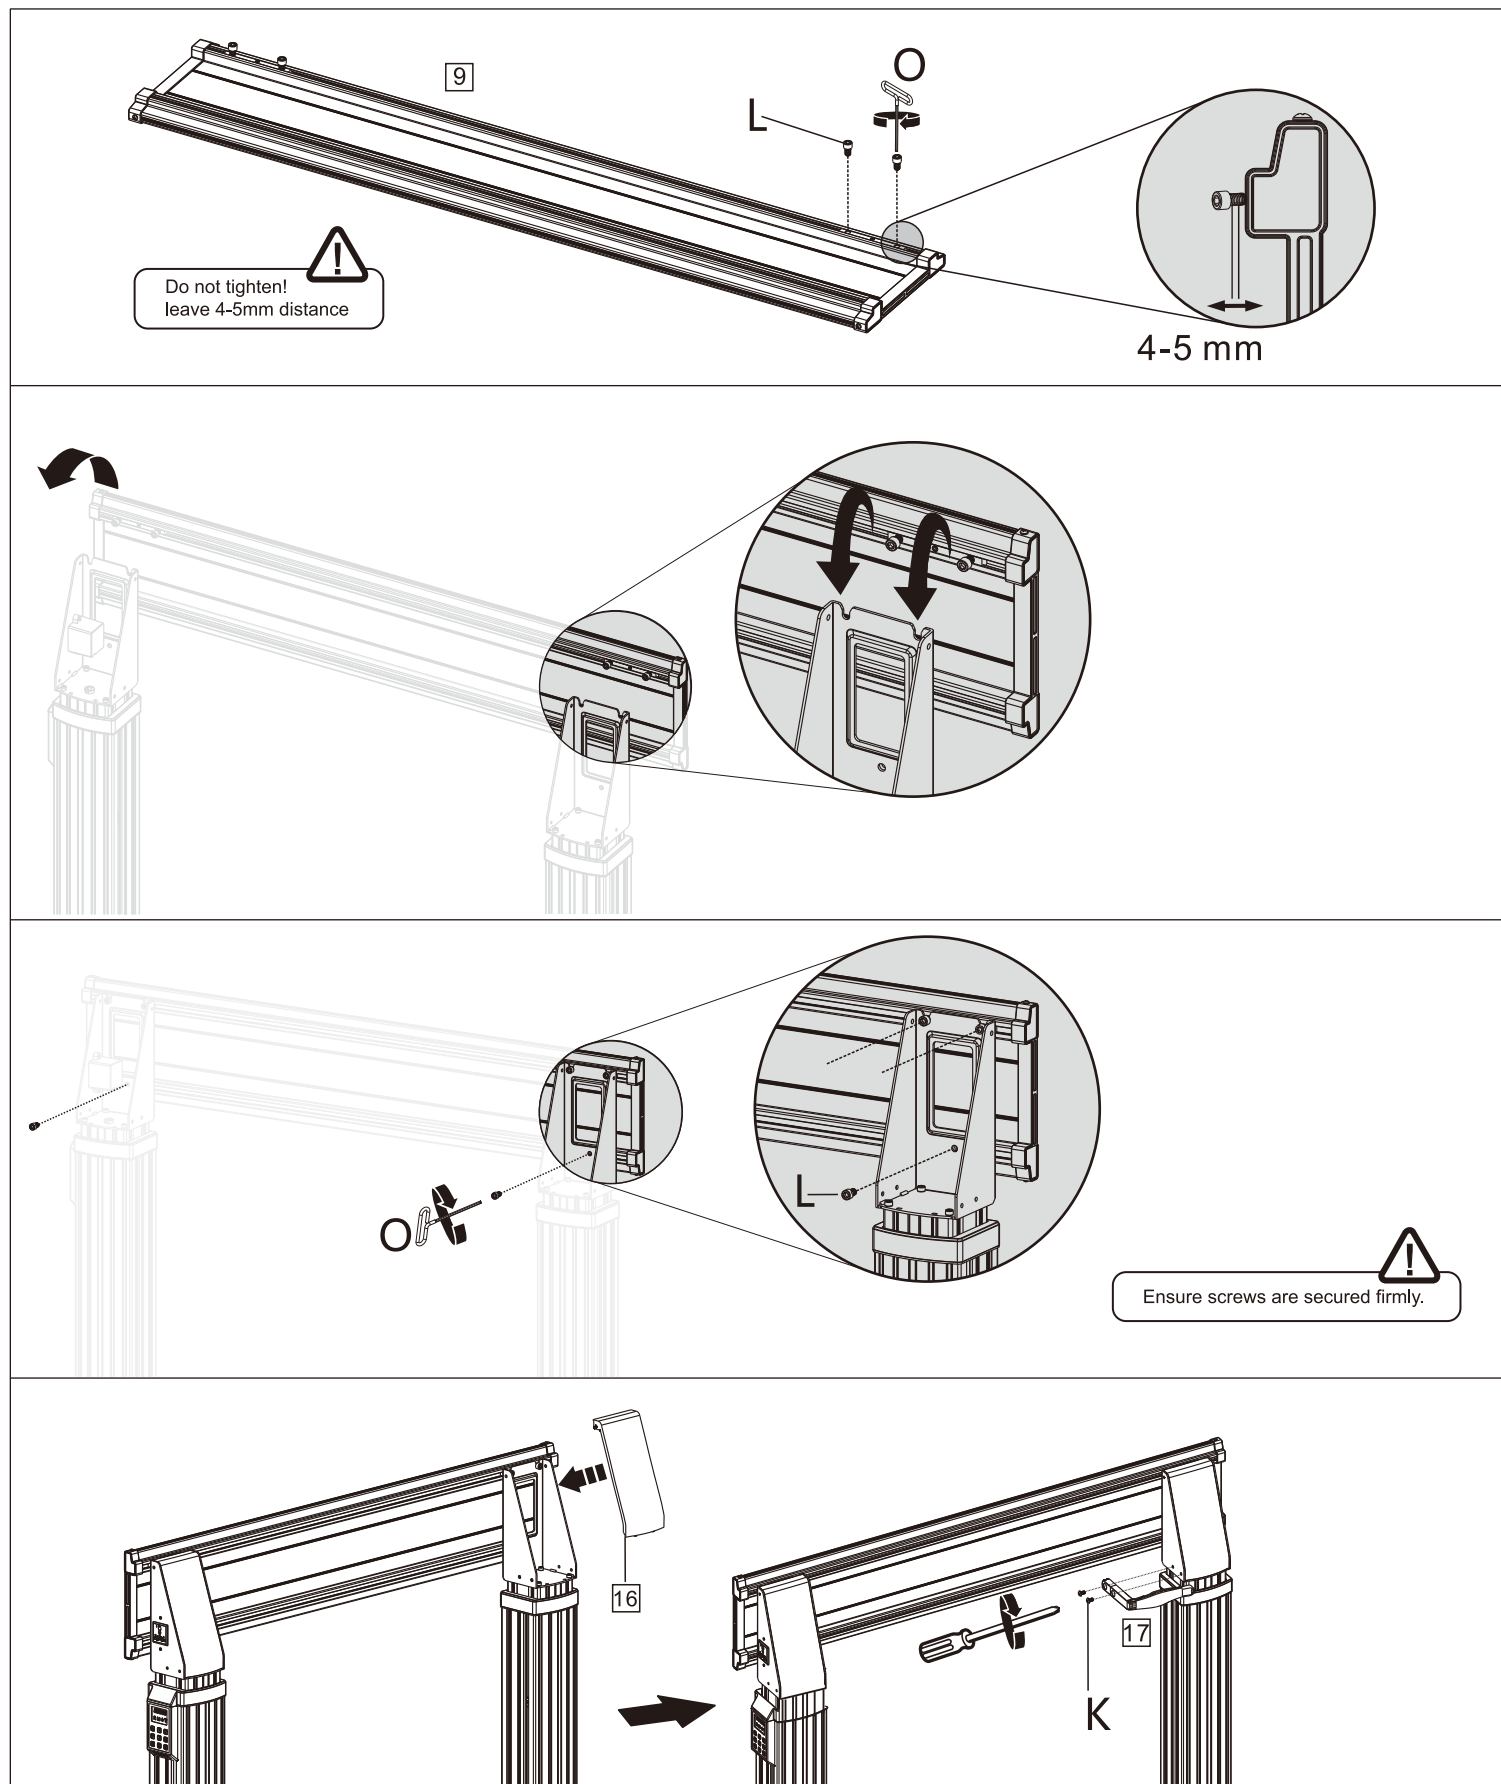

 4. Touch control panel instruction


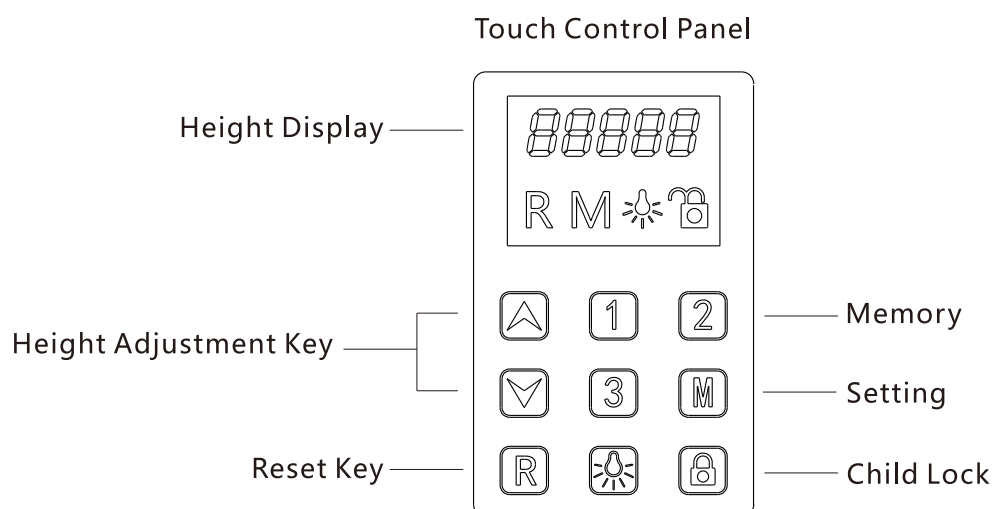


ATTENTION:

Before TV mounting, RESET must be made in non-loaded condition. Please connect the power(100-240V) and unlock touch control panel. Press and hold **R** button until display shows "1250". It indicates the unit is functioning properly. Please refer to Reset Procedure below for specific operation.

Reset Procedure	The stand reaches its minimum height when display shows "1200". Now the reset is completed.
Memory Setting	Save up to three commonly used heights and recall them quickly. Press ▲ / ▼ button to move the stand to the required height. Press M button, M lights, and then "S----" flashes. Press 1 , 2 or 3 button to assign the current height to a number, memory setting is done. To restart your memory height, press and hold 1 , 2 or 3 button for two seconds accordingly. The stand will move to the height you preset automatically.
Child Lock Setting	TO LOCK: press and hold 🔒 until button lights in red, both control panel and remote control cannot be used. TO UNLOCK: press and hold 🔒 until 🔓 appears, both control panel and remote control works again.
Height adjustment	Press and hold ▲ button, the stand will go up at a steady speed. Release the button to stop the move adjustment is done. Press and hold ▼ button, the stand will go down at a steady speed. Release the button to stop the move adjustment is done.

  5. VESA rails to TV back installation

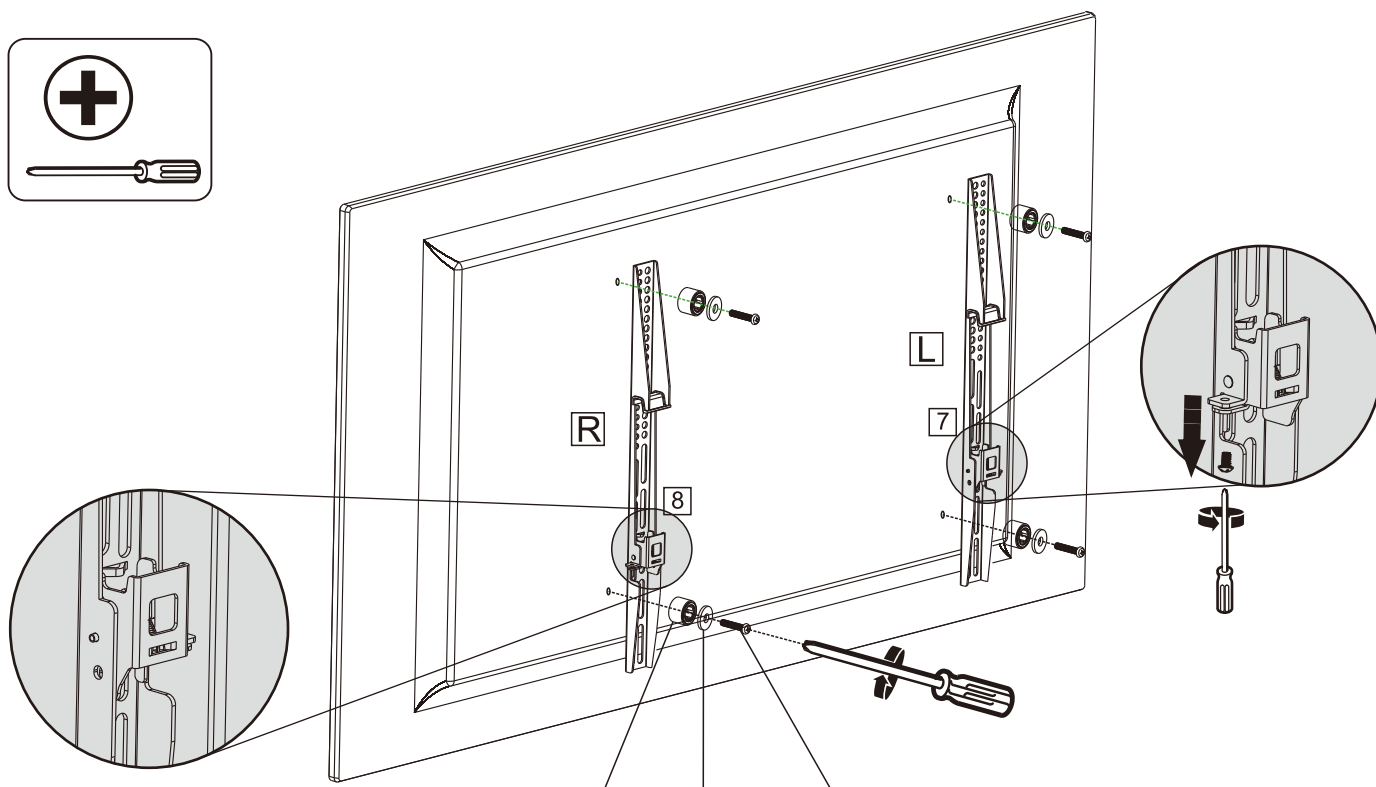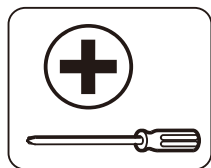



G/H/I + F + A/B/C/D/E




Ensure screws are secured firmly.



 
 
Plastic spacers must be used (except for A) when assemble VESA rails onto your TV to avoid TV threaded holes damaged due to the holes are shallow

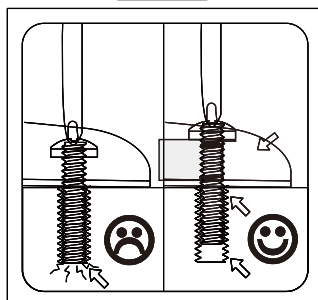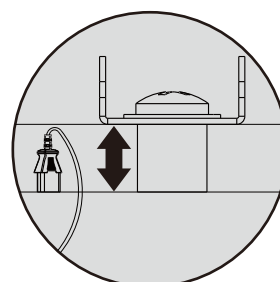



M10×15mm(A)

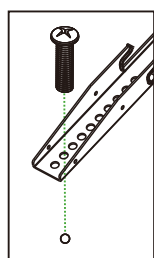 

M8×25mm(B)
M8×40mm(E)

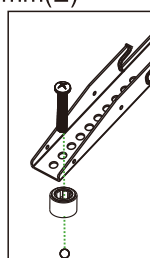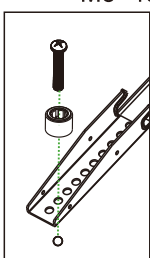  


M5×25mm(D)
M6×25mm(C)

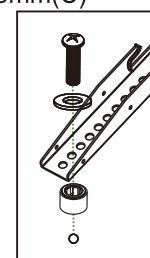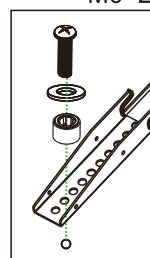  

6. TV assembly to cart installation




 Mount TV balanced in the middle

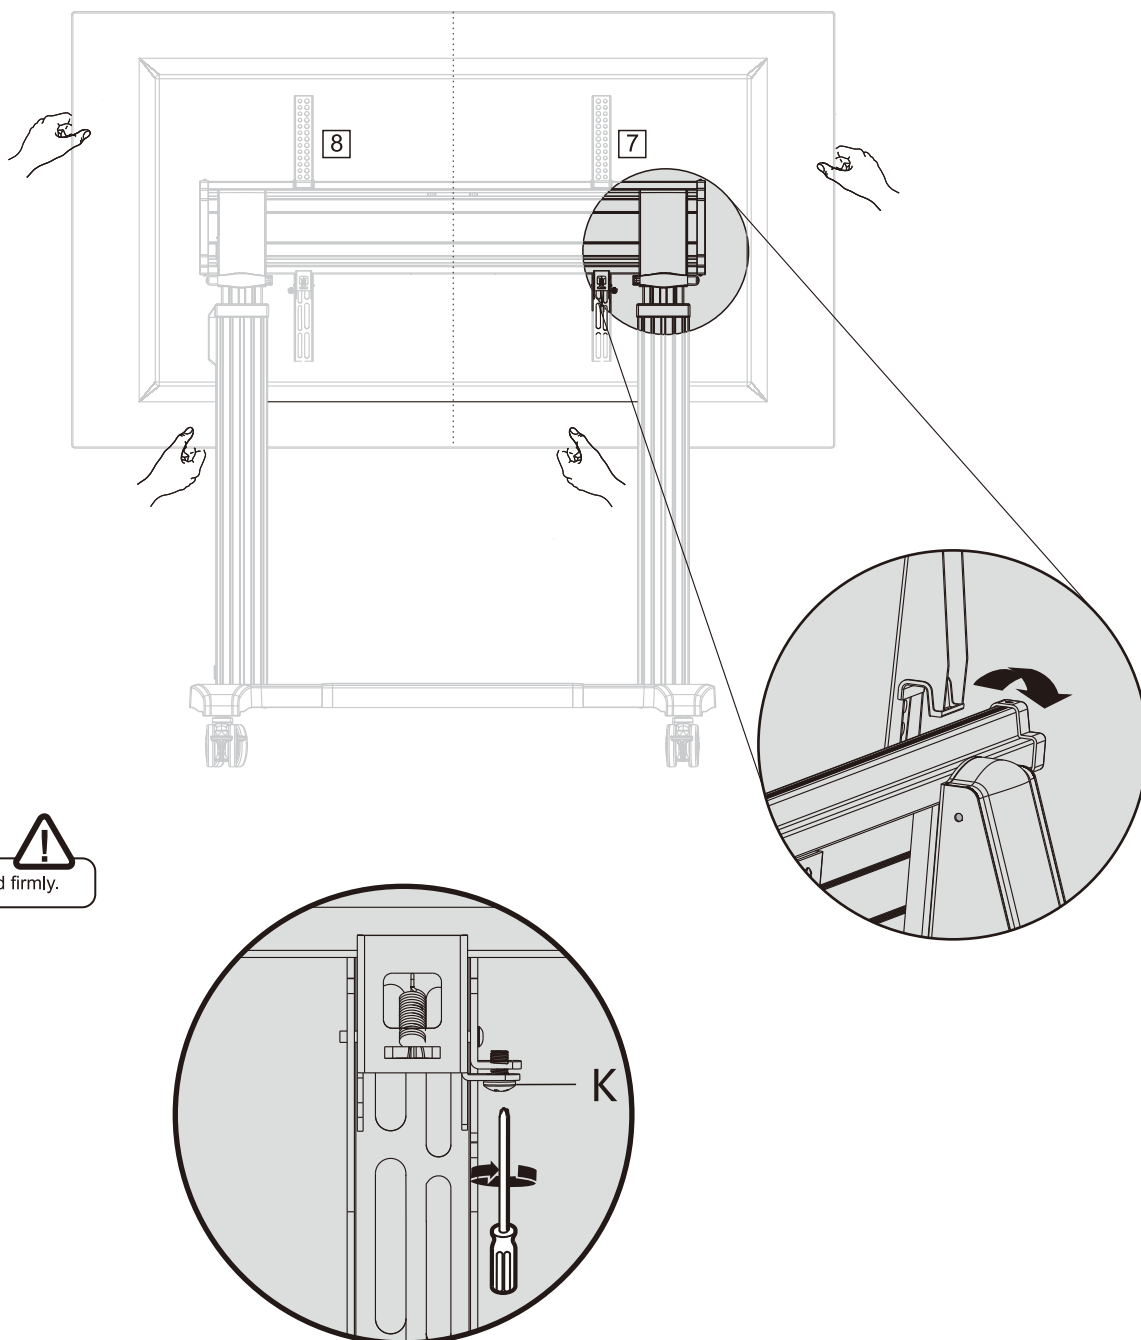


Ensure screws are secured firmly.

 7. Camera shelf installation


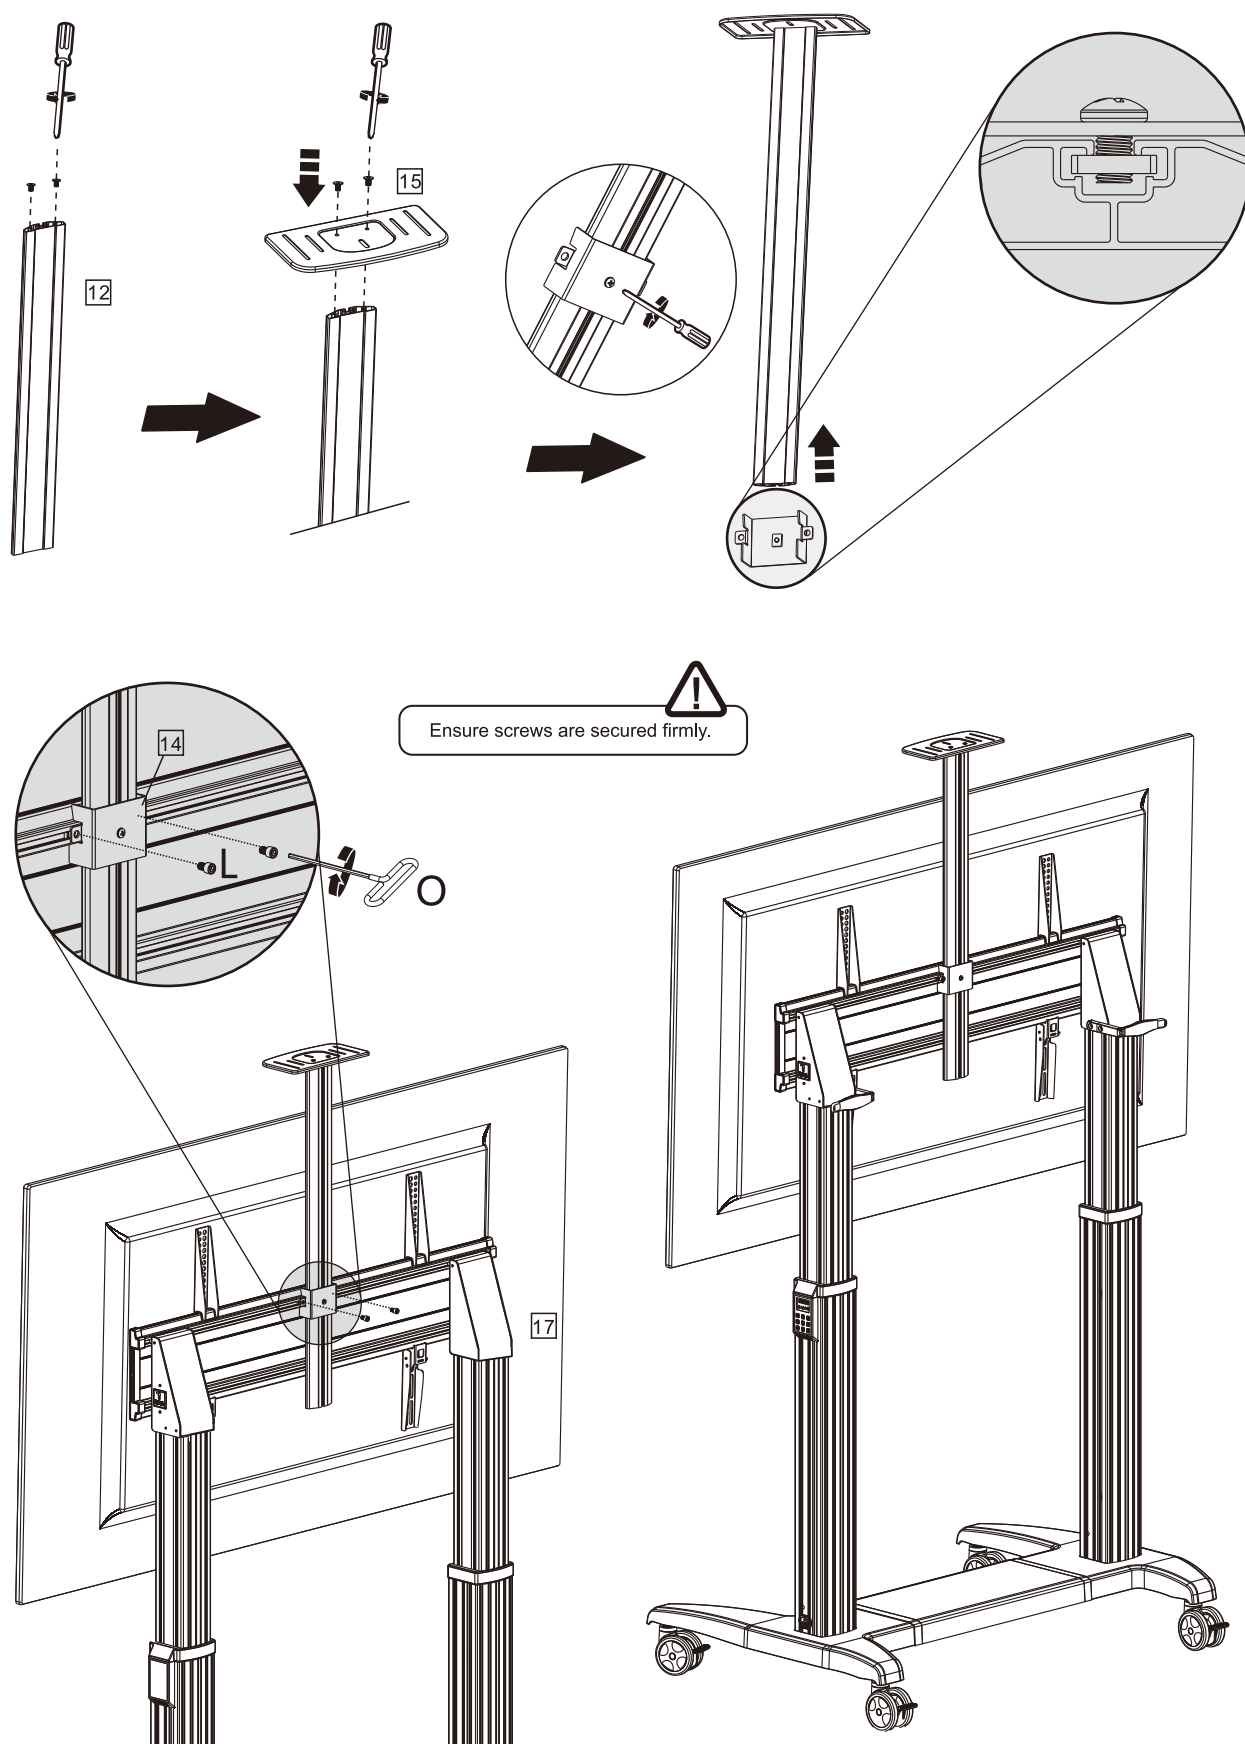


8. Cable management

 Input: 100-240V 5A

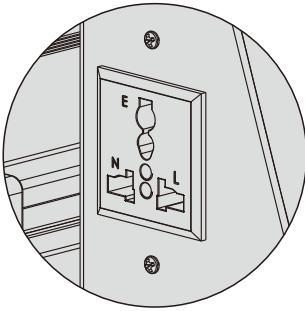


Input: 100-240V 5A

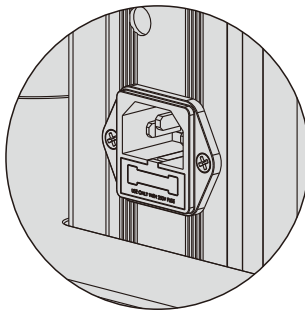  


13

 Ensure no obstacles at both ends when lift in operation
failure to comply can result in injury, loss or damage.

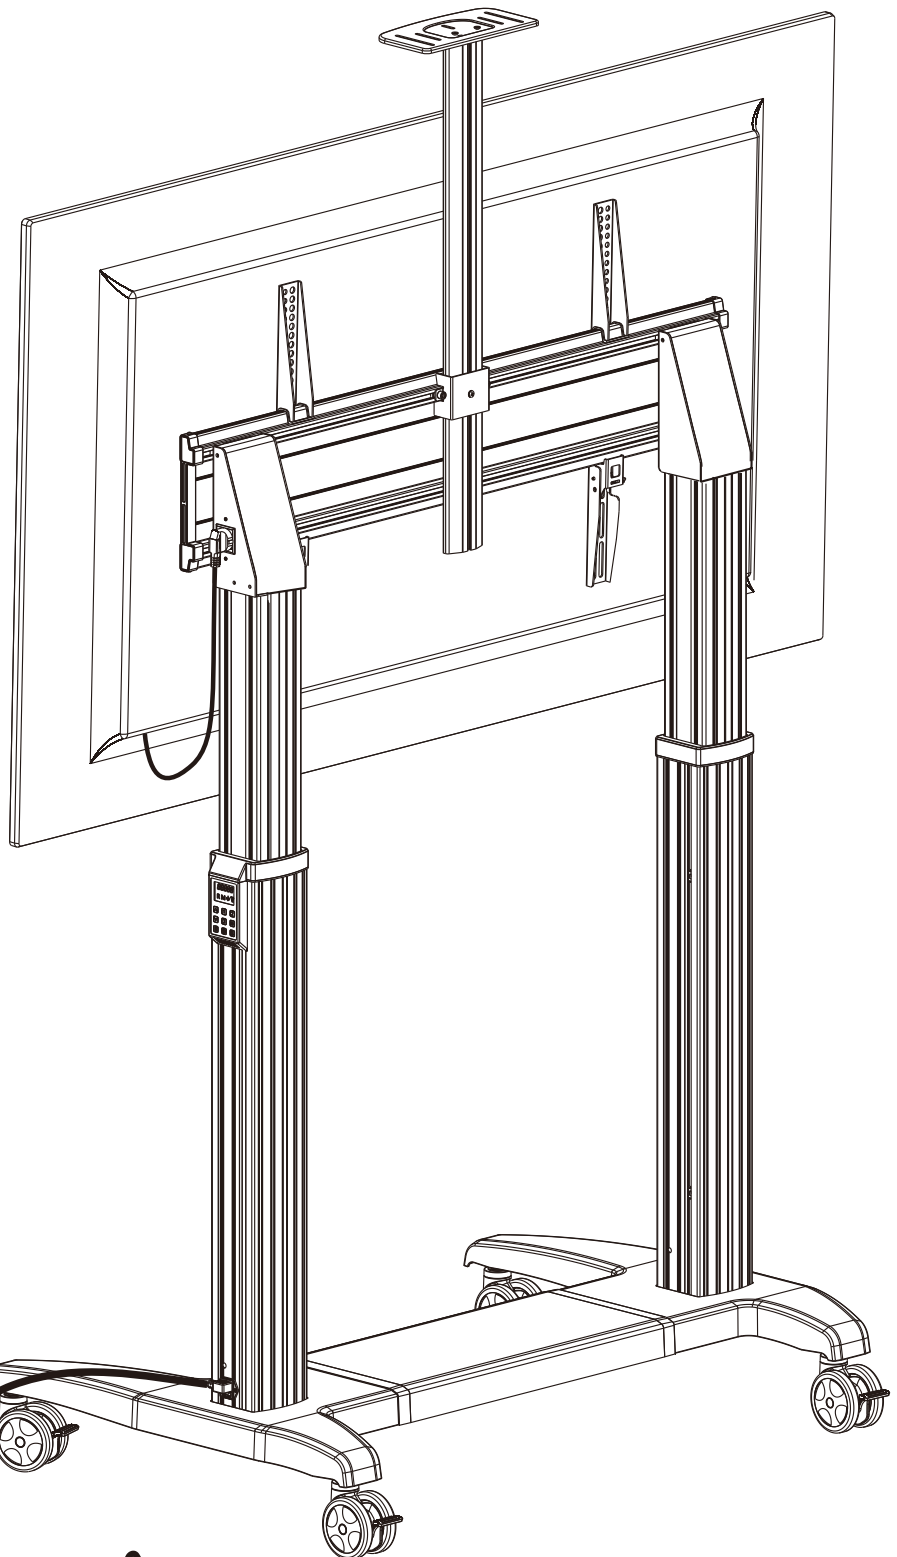

 9. Remote control instruction

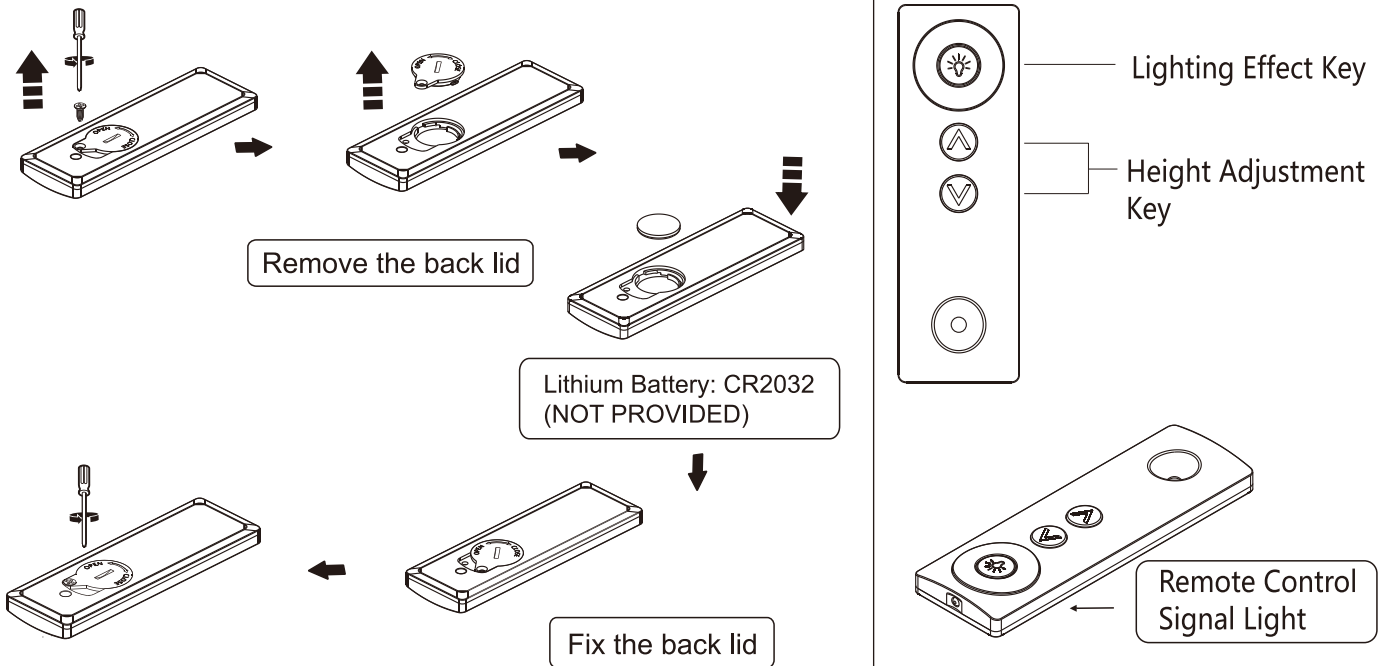

1. How to match remote control with touch control panel

- Make sure the stand is not powered on.
- Press and hold the  button on the remote control until the signal light flashes. Power on the stand while pressing and holding the  button, and release the  button until the signal light on the remote control goes out. At this time, the remote control and the touch panel are successfully matched.

2. Height adjustment

Remote control manual  To raise  To lower.

ATTENTION!

- Lithium battery specification: CR2032. Lithium battery is not included in the product, due to the restrictions on shipping from certain countries and regions.
- Do not disassemble the remote control by non-professionals, otherwise, it may cause the remote control to malfunction.
- Please keep the remote control in a safe place, do not allow any liquid to flow into the remote control. Do not expose the remote control to direct sunlight or extreme heat.
- If you do not use the remote control for a long time, please remove the battery to prevent leakage and damage to the remote control.
- If the remote control is not working properly, please take the battery out, reinstall after 30 seconds, If it still does not work properly, please replace the battery.

10. Troubleshooting solution

Guidance on malfunction code:

When cart works abnormally, there will be a malfunction code flashing on the control panel indicating you the possible problem. Please take action advised below to solve the problem.

If the problem remains, please consult a qualified installer or contact your local distributor for assistance.

Troubleshooting Code		
Code	Description	Solution
E00	Communication failure between driver board and panel	Contact us or local distributors for repair service.
E01	Left motor short circuit or right motor short circuit	A. Check left and right motor connection. B. Return the columns to factory for repair service.
E02	Overcurrent	A. Reduce the load on stand. B. Contact us or local distributors for repair service.
E03	Overheated	A. Let the stand rest for 18 minutes. B. Power off and restart.
E04	Abnormal balance	When two columns have 4mm height difference, perform reset procedure.