



IMPORTANT:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully. Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. Should you ever have any questions or feel you require help please contact your place of purchase for assistance.

Instructions of Safety and Warnings

- Make sure that the mounting surface is strong enough to handle mounted product and equipment.
- **DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**
- Always be sure to have someone assist you or a mechanical device to lift and position heavy products safely.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction or alterations of the given power unit and control box aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless the product is intended for their use and all instructions and manuals are fully reviewed and understood by them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).

Other Cautions



Don't clean the product with water while the power is still connected.



Don't disassemble or replace components while the power is still connected.



Never operate the system with a damaged cord or plug.



Never operate the system if it's in moist environment or its electrical components have contact with liquids.



If the control box makes unusual noise or smells, switch off the mains voltage immediately.



Disposal: The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Standby mode condition of electrical and electronic household equipment.

Mode: Standby mode

Power consumption (Watts): ≤0.5W

Time to enter the standby mode condition: This product immediately enters into standby mode after manual operation.

Mode: Networked standby mode

Power consumption (Watts): ≤2W

Time to enter the networked standby mode condition: This product immediately enters into standby mode after manual operation via WIFI.






 
 
 
 
 
 
 
 
 
Installation manual

M Motorized TV Lift X-Large Drop Down

EAN: 734023481 4558

en	Installation Manual
cz	Instalační manuál
da	Installationsmanual
de	Installationsanleitung
eo	Paigaldusjuhend
el	Οδηγίες εγκατάστασης
es	Manual de instalación
fi	Asennusohje
fr	Installation Manuel
he	הנחיה להתקנה
hu	Szerelési kézikönyv
it	Manuale di installazione
jp	取り付け説明書
kr	설치 설명서
lv	Montavimo instrukcija
lt	Užstādīšanas rokasgrāmata
nl	Installatie handleiding
no	Installasjonshåndbok
pl	Instrukcja instalacji
pt	Manual de instalação
ro	Manual de instalare
ru	Инструкция по установке
sk	Instalačný manuál
sl	Navodila za montažo
sv	Installationsmanual
tr	Montaj kılavuzu
zh	安装手册
ar	تعليمات التثبيت

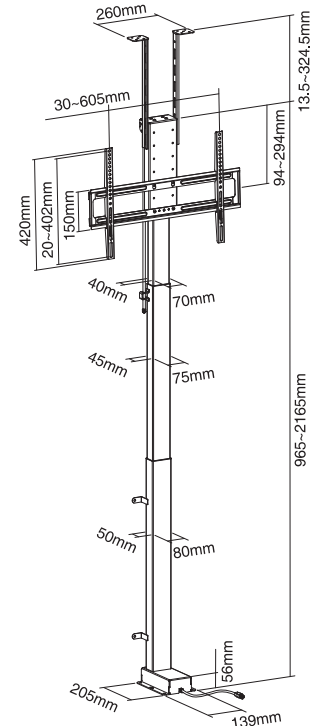

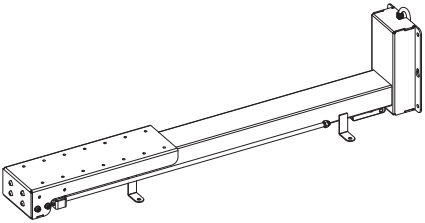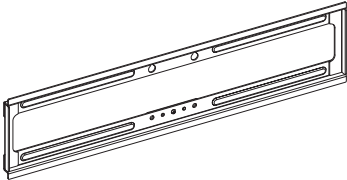 A (x1)		 B (x1)	
 C (x2)		 D (x2)	 E (x1)
 F (x1)	 G (x1)	 H (x1)	 I (x1)
 J (x1)	 K (x2)	 ST4.2x20 (x2) L	 ST5.5x16 (x20) M
 M6x8 (x8) N	 4mm (x1) O	 M6x14 (x4) M-A	 M8x16 (x4) M-B
 M6x30 (x4) M-C	 M8x35 (x4) M-D	 D8 (x4) M-E	 Ø15xØ8x5 (x4) M-F
 Ø15xØ8x15 (x4) M-G	 ST6.3x55 (x10) W-A	 Ø10x45 (x10) W-B	 D6 (x10) W-C




This TV lift supports the following 3 installation options with corresponding setups:


- Floor-standing installation with a hinged top / lid that opens upward;
- Floor-standing installation with a detachable or lift-mounted top / lid that moves with the lift;
- Ceiling-mounted installation where the TV lowers downward from above.

Note:


If you need to install the product in a cabinet, please ensure that the cabinet size matches the size of the TV.

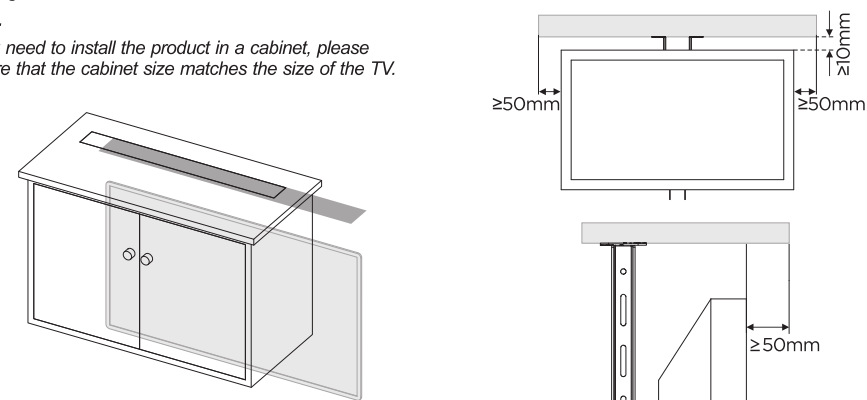




1

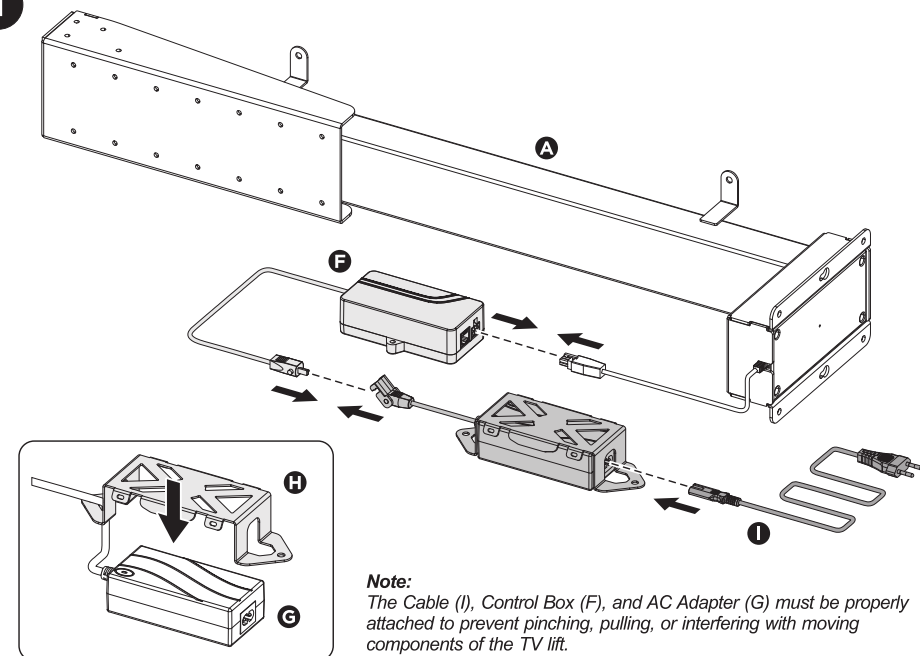


2a

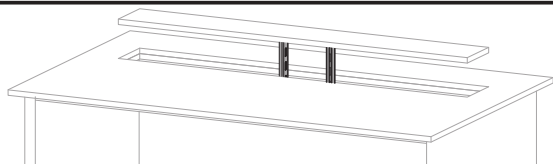



For cabinet with detachable lid

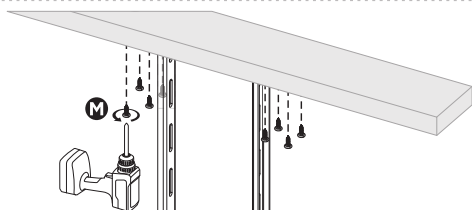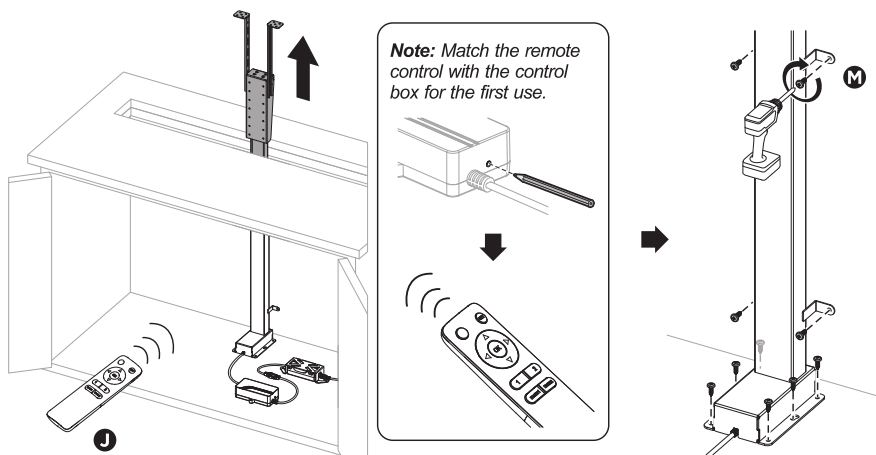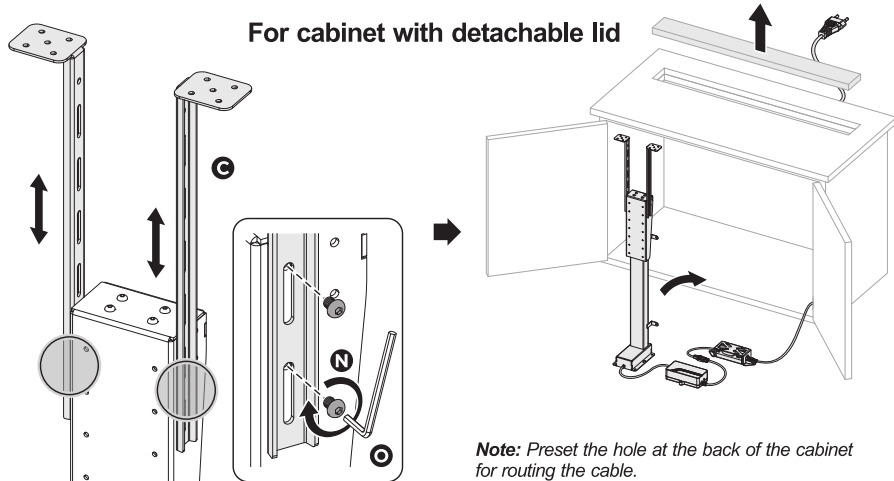

2b

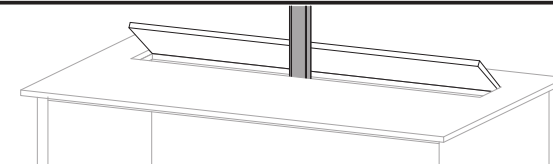








For cabinet with hinged lid

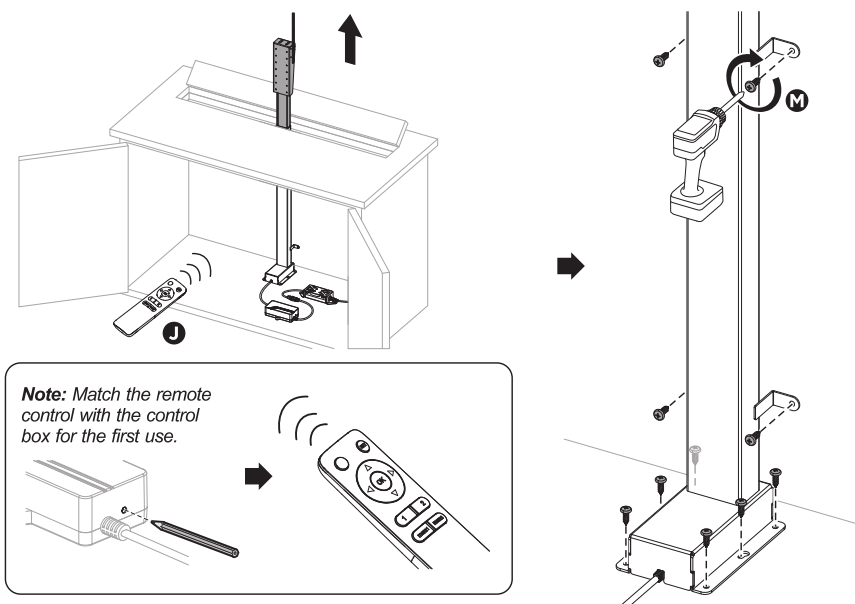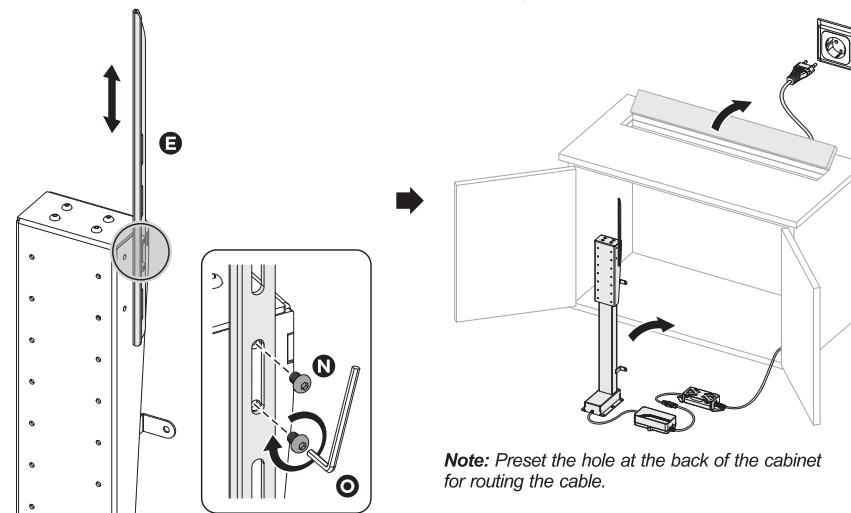

2c


For hanging cabinet with detachable lid

Note: Preset the hole at the back of the cabinet for routing the cable.

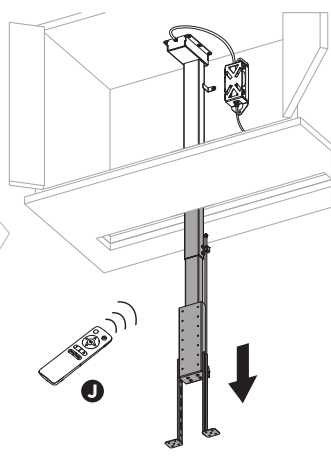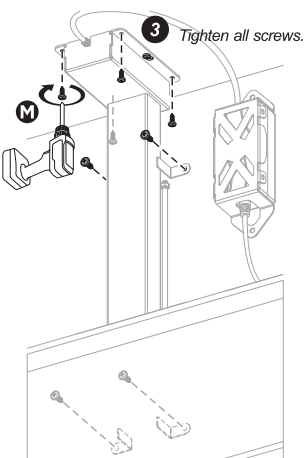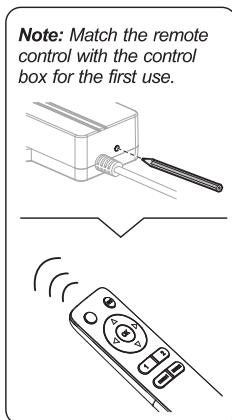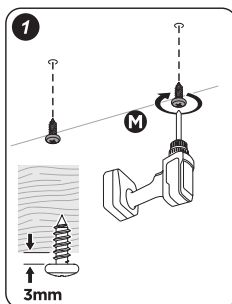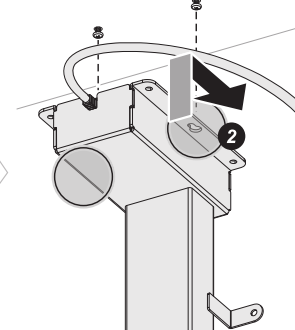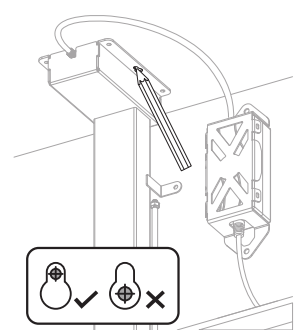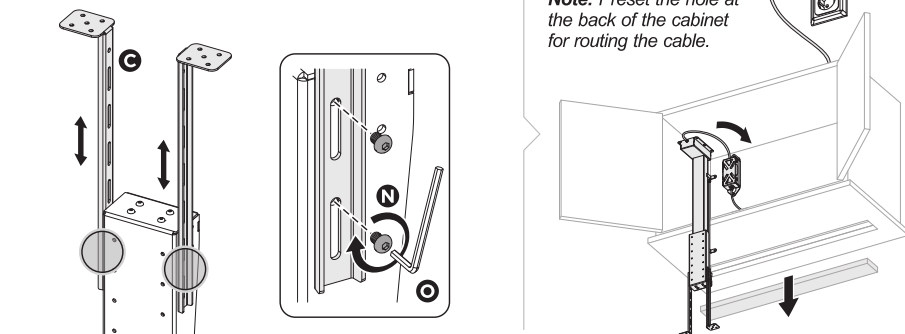

2d





For wooden wall and ceiling

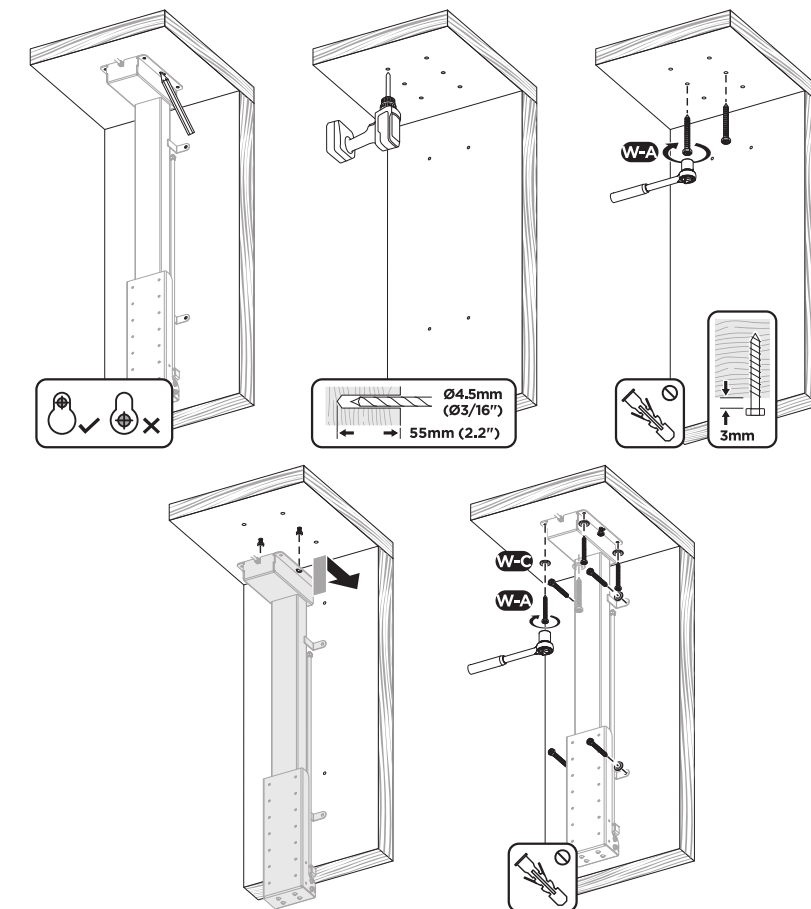


Note for 2d & 2e:
The TV lift must only be installed on load-bearing structures, such as solid wood, concrete, or an appropriately reinforced structure.

2e

  For concrete wall and ceiling


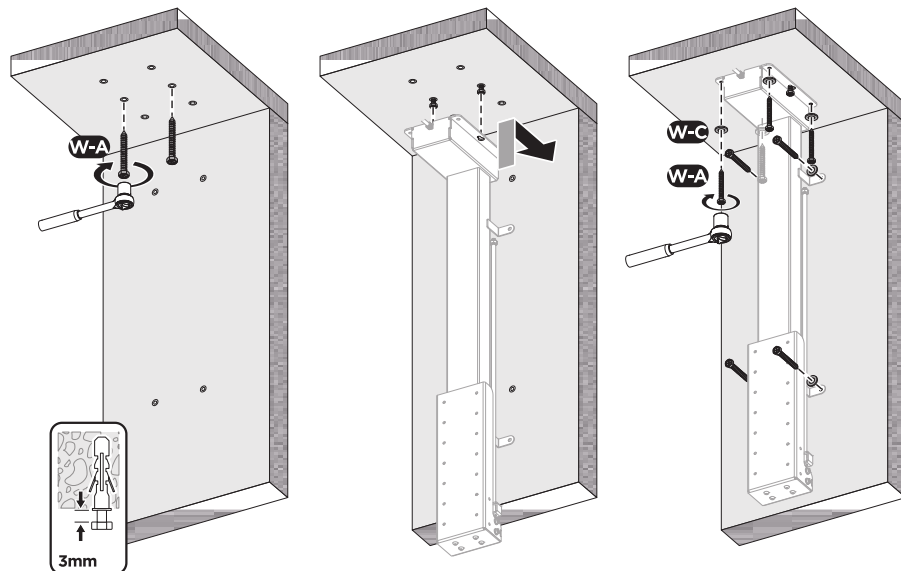

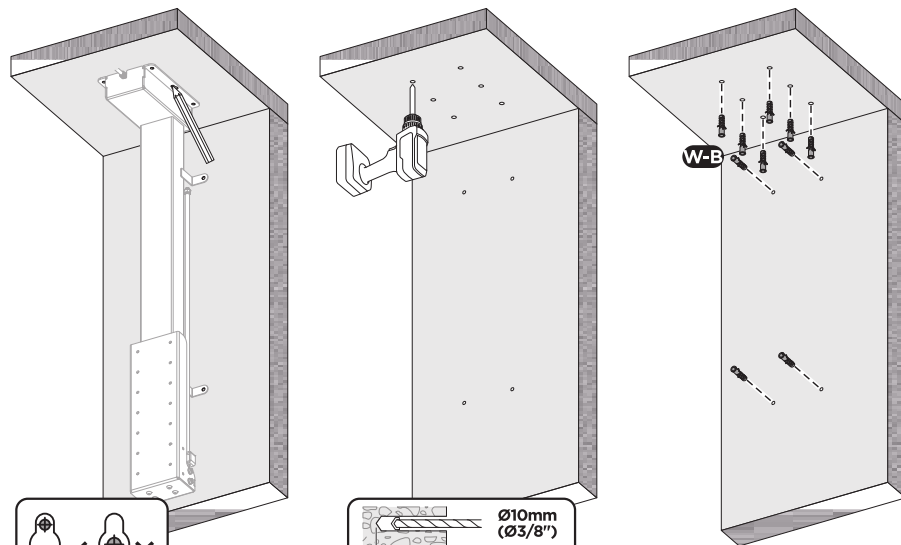


3


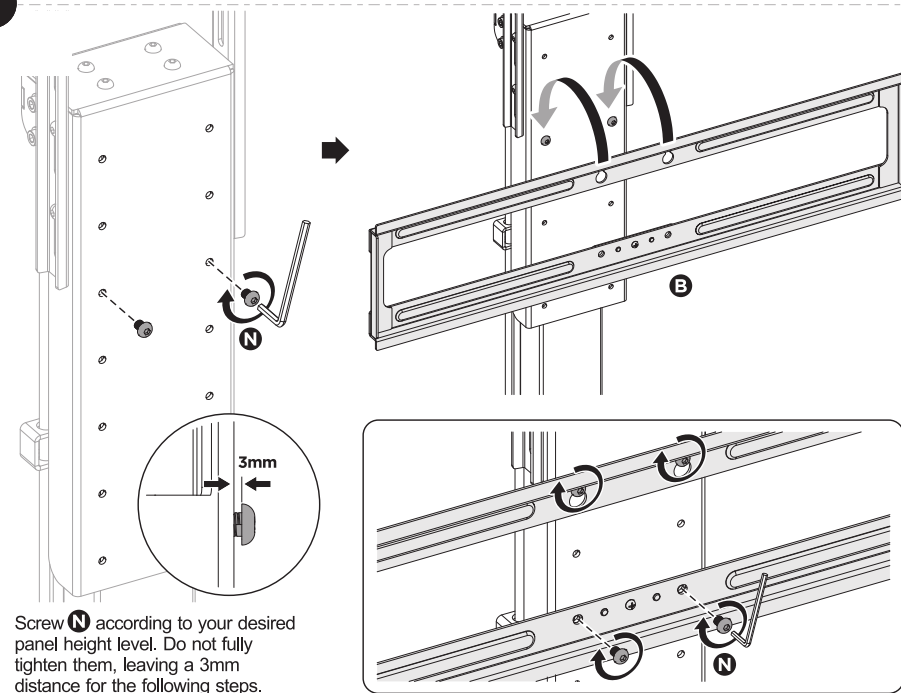


Screw **N** according to your desired panel height level. Do not fully tighten them, leaving a 3mm distance for the following steps.

4

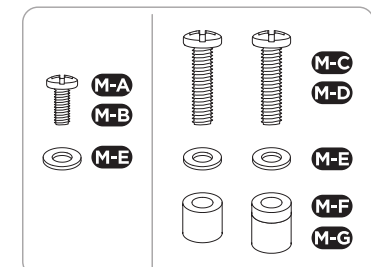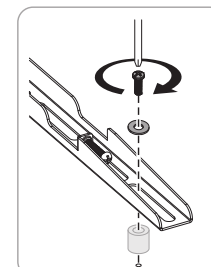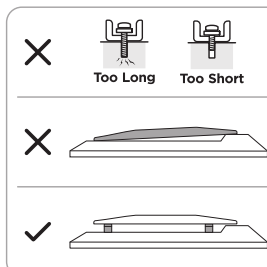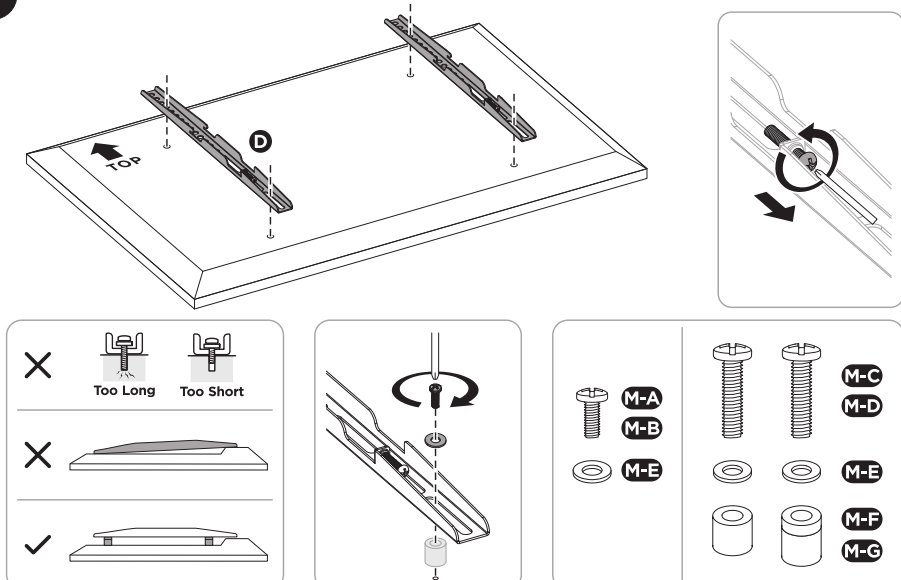


5

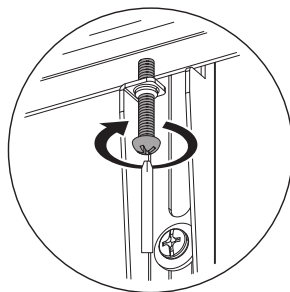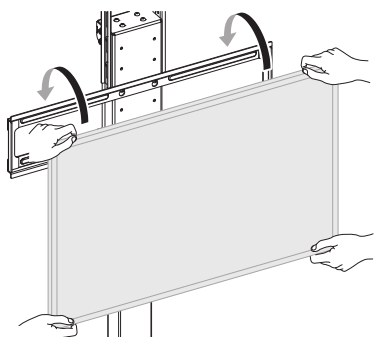


6a

For wooden surface

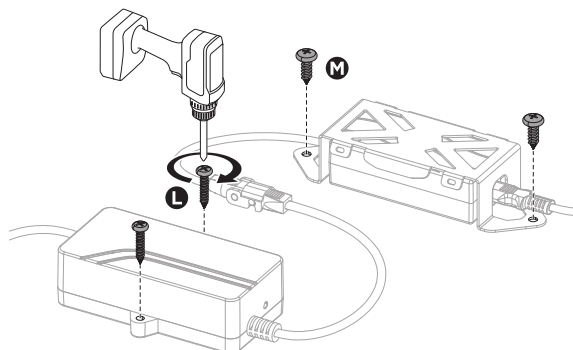


6b

For concrete surface

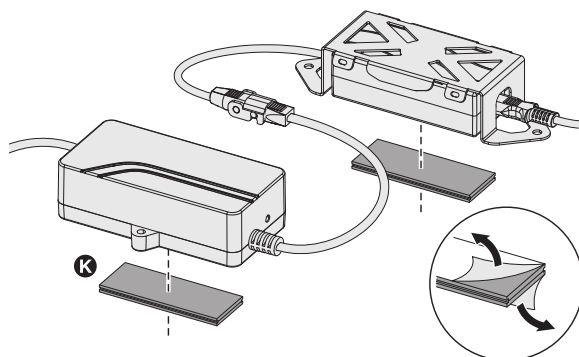

Remote Control Operation Instructions

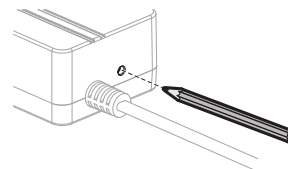

1. Pairing the Remote Control with the Control Box

Step 1: Put the Control Box into Pairing Mode

When the mount is powered on, press the small button on the control box with a thin tool as shown. The unit will emit a beep, indicating that the control box is on standby for program coding.

Step 2: Pair the Remote Control

Press the "OK" button on the remote control. You will hear repeated beeps for about 10s, indicating that the remote control is being programmed. The unit will emit one beep again when pairing is successful.

Note:

When replacing a remote control, clear the previous pairing data first. Press the small button on the control box with a beep sound, then hold it for 5s until you hear another beep. This confirms that the data-clearing process is complete. Then repeat the pairing steps above.


2. Ceiling & On-Floor System Switch

a. For Ceiling Installation

Turn off the power and then re-power the TV mount. Press and hold the "◀" button on the remote for about 10s. If you hear 2 beeps, the system has successfully switched to ceiling mode.

b. For On-Floor Installation

Repeat the same steps above. If you hear 1 beep, the system has successfully switched to on-floor mode.

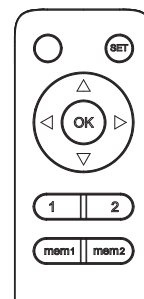

3. Basic Upward / Downward Movement

Press the "Δ" button to lift the mount. Press the "▽" button to lower the mount.

Press the "OK" button to stop movement (Tip: before operating the mount, clear all obstacles within the movement range).

4. Memory Position Settings

a. Save a Position

Press and hold the "mem1" or "mem2" button for 3s until you hear a beep. The current position is now saved.

b. Recall a Saved Position

Press the "1" or "2" button. The mount will automatically move to the position saved under "mem1" or "mem2".

5. Lowest Height Limit Setting

Press the "mem1" button 5 times. After each press, you will hear a beep. After the fifth press, you will hear two beeps. This means the current height has been saved as the lowest height limit.

The lowest height limit will be erased if the remote control is reset.

6. Default Setting

Press the "OK" button, and the mount will automatically retract to the lowest position.

To stop the movement, press the "OK" button again.

7. Reset / Calibration Mode

Press and hold the "OK" button for 3s until you hear a beep, and the mount will start moving downward. It will then move upward slightly when it reaches the lowest position and stop automatically. The system has reset successfully when the unit emits two beeps.

Note: If the product has not been used for a long time or has been re-powered, reset the system before use.

8. Connect the Mount to a New Device

Press the "mem2" button 5 times. After each press, you will hear a beep. After the fifth press, you will hear two beeps, indicating the mount has disconnected from the current paired device.

The disconnection is successful when the unit emits one beep, then follow the *Guidebook of Tuya APP Installation and Operation* to connect the mount to a new device.

9. Wi-Fi / Bluetooth Mode

a. Default Mode After Power-On

After repowering the TV mount, it will default to network standby mode. In this mode, the device is discoverable and searchable.

b. Turn Off Wi-Fi / Bluetooth Mode

Press and hold the "mem1" button for 10s. The buzzer will beep once at the 3-second mark — **Do not release the button**. Continue holding until you hear another beep at the 10-second mark. This indicates that the device has entered standby mode. The Wi-Fi / Bluetooth mode is now disabled.

c. Turn On Wi-Fi / Bluetooth Mode

Press and hold the "mem1" button for 10s. The buzzer will beep once at the 3-second mark — **Do not release the button**. Continue holding until you hear two beeps at the 10-second mark. This indicates that the device has exited standby mode and entered network standby mode. The Wi-Fi / Bluetooth mode is now enabled.

Note:

If the device fails to search the mount during connection, follow the steps above or restart the device and search for the mount again.



Troubleshooting Guide

In Front

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. Contact your place of purchase should the answer to your question or problem not be found in this Troubleshooting Guide and/or for any after service parts and sales support.

Problem	Possible Cause	Solution
Motorized TV mount does not respond to remote control	(TV mount) the system may be error	Check if the unit beeps three times after pressing the button; if so, reset the system
	(TV mount) the system may be overheating	Check if the unit beeps four times after pressing the button; if so, allow the unit to cool down and return to room temperature (about 30min)
	(TV mount) the AC / DC end of the power cord may be unplugged / disconnected from the outlet / mount	Check the connection and make sure the unit has power.
	(TV mount) Incorrect operation	Check if the unit beeps once after pressing the button; if so, follow the instructions in the manual to operate the mount properly
	(Remote control) the operating distance may be too far and not in range of the mount	Use within the acceptable range (<30 feet / 10m)
	(Remote control) batteries may be low or dead	Replace the batteries
	(Remote control) may be broken	Check if the indicator LED lights when a button is pressed
TV mount stops moving during operation and emits a long beep	A foreign object is impeding the mount from moving	Remove the object and discard it
	The TV weight exceeds the maximum weight limitation of the mounting system	Check the TV weight and make sure it is within the mount's weight limit
	The motor wire may be broken	Reset the system
TV mount is making an abnormal noise or sound	Power connections may be loose or faulty	Check all power connections and reset the system.

RJ45

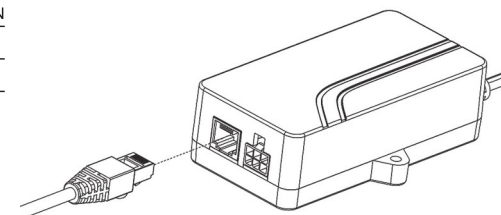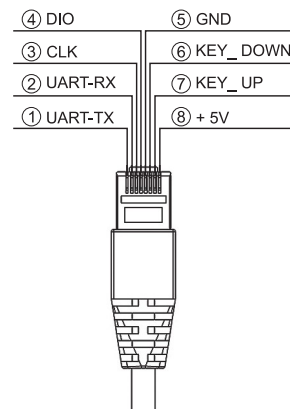

RJ45 located on the AC adapter



Warning:
The RJ45 port on the AC Adapter is not an Ethernet or network port, and is used exclusively for control connections.

NOTE: The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.



Warnings

Safety feature/ Block Overheating feature/ Wait

- The lift has a built-in safety protection function that automatically stops the movement if something blocks it and if the motor overheats (the unit beeps four times after pressing the button) **Let the TV lift cool down for 18-30 minutes** before operation again.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.



Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.