


Installation manual

M Motorized TV Lift Turn

EAN: 734023481 4916


- en Installation Manual
- cz Instalační manuál
- da Installationsmanual
- de Installationsanleitung
- eo Paigaldusjuhend
- el Οδηγίες εγκατάστασης
- es Manual de instalación
- fi Asennusohje
- fr Installation Manuel
- he הנקתה יירדם
- hu Szerelési kézikönyv
- it Manuale di installazione
- jp 取り付け説明書
- kr 설치 설명서
- lv Montavimo instrukcija
- lt Uždėdīšanas rokasgrāmata
- nl Installatie handleiding
- no Installasjonshåndbok
- pl Instrukcja instalacji
- pt Manual de instalação
- ro Manual de instalare
- ru Инструкция по установке
- sk Inštalacný manuál
- sl Navodila za montažo
- sv Installationsmanual
- tr Montaj kılavuzu
- zh 安装手册
- ar تثبيت التلفاز

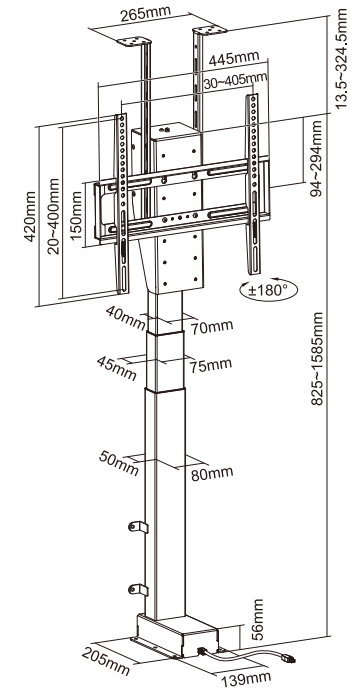

A (x1)				B (x1)			
				C (x2)			
				D (x2)			
E (x1)	F (x1)	G (x1)	H (x1)				
I (x1)	M6x8 (x8) J	ST5.5x16 (x16) K	ST4.2x20 (x2) L				
4mm (x1) M	M6x14 (x4) M-A	M8x16 (x4) M-B	M6x30 (x4) M-C				
M8x35 (x4) M-D	D8 (x4) M-E	Ø15xØ8x5 (x4) M-F	Ø15xØ8x15 (x4) M-G				

Installation Tools

(not included)

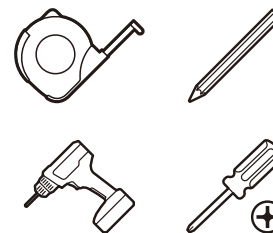



⚠ BEFORE INSTALLATION

1. Please ensure that the parameters of the device you intend to mount fully comply with the requirements of this product.

2. Ensure that there is sufficient space around the installation location to accommodate the product's normal range of motion.

Note:


If you need to install the product in a cabinet, please ensure that the cabinet size matches the size of the TV.

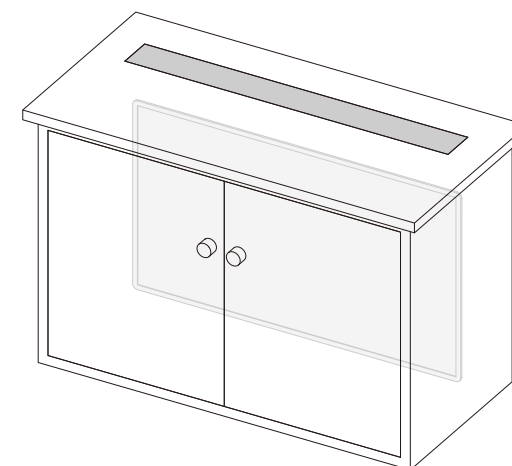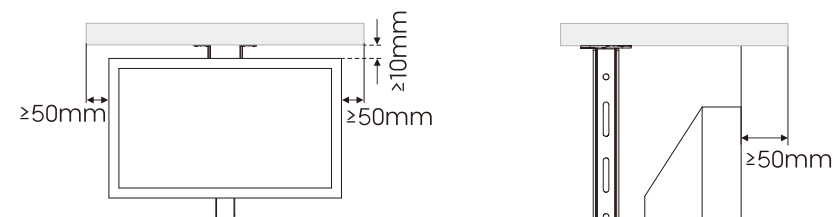


1

Note:

In order to avoid collision and wire pulls, keep the control box and all cables away from the TV lift.

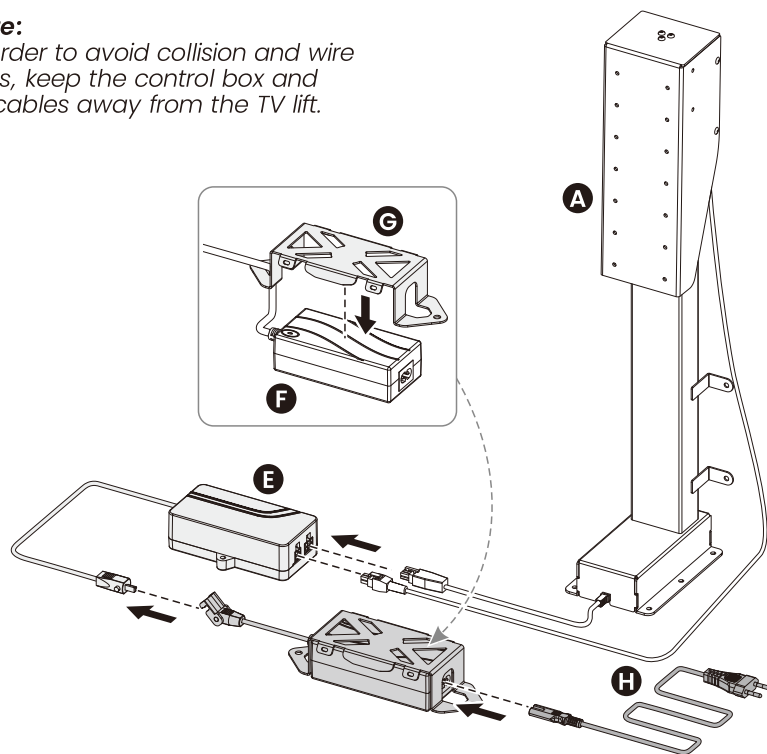

2


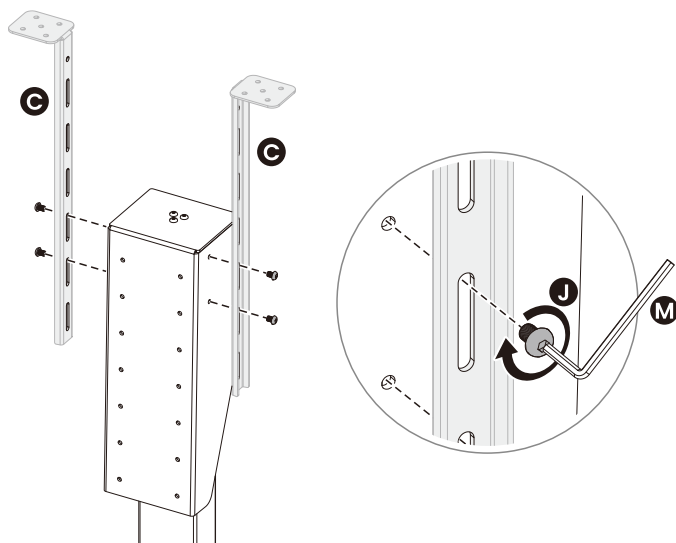


3









✓ ON-FLOOR
INSTALLATION ✗ CEILING
INSTALLATION

Note: Preset the hole at the back of the cabinet for routing the cable.

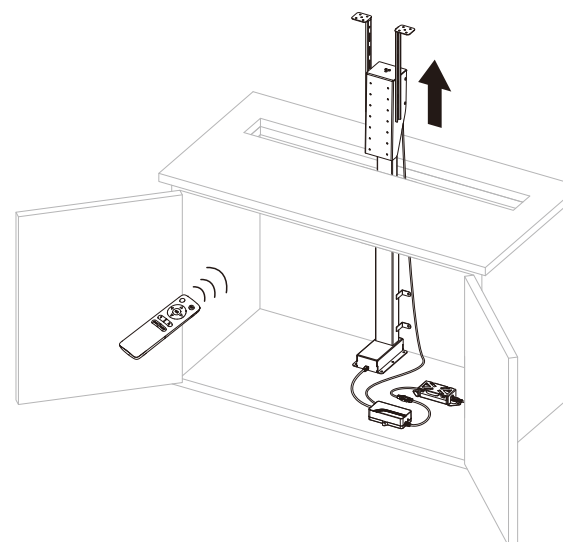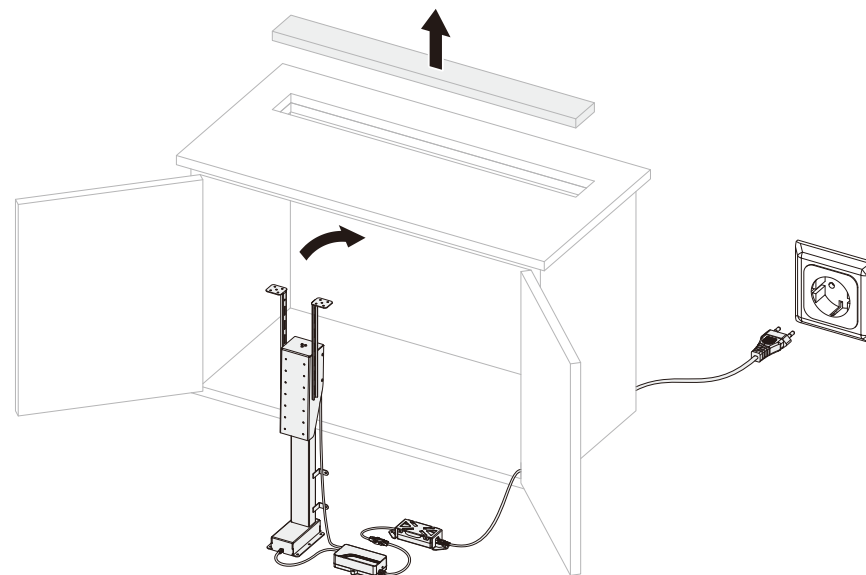


Note: Match the remote control with the control box for the first use.

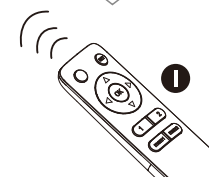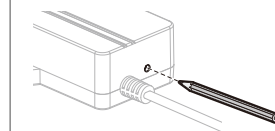

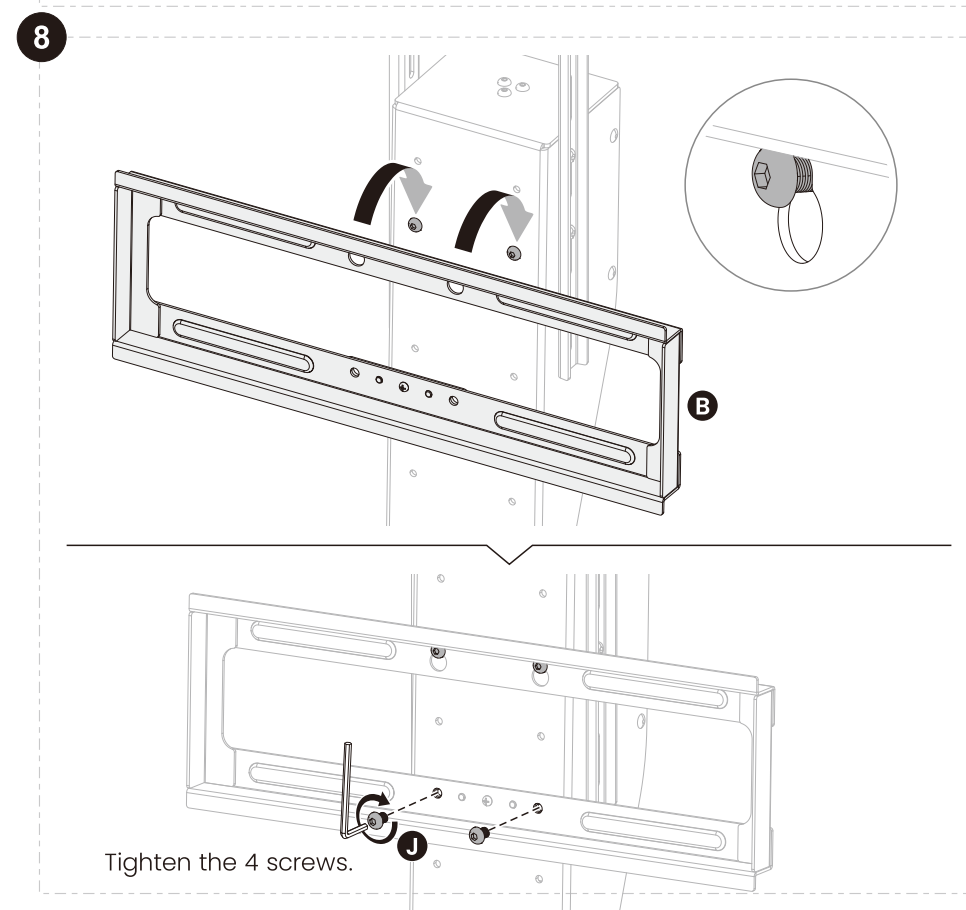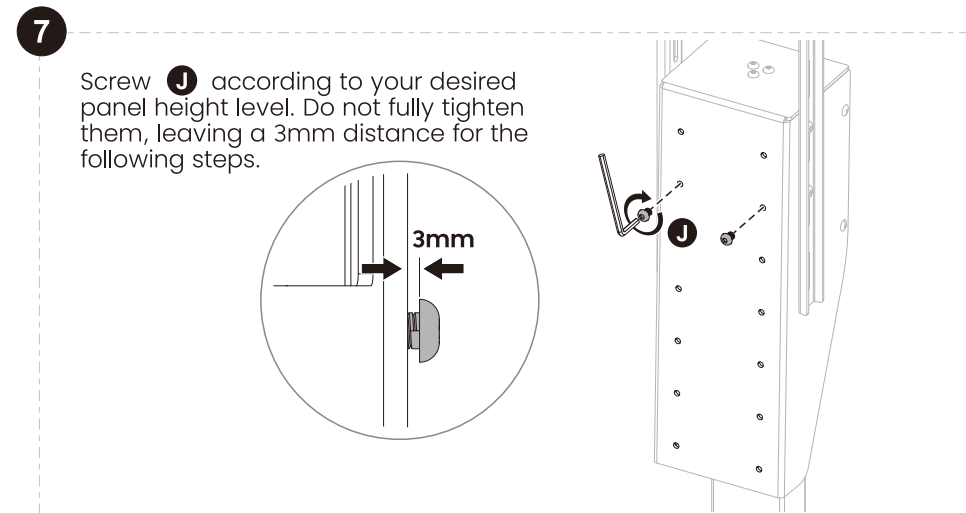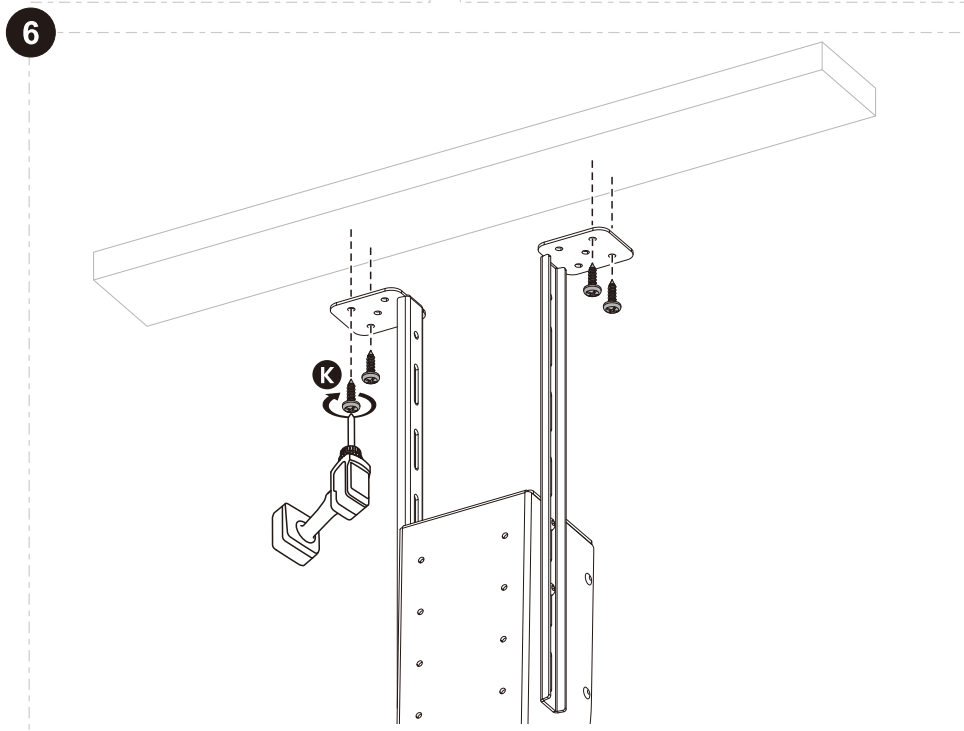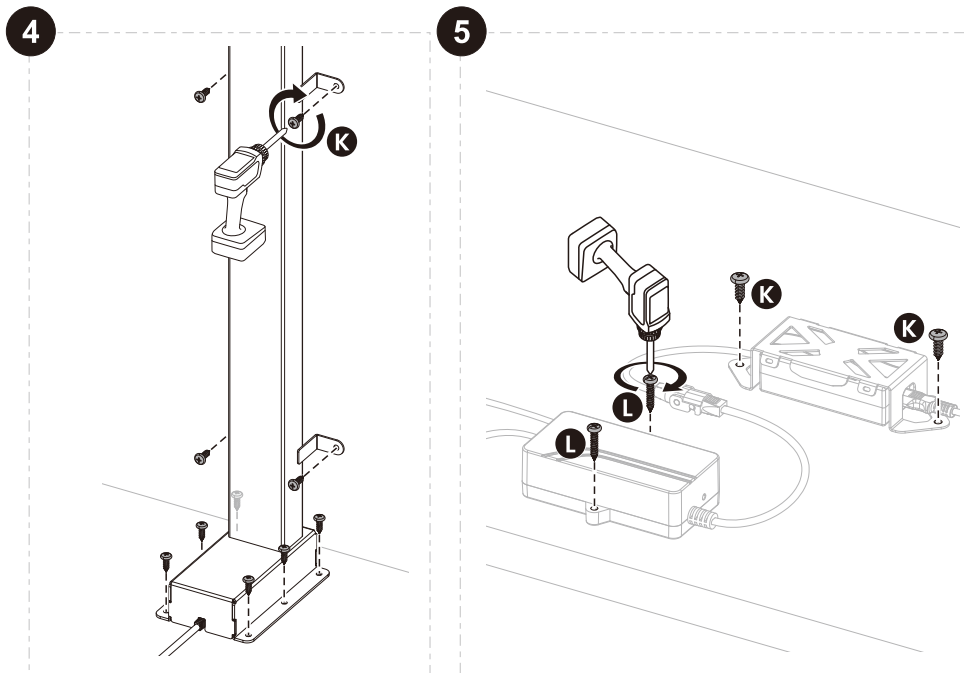

9

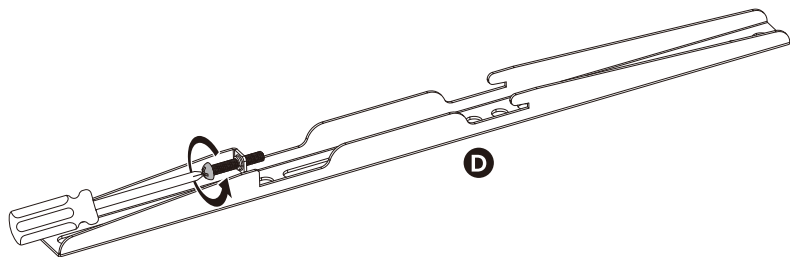

10

⚠ CAUTION


To ensure a safe installation, please pay close attention to screw selection and installation method:

Always use screws of the correct length and specification as specified in your TV's manual or advised by the manufacturer.




Screws Too Long: May damage internal components of the TV.

Screws Too Short: May fail to secure the TV properly, posing a risk of falling. When installing, **AVOID OVER-TIGHTENING** the screws to prevent stripping or damaging the mounting holes.


Note: Ensure that both mounting arms are horizontally aligned and centered on the back of the TV.

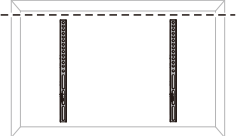


Note: If the mounting arm is obstructed during installation, use the supplied bushings to raise the mounting height.

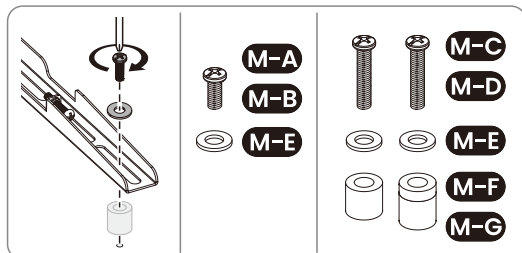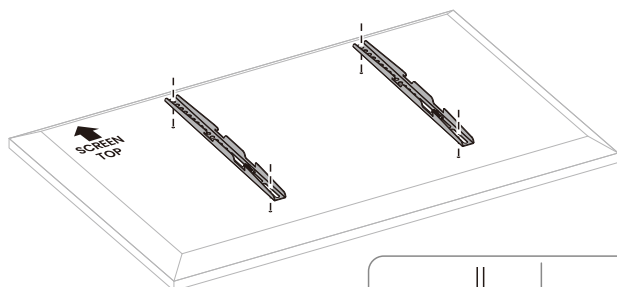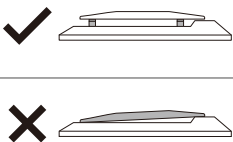

11

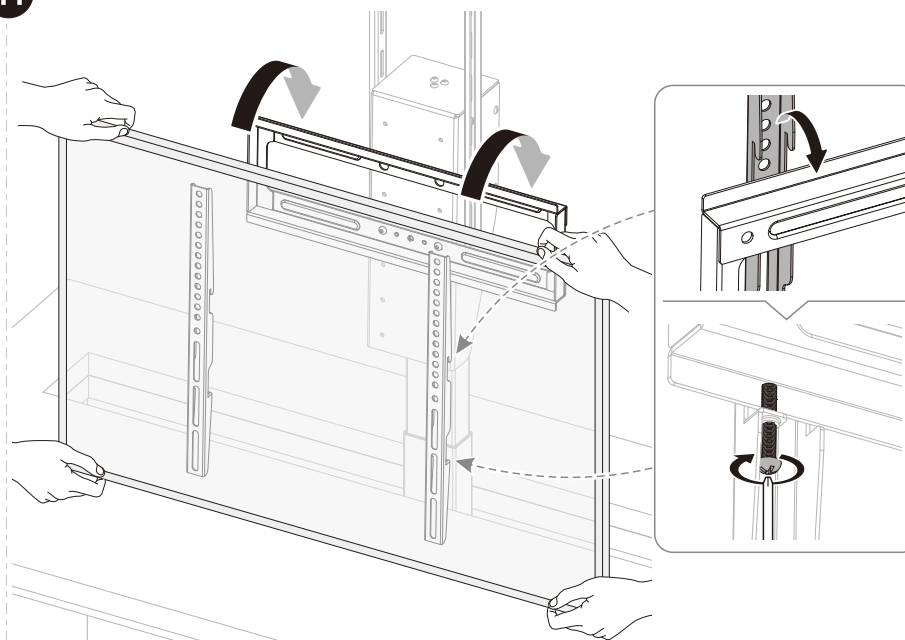

12

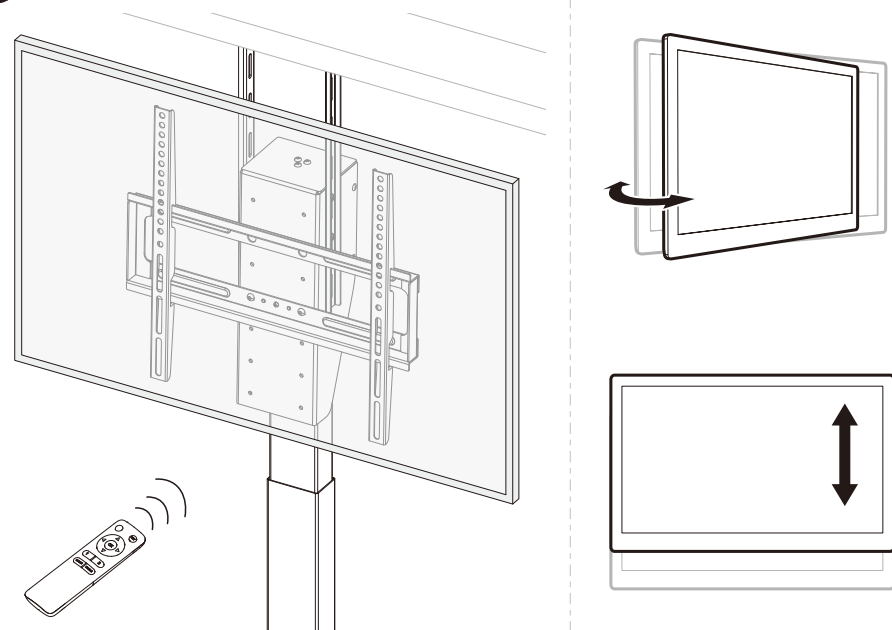

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

 
Warning

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons. Don't leave the cords or plug unorganized in order to prevent tripping hazards. Any attempts to reconstruct the construction aren't allowed.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.

Remote Control Operation Instructions



A. Coding of Remote Control and Control Box

STEP1: When the mount is powered on, press the small button on the control box with a thin tool as shown. The unit will emit a beep, indicating that the control box is on standby for program coding.

STEP2: Press the "  " button on the remote control, and you will hear repeated beeps for approximate 10 seconds indicating that the remote control is being programmed. The unit will emit a beep again indicating success.

Note: Clear up the historical data when replacing a new remote control to pair. Press the small button on the control box with hearing a beep, and hold for 5 seconds to confirm the data-cleaning process is completed until you hear a beep again.

B. Button Functions

1.Lowest Swiveling Position Setting

- To ensure safe use, the TV can only swivel when it is positioned above the cabinet. The default lowest swiveling position is set 10cm below the mount's highest position.
- To customize the lowest swiveling position: Lift the TV to the desired position, then press and hold Button "  " for 10 seconds. Two beeps will indicate successful setup.

2.Swivel the TV

- The TV can swivel when it is positioned above the lowest swiveling point. Press and hold the "  " button to swivel the TV to the left; press and hold the "  " button to swivel the TV to the right.



Note: The remote control is powered by two AAA batteries (not included).

3.Height Adjustment

- Press and hold the "  " button to lift the mount; press and hold the "  " button to lower the mount.
- When the mount is not swiveled to the center position, it can only be lowered to the lowest swiveling position. You must first swivel the mount back to the center position to continue lowering it.

4.One-Touch Retraction

- The one-touch retraction function is only available when the mount is in the center position. Make sure the mount is swiveled back to the center position before using this function.
- Press the "  " button, and the mount will automatically descend to its lowest height. You can press the "  " button again to stop it during its movement.

5.Memory Setting

- A memory position can only be saved when the mount is positioned above the lowest swiveling point.
- Press and hold the "  " or "  " button for 3 seconds. A single beep will confirm that the memory position has been successfully saved.

6.Memory Recalling

- Press Button "  " or Button "  " , and the mount will automatically move to the corresponding saved position.
- The mount will first adjust its height, then swivel.

7.Lowest Height Limit Setting

Press the "  " button five times, after each press you will hear a beep and at the fifth press two beeps. This indicates the current height is now saved as the lowest height setting. The lowest height limit will be erased should the TV mount be reset.

8.Reset Mode

To ensure safe operation, be sure to rotate the mount panel to the center position first—it will automatically stop and beep to indicate when centered. Disconnect the power adapter for about 10 seconds and then reconnect the power. Press and hold the "  " button for 3 seconds within 1 minute to enter reset mode. If you hear a single beep, the mount will automatically reset. If you hear two beeps, use the "  " or "  " buttons on the remote to fine-tune the panel to the center position, then the mount will automatically reset. The mount will first move downward automatically. Then the mount will move upwards a little bit when reaching the lowest position and automatically come to a stop. The system resets successfully when the unit emits two beeps.

9.Connect the Mount to a New Device

Press the "  " button five times, after each press you will hear a beep and at the fifth press two beeps, which indicates the mount is disconnecting from the current paired device. The disconnection is successful when the unit emits one beep. Then follow the *Guidebook of Tuya App Installation and Operation* to connect the mount to a new device.

10.Turn Off and Turn On the Wi-Fi/Bluetooth Function

(Note: After repowering the TV mount, the Wi-Fi/Bluetooth function will be turned on by default, making it discoverable.)

•Turn Off the Wi-Fi/Bluetooth Function:

Press and hold the "  " button for 10 seconds. The buzzer will beep once at the 3-second mark - **Do not release the button.** Continue holding until you hear another beep at the 10-second mark, indicating the Wi-Fi/Bluetooth Function has been turned off.

•Turn On the Wi-Fi/Bluetooth Function:

Press and hold the "  " button for 10 seconds. The buzzer will beep once at the 3-second mark - **Do not release the button.** Continue holding until you hear two beeps at the 10-second mark, indicating the Wi-Fi/Bluetooth Function has been turned on.

Note: If the device is failed to search the mount when connecting, follow the above steps or restart the device to re-search the mount.

Troubleshooting Guide

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. Contact your place of purchase should the answer to your question or problem not be found in this Troubleshooting Guide and/or for any after service parts and sales support.

1. Possible reasons motorized mount does not respond to remote control.

A. TV Mount

- The system may be error. Check if the unit beeps three times after pressing the button. If so, please reset the system.
- The system may be overheating. Check if the unit beeps four times after pressing the button. If so, allow the unit to cool down and return to room temperature. (about 30 minutes)
- The AC/DC end of the power cord may be unplugged/disconnect from the outlet/mount. Check the connection to ensure the unit has power.
- Incorrect operation. Check if the unit beeps once after pressing the button. If so, please follow the instructions found in the manual to properly operate the mount.

B. Remote Control

- The remote control operating distance may be too far and not in range of the mount. Acceptable range should be less than 30 feet (10m).
- The batteries in the remote control may be low or dead. Replace the batteries.
- The remote control may be broken. Check to see if the indicator LED found on the remote lights when a button is pressed.

2. The TV mount stops moving during operation and emits a long beep.

- Check to see if a foreign object is impeding the mount from moving. If so, remove the object and discard.
- The weight of TV may exceed the maximum weight limitation of the mounting system.
- The motor wire may be broken. Reset the system.

3. The TV mount is making an abnormal noise or sound.

- Check all power connections and reset the system.



IMPORTANT:

The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully. Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty. Should you ever have any questions or feel you require help please contact your place of purchase for assistance.

Instructions of Safety and Warnings

- Make sure that the mounting surface is strong enough to handle mounted product and equipment.
- **DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.**
- **NEVER RESET BEFORE THE MOUNT PANEL IS CENTERED! DAMAGE OR INJURY MAY OCCUR.**
- Always be sure to have someone assist you or a mechanical device to lift and position heavy products safely.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction or alterations of the given power unit and control box aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless the product is intended for their use and all instructions and manuals are fully reviewed and understood by them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).

Other Cautions



Don't clean the product with water while the power is still connected.



Don't disassemble or replace components while the power is still connected.



Never operate the system with a damaged cord or plug.



Never operate the system if it's in moist environment or its electrical components have contact with liquids.



If the control box makes unusual noise or smells, switch off the mains voltage immediately.



Disposal: The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Standby mode condition of electrical and electronic household equipment.

Mode: Standby mode **Power consumption (Watts): ≤0.5W**

The period after which the equipment automatically enters standby mode is 18 minutes.

Mode: Networked standby mode **Power consumption (Watts): ≤2W**

The period after which the equipment automatically enters networked standby mode is 18 minutes.