


Remote Control Operation Instructions

WARNING

- Please don't use the product outside the temperature range: -5°C ~ 40°C.
- Please stop for 4 minutes when continually operating for 30 seconds.

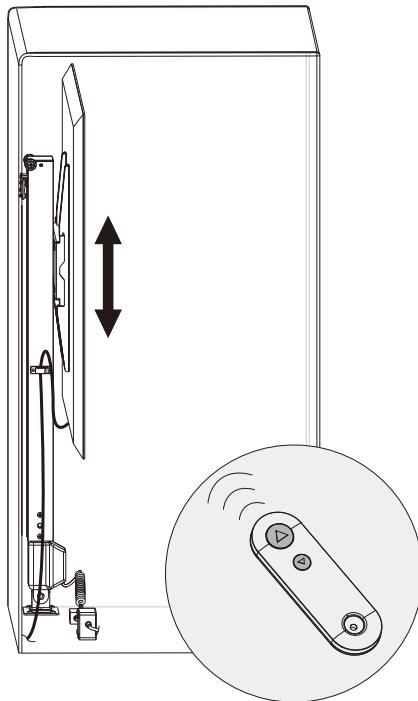

UPWARD MOVEMENT

Press the UP button to lift the TV, it can be stopped by pressing DOWN button during the process.

DOWNDOWN MOVEMENT

Press the DOWN button to lower the TV, it can be stopped by pressing UP button during the process.

Note: If the mount stopped at the HIGHEST/LOWEST position for less than 5 minutes, please press the DOWN/UP button twice to activate the height adjustment mode. Otherwise, please press once to activate.




Installation manual


M Motorized TV Lift Medium

EAN: 7350073735976


en	Installation Manual
ar	الدليل التثبيت
cz	Instalační manuál
de	Installationsmanual
de	Installationsanleitung
es	Paigaldusjuhend
el	Οδηγίες εγκατάστασης
es	Manual de instalación
fi	Asennusohje
fr	Installation Manuel
he	הוראות התאמה
hu	Szerelési kézikönyv
it	Manuale di installazione
ja	取り付け説明書
kr	설치 설명서
lt	Montavimo instrukcija
lv	Uzstādīšanas rokasgrāmata
nl	Installatie handleiding
no	Installasjonshåndbok
pl	Instrukcja instalacji
pt	Manual de instalação
ro	Manual de instalare
ru	Инструкция по установке
sk	Inštalačný manuál
sl	Navodila za montažo
sv	Installationsmanual
tr	Montaj kılavuzu
zh	安装手册

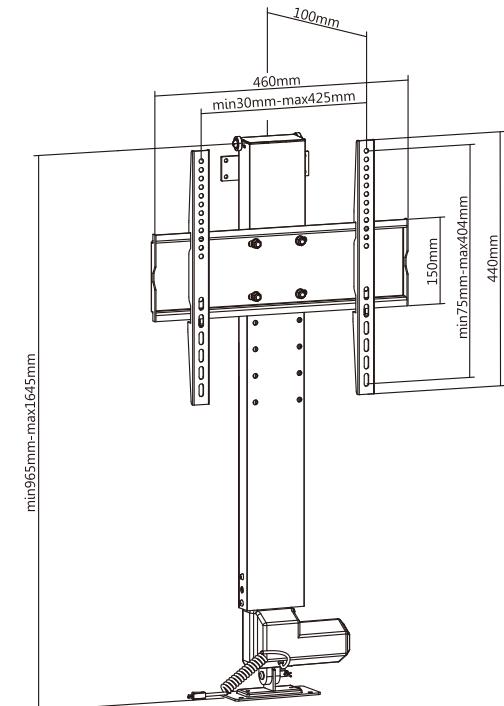


2

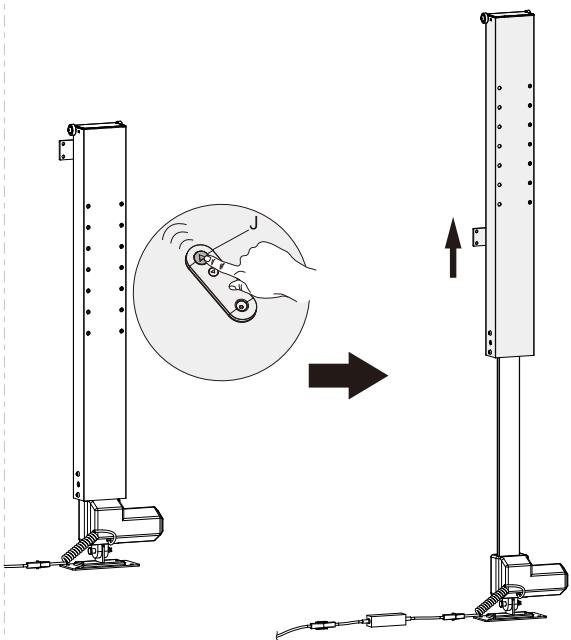


3

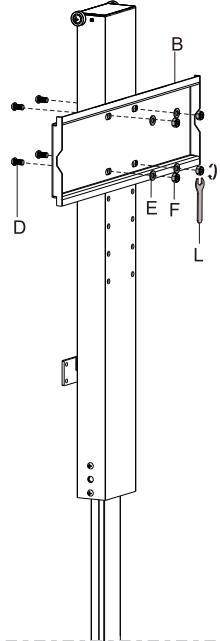


5

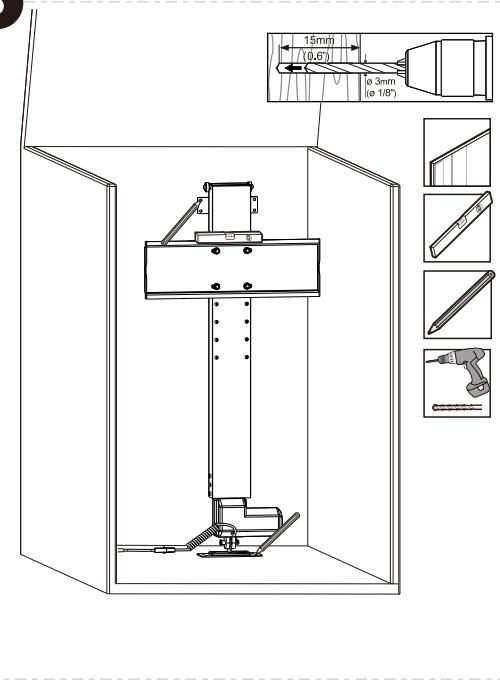

6-1

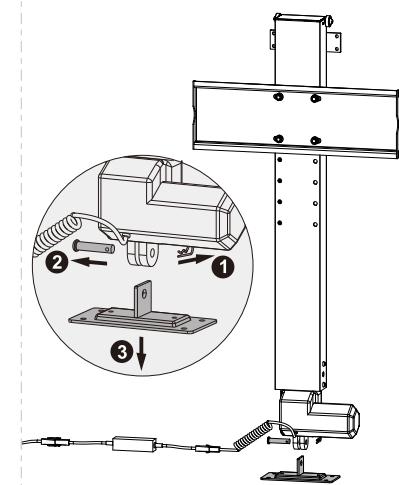


4

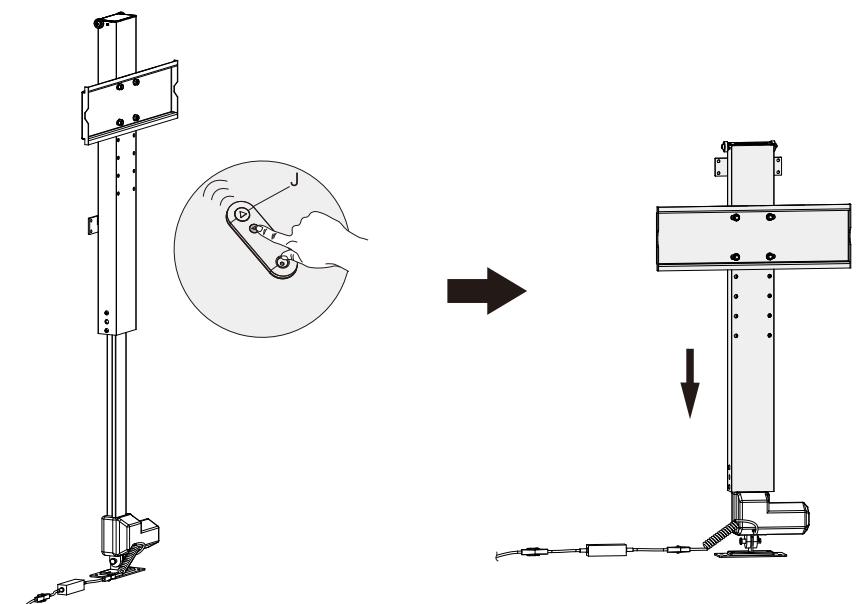


6-2




6-3

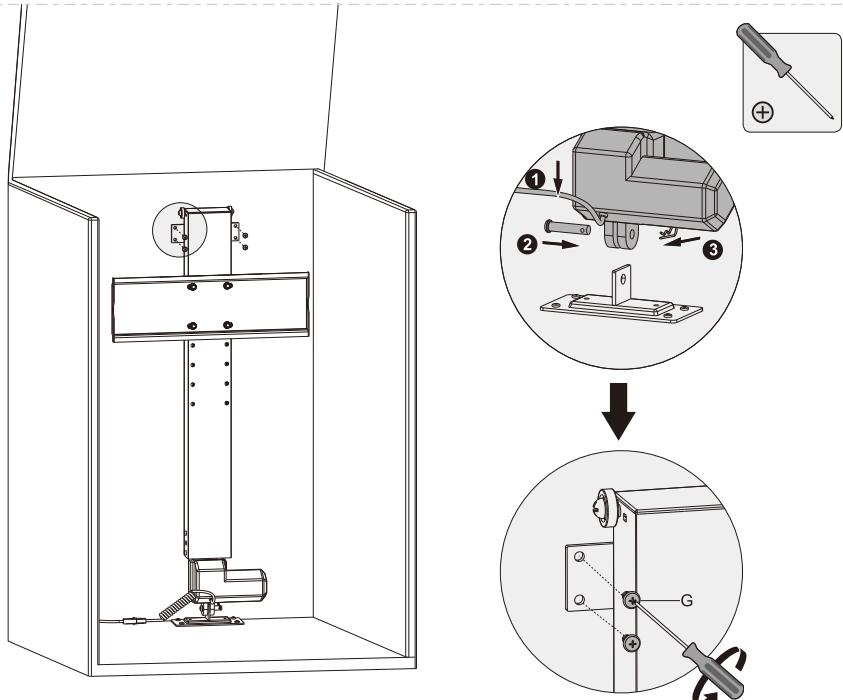


7b

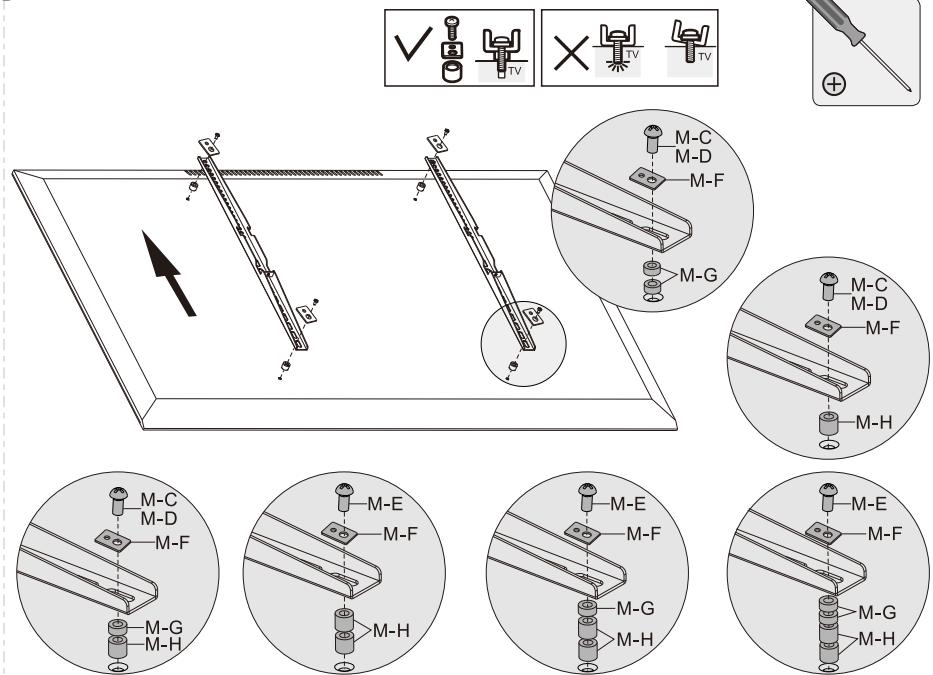

7a

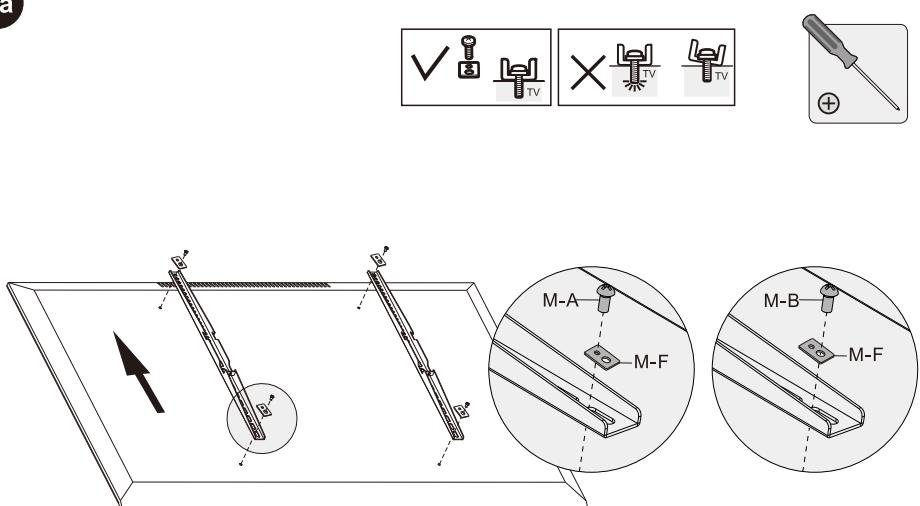

8-1

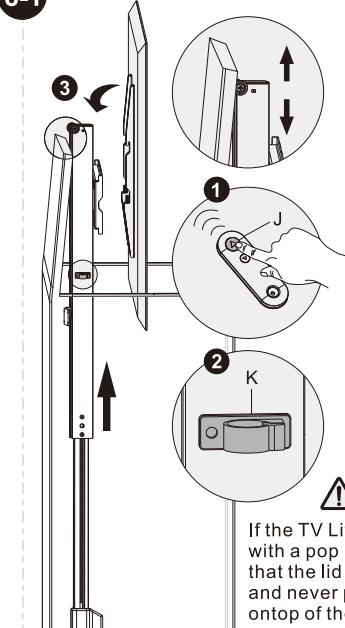

8-2

