 
 
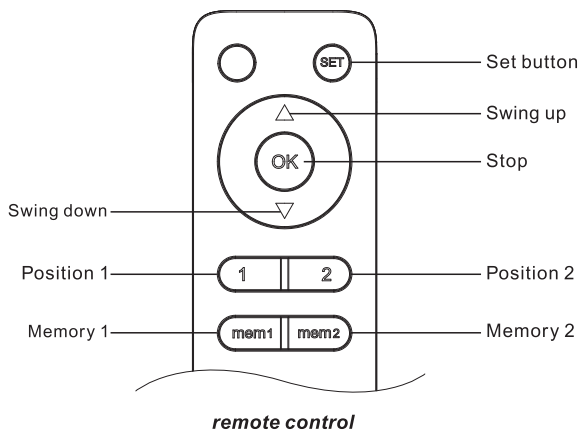 
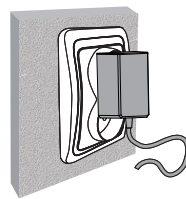 


Factory Reset instruction

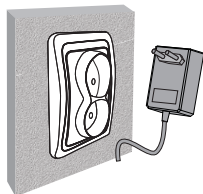

1

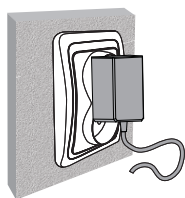

Unplug and replug first

2

Reset Mode

If the TV mount can't be adjusted to the highest position (0 degree against the ceiling) or the lowest position (max. tilting position), unplug and re-plug the power. Then press and hold the "OK" button for 5 seconds. Mount will retract to the highest position, that means the system has been successfully reset.

Reset the Tilt Range for Pitched Ceiling

The TV mount is 0°~75° adjustable by default. Please reset the tilt range if you use as a pitched ceiling TV mount.

Prepare: Reset the system (see Instructions on A. Button Functions - 4. Reset Mode).

Step 1: Press "▽", "△" and "OK" buttons and adjust to the proper position.

Step 2: Press and hold the "mem1" button until the unit beeps once. Repeat this step 5 times. The unit will emit a long beep to indicate success.

Note: Step 1, 2 should be finished in 2 minutes, or it will fail to reset.



Please keep the power on during the resetting.