

 
Abnormal Operation:

The TV Mount Can't Be Adjusted To 0° Or 75°





Please reset the system by following the instruction manual.
(Page 9)

Can't Operate

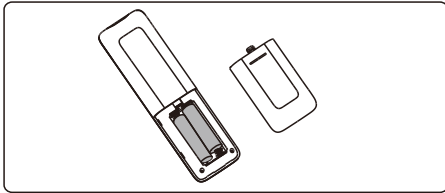

Please replace the batteries.

  Please check if the power adaptor is properly connected to the product. If so, please turn the power on. If there is no buzzer sound or red light power indication, please check if the power adaptor works properly.

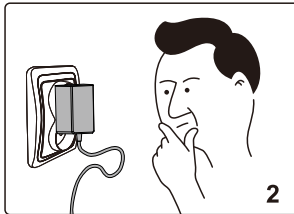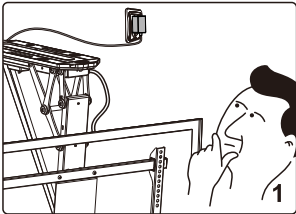

1

 


Installation manual

M Motorized Ceiling Mount 32"-70"

EAN: 7350073737888

- en Installation Manual
- ar تثبيت التلفاز
- cz Instalační manuál
- de Installationsmanual
- de Installationsanleitung
- es Paigaldusjuhend
- el Οδηγίες εγκατάστασης
- es Manual de instalación
- fi Asennusohje
- fr Installation Manuel
- he הנקתה ירידה
- hu Szerelési kézikönyv
- fr Manuale di installazione
- jp 取り付け説明書
- kr 설치 설명서
- pl Montavimo instrukcija
- pl Ustādišanas rokasgrāmata
- nl Installatie handleiding
- no Installasjonshåndbok
- pl Instrukcja instalacji
- pt Manual de instalação
- ro Manual de instalare
- ru Инструкция по установке
- sk Inštaláčny manuál
- sl Navodila za montažo
- sv Installationsmanual
- tr Montaj kılavuzu
- zh 安装手册

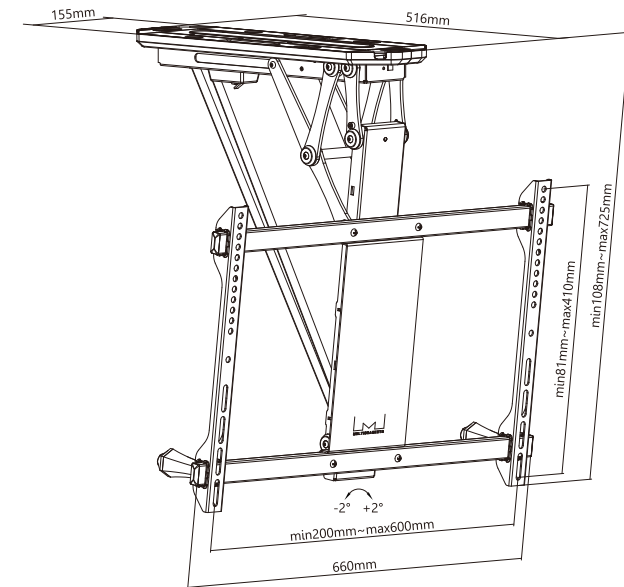

en **IMPORTANT!**
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value. If screws are included they may not be suitable for the material of your wall, ceiling or floor. Replace the screws with suitable ones if needed. In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

ar **أهمية!**
إن شاشة البلازما أو LCD أو التلفاز أو جهاز عرض أو شاشة جداري أو حارس أو أي أجهزة أخرى ذات قيمة عالية قد تكون عرضة للتلف. إذا كانت مسامير المرفق متضمنة في المنتج، فقد لا تكون مناسبة للمواد التي ستعلق عليها المنتج. في حالة عدم التأكد من أي جانب من جوانب تركيب هذا المنتج، يرجى استشارة أخصائي.

cz **DŮLEŽITÉ!**
Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je vysoké hodnotné. Pokud jsou součástí balení produktu šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlaze v místě instalace. V případě, že nebudou přibalené šrouby vyhovovat, vyměňte je. Pokud budete mít při montáži tohoto produktu potíže, obraťte se na zkušeného odborníka.

da **VIGTIGT!**
Din plasmaskærm, LCD-skærm, tv, projektor, projektoriskærm eller andet HiFi-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt. Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

nl **BELANGRIJK!**
Uw Plasma, LCD TV, Projector, Projector scherm of andere HiFi-apparatuur vertegenwoordigt een aanzienlijke waarde. Indien uw productverpakking schroeven bevat, controleer dan of deze geschikt zijn voor uw toewijding. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Twijfelt u, raadpleeg dan een professional.

eo **TÄHTIS!**
Teie teie projektor, projektori ekrän vai muu HiFi seade on suure väärtusega. Kui kinnitustorn komplektis on kaetud kaetud, siis ei pruugi need sobida Teie seina, lavi või põrand materjaliga. Vajadusel vahetage kruvid sobivate vastu. Kui Te ei ole seadme paigaldamise detailides kindel, siis konsulteerige spetsialistiga.

de **ACHTUNG!**
Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellen einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material Ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben. Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachmann.

el **ΣΗΜΑΝΤΙΚΟ!**
Οι τηλεόρατες Plasma, LCD, ο κανονικός τηλεοράτης, ο οθόνες προβολέων ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία. Αν περιλαμβάνονται βίδες, τότε να μην είναι κατάλληλες για το υλικό του τοίχου, του ταβανιού ή του πάτωματος σας. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο. Στην περίπτωση που δεν είστε σίγουροι για είδος ή μέγεθος εργαλείου με την προεργασμένη οπή του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.

es **IMPORTANTE!**
Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso. Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

fi **TÄRKEÄÄ!**
Plasma- tai nestekidenäyttöjen, televisioiden, projektorien ja niiden valkokankaisten sekä muiden hiifilaitteiden arvo on huomattava. Laiteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla. Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämissään liittyvästä seikasta, ota yhteys asiantuntijaan.

fr **IMPORTANT!**
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel HiFi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées. Si vous avez des doutes quant au montage de ce produit, veuillez consulter un professionnel.

hu **FONTOSI!**
Plazma, LCD TV-c, projektorok, vetítőképernyő vagy egyéb műszaki berendezések tekintélyes értékűek lehetnek. Ha a csavarokat tartalmazza, akkor sem biztos, hogy alkalmas a berendezés, hogy falra, mennyezetre, vagy a padlóhoz rögzíts. Cserélje ki a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beépítésével kapcsolatban, forduljon szakemberhez.

it **IMPORTANTE!**
I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità. Nel caso riscontriate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

jp **重要!**
あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のハイファイ機器がかなりの値を表します。ネジが含まれている場合、彼らはあなたの壁、天井や床の材質に適していないかもしれませんが。必要に応じて適切なものでネジを取り付けます。ケースでは、本製品の取り付けのいずれかの側面に關して不明な点があるハの相談してください。












WARRANTY CARD MULTIBRACKETS.COM





MULTIBRACKETS™ Limited Warranty Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product. All Multibrackets products are covered by a limited product warranty. •FIVE (5) years for metal video monitor mounts; all racks and non-electrical rack accessories •TWO (2) years for gasfills and sit-stand workstations •ONE (1) year for all motorized and/or automated products, plastic speaker mounts, all speaker stands, all furniture, all wood (MDF) accessories	For warranty claims made during the Warranty Period, Multi-Brackets will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will wait your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges. This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any	outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages. Multibrackets™ Stockholm Sweden 2016. www.multibrackets.com
---	---	--

The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: www.multibrackets.com




Warning!
Always check the depth of the holes before starting an installation.
تحذير
الرجاء دائما عمق التقرب قبل أن تبدأ في عملية التركيب.
ADVARSELI
Kontroller alltid hullernes dybde, før du går i gang med en installasjon.
WARNING!
Vor Beginn das Einbaus immer die Tiefe der Bohrungen überprüfen.
ΠΡΟΒΛΕΠΟΜΕΝΗ!
Ελέγξτε πάντα το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.
WARNING!
Always check the depth of the holes before starting an installation.
AVISO!
Controle siempre la profundidad de los agujeros antes de iniciar una instalación.
VAROITUS!
Se on parauksessa estele includulos eles podem náo ser adequados para o material da sua parede, teto ou chão.
ATTENTION!
Vérifiez toujours la profondeur des trous avant de commencer l'installation.
ATTENZIONE!
Verificare sempre la profondità dei fori prima dell'installazione.
Varování!
Před zahájením instalace vždy zkontrolujte potřebnou hloubku všech otvorů.
ADVARSELI
Sjekk alltid hvor dype hullene er før du begynner å montere.
OSTRZEŻENIE!
Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.
ПРЕДУПРЕЖДЕНИЕ!
Перед установкой всегда проверяйте глубину отверстий.
VARNING!
Kontrollera alltid hålens djup innan en installation påbörjas.
UYARI!
Montaja başlamadan önce delma deliklerin derinliğini kontrol edin.
警告
请始终在安装前检查孔洞的深度。

 motorized wall mount (x1) A	 back plate (x1) B	 ceiling template (x1) C		
 decorative cover (x4) D	 TV arm bracket (x2) E	 bracket rails (x2) F		
 power supply (x1) G	 remote control (x1) H	 cable tie (x4) I	 leveling knob (x2) J	 the set screw (x4) K
 round head phillips screw (x4) L	 washer (x4) M	 hexagon nut (x4) N	 hexagon socket head screw (x4) O	 allen key (x1) P
 M5x14 (x4) M-A	 M6x14 (x4) M-B	 M6x30 (x4) M-C	 M8x30 (x4) M-D	
 M8x50 (x4) M-E	 washers (x4) M-F	 small spacers (x8) M-G	 big spacers (x8) M-H	
 ST6.3x55 (x6) W-A	 concrete anchor (x6) W-B	 D6 washer (x4) W-C		

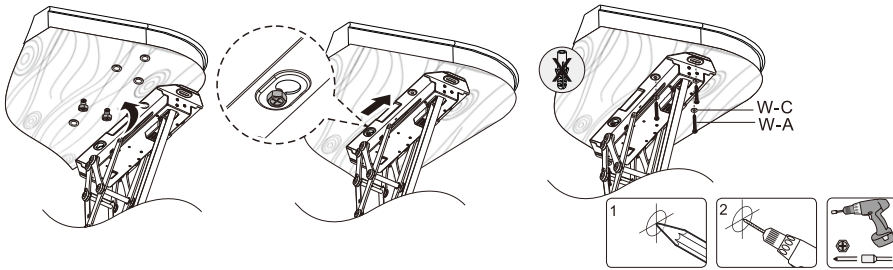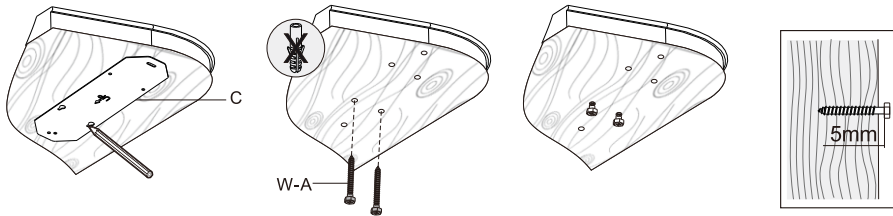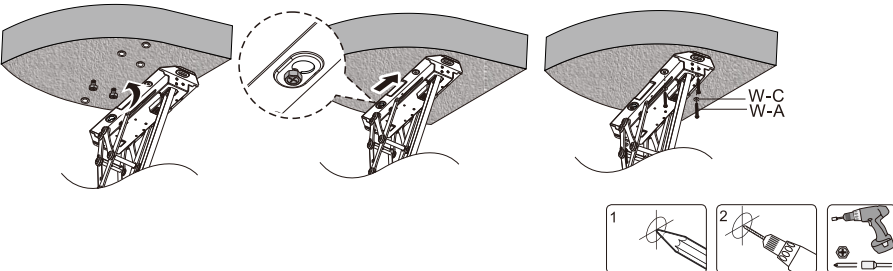     
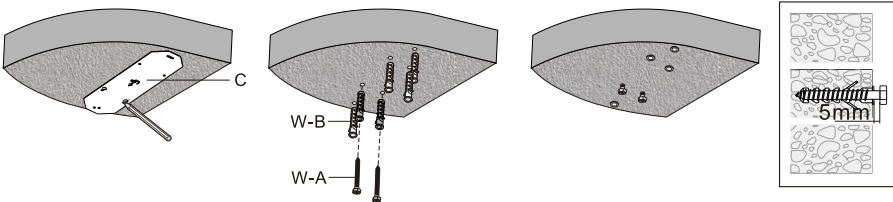 
 
 
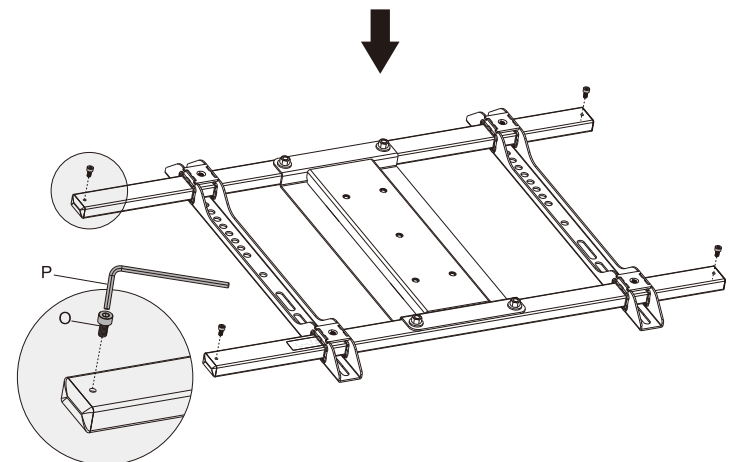 
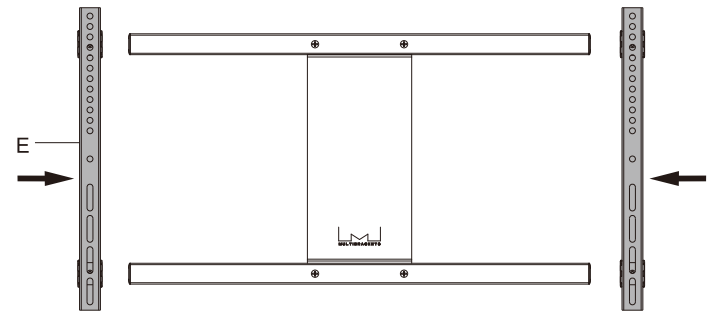 
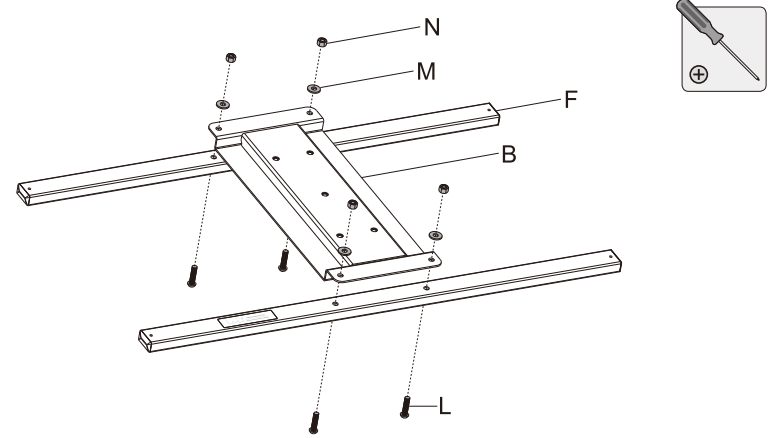 
1a**1b****2**

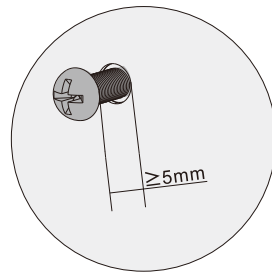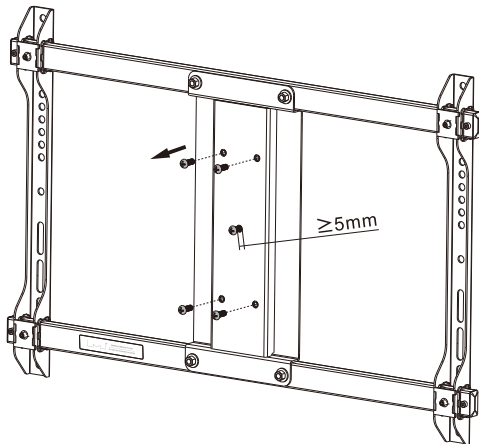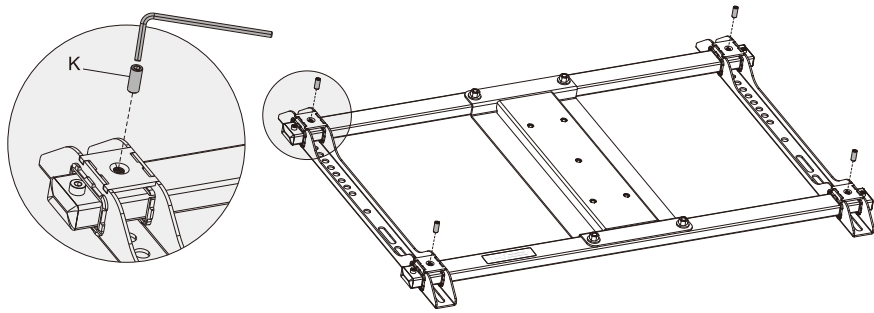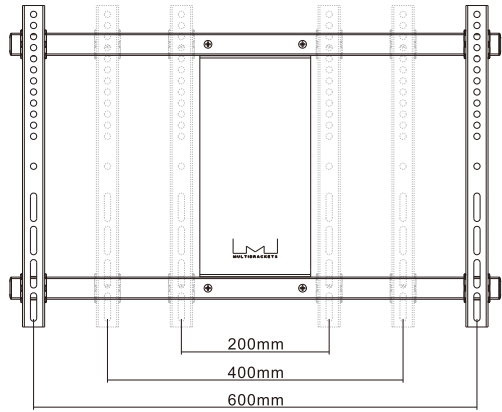    



3a

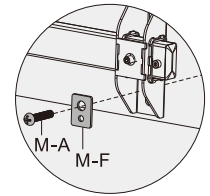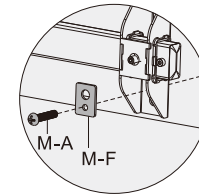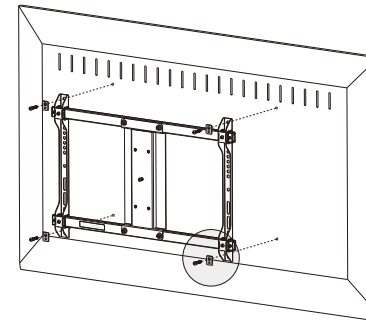   

3b

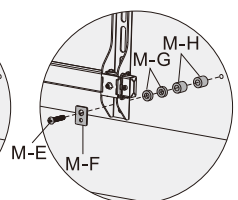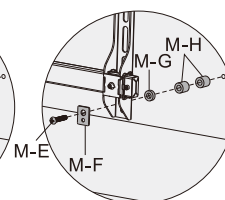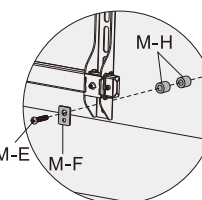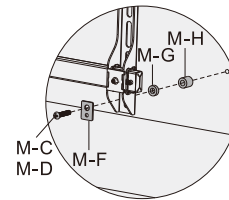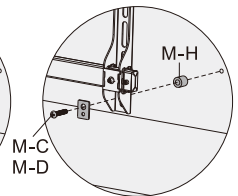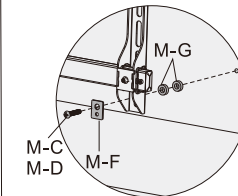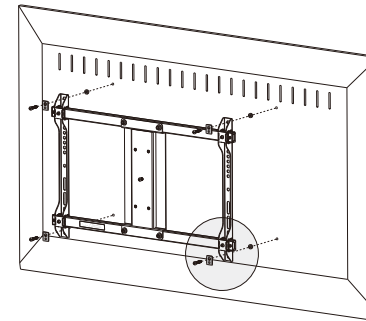       


4

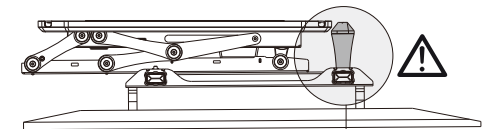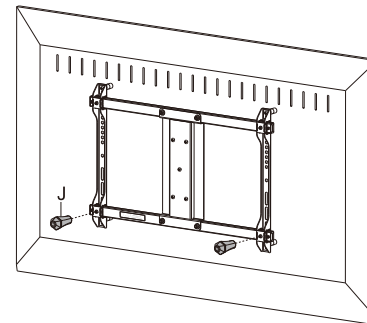  


Note: the leveling knob will touch the ceiling and balance the mount when the mount fold up to the minimum position against the ceiling.

 5

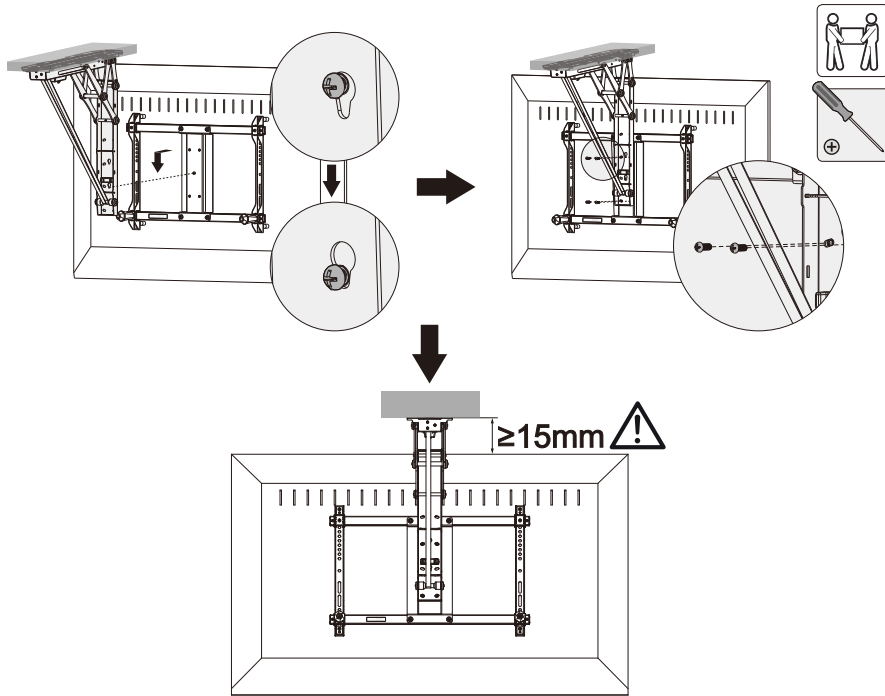


6

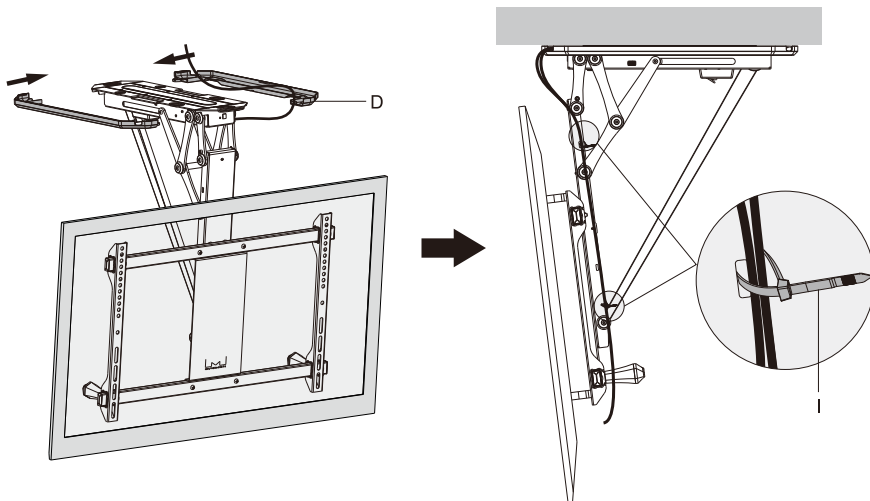 

7

 
⚠ Do not open the electrical cover please.

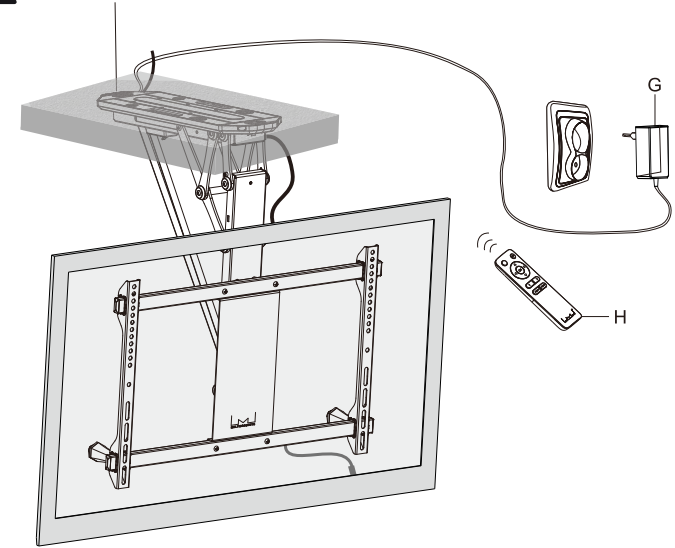

8

The Remote Control Operating Instructions

 Remote Control

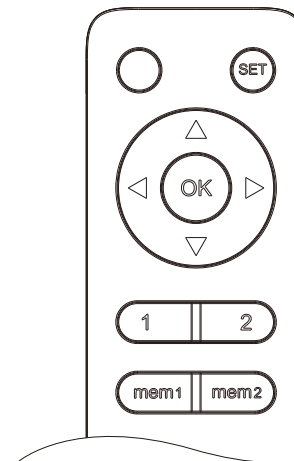

Remote control operation instructions

NOTE: Do not operate without the load of a TV.


STEP 1: When powered, the buzzer sounds once beep, the TV ceiling mount will be in standby state. The TV ceiling mount is installed on a flat surface by default, and has a 0° ~75° continuous adjustable tilt.


Note : the remote control should use AAA battery.

This remote is using RF (radio frequency) standard 

Reset mode


STEP1: Plug the mount to restart the system.


STEP2: Long press the  for 10 seconds and the mount will retract to the lowest profile and stop.

STEP3: If the mount is installed on a pitched ceiling, reset the maximum tilt angle of the mount. If on a flat ceiling, neglect this step. Adjust the tilt angle to the proper position then press . Then long press the MEM1 button, release the button when the buzzer beeps once. Repeat the same step for five times and the buzzer will long beep. The maximum tilt angle is then successfully set.


Buttons function instructions


Follow the Key function instructions below to operate.




 IN button, upward movement




 OUT button, downward movement

 Stop button

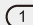 Memory button1. Press and hold for 1 seconds, the buzzer will sound twice beep beep, The memory is saved as location 1.

 Memory button2. Press and hold for 1 seconds, the buzzer will sound twice beep beep, The memory is saved as location 2.


 To recall the  button(location 1). Press and release  button, The TV ceiling mount will automatically swivel to the location1.

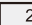 To recall the  button(location 2). Press and release  button, The TV ceiling mount will automatically swivel to the location2.


Manual mode

• In any position (but the minimum position against the ceiling), when manually push up the TV ceiling mount over a distance. The TV ceiling mount will automatically return back to the minimum position against the ceiling.

 Code Matching Mode of Remote Control

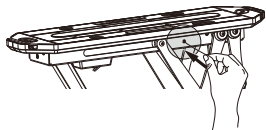

When the system is powered up, press the code matching button on the mount using a thin needle or a paperclip.

Then press the  button on the remote control. The system will finish the matching directly. Next, you will hear the buzzer beep once. The code is successfully matched.

Note: Perform this step when replacing a new remote control.

Troubleshooting

This troubleshooting guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our electric TV mounts. The simple procedures in this manual are easy to follow and capable of solving the most problems happened in everyday use.

Error Indication

1. The Buzzer Constantly Gives Out Alarm Sound:

 
Reset the system by following the instruction manual. (Page 9)



Remote Control Problems

1. Buttons On Remote Control Don't Work.

Please replace the batteries.

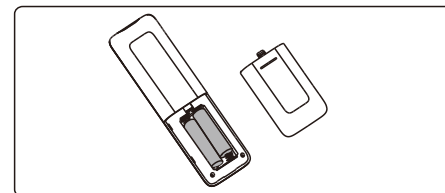

2. The Insensitivity Of Remote Control (The Functional Distance Is Less Than 3m.)

Please replace the batteries.

