

# Installation manual

M Motorized Public Floorstand 160kg Black SD

EAN: 7350073738748

(en) Installation manual

(ar) تېبىتلىلى لىلىد

(cz) Instalační manuál

(da) Installationsmanual

(de) Installationsanleitung

(ee) Paigaldusjuhend

(el) Οδηγίες εγκατάστασης

(es) Manual de instalación

(fi) Asennusohje

(fr) Installation Manuel

(he) הנקתה יירדמ

(hu) Szerelési kézikönyv

(it) Manuale di installazione

(jp) 取り付け説明書

(kr) 설치 설명서

(li) Montavimo instrukcija

(lt) Uzstādīšanas rokasgrāmata

(nl) Installatie handleiding

(no) Installasjonshåndbok

(pl) Instrukcja instalacji

(pt) Manual de instalação

(ro) Manual de instalare

(ru) Инструкция по установке


(sk) Inštaláčny manuál

(sl) Navodila za montažo

(sv) Installationsmanual


(tr) Montaj kılavuzu

(zh) 安装手册

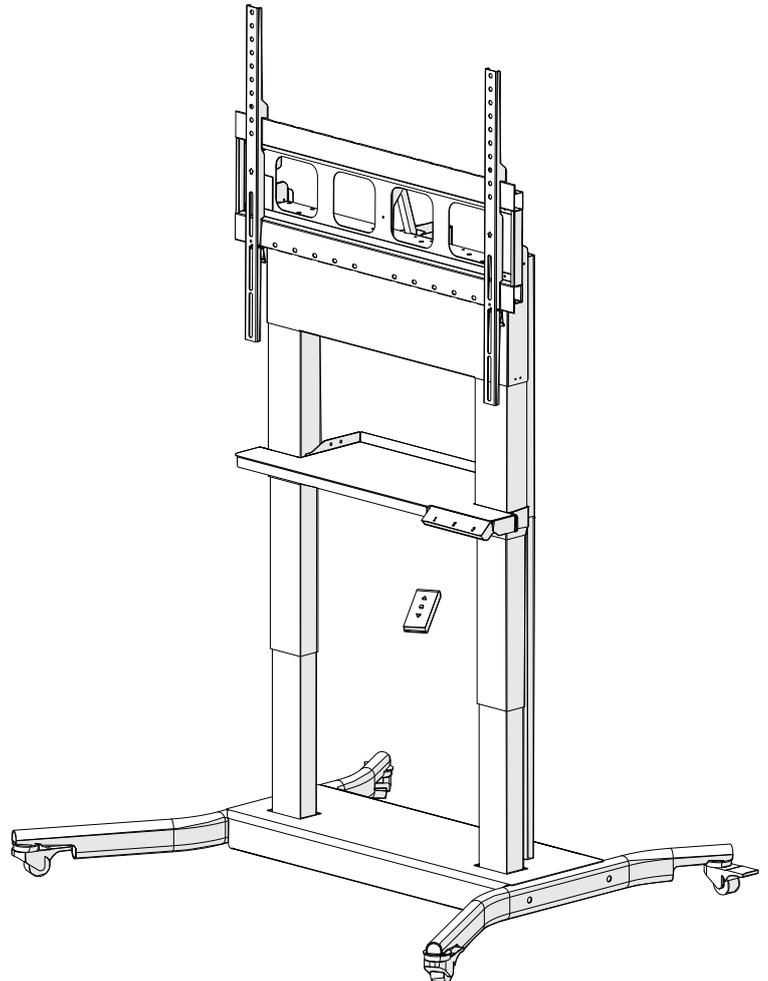


# Safety instructions


- ❶ Read and understand all instructions, and operate in strict accordance with the instructions.
- ❷ Please ask the installation personnel to assemble the mobile frame and at least two professionals to install the TV.
  - ⚠ **Note: if the installed TV exceeds the rated load, personal injury may be caused.**
- ❸ Do not install the mobile cart near the place with plenty of water or high humidity.
- ❹ Do not install the mobile cart near the vent.
- ❺ Do not install the mobile cart in the place with direct sunlight or other strong light.
- ❻ Do not modify or change the installed parts without permission.
- ❼ Do not install the mobile cart in a place where it is easy to shake or fall.
- ❽ After installation, do not hang heavy objects on the product or make the product collide violently. Once the product is damaged, it is not allowed to continue to use, or the consequences will be borne by itself.
- ❾ The company shall not be responsible for any injury or loss caused by improper installation and operation.

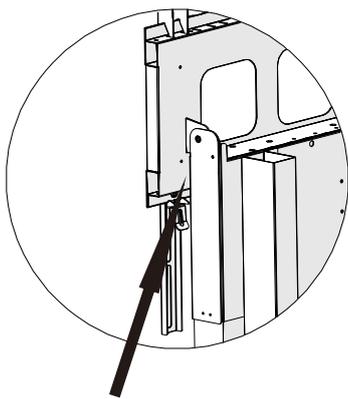

Be careful with your hands.

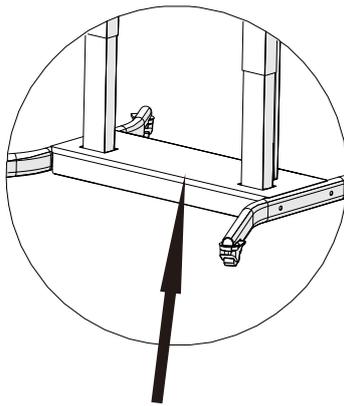


No stampede

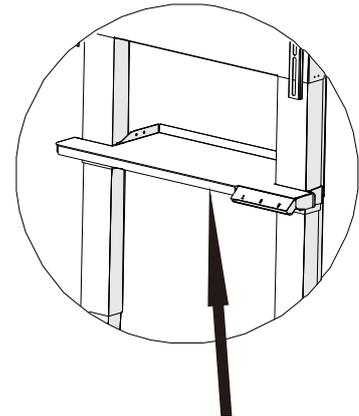

The weight of countertop shall not exceed 15kg

# Parts

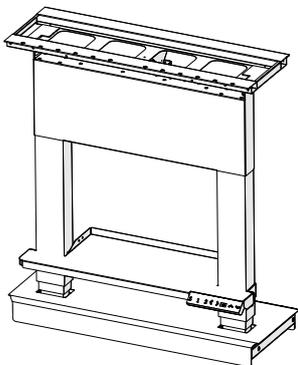

Main Body

NO	Diagrammatic presentation	Designation	Quantity	Remarks column
A		Foot	2	
B		Vertical bar	2	
C		Screw (M10X80)	4	Fixed on the main body, Please remove C before installation
D		Screw (M5X12)	2	Fixed on vertical bar (B), Please remove d before installation
E		Washer	4	Fixed on screw M10x80 (C), Please remove E before installation
F		Remote control (Battery free)	1	Battery type: LR23A 12V
G		Wrench	1	
H		Self sealing bag	1	
I		Screw (M5X8)	8	Non standard matching
J		Extended supporter	2	Non standard matching

**Warning!**

Always check the depth of the holes before starting an installation.

**تحذير!**

الحرص دائما عمق الثقوب قبل أن تبدأ في عملية التركيب.

**ADVARSEL!**

Kontroller alltid hullernes dybde, før du går i gang med en installasjon.

**WARNUNG!**

Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.

**ΠΡΟΕΙΔΟΠΟΙΗΣΗ!**

Ελέγχετε πάντοτε το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.

**WARNING!**

Always check the depth of the holes before starting an installation.

**¡AVISO!**

Controle siempre la profundidad de los agujeros antes de iniciar una instalación.

**VAROITUS!**

Selvitä reikien syvyyks ennen asentamisen aloittamista.

**ATTENTION !**

Vérifiez toujours la profondeur des trous avant de commencer l'installation.

**ATTENZIONE!**

Verificare sempre la profondità dei fori prima dell'installazione.

**Varování!**

Před začátkem instalace vždy zkontrolujte potřebnou hloubku všech otvorů.

**ADVARSEL!**

Sjekk alltid hvor dype hullene er før du begynner å montere.

**OSTRZEŻENIE!**

Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.

**ПРЕДУПРЕЖДЕНИЕ!**

Перед установкой всегда проверяйте глубину отверстий.

**WARNING!**


Kontrollera alltid hålens djup innan en installation påbörjas.

**UYARI!**

Montaja başlamadan önce daima deliklerin derinliğini kontrol edin.

**警告!**

请始终在安装前检查孔洞的深度。

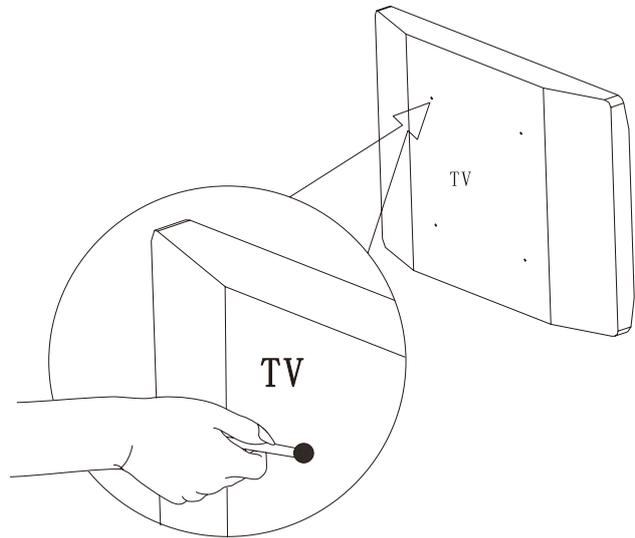**WARRANTY CARD**

MULTIBRACKETS.COM

**MULTIBRACKETS™ Limited Warranty**

Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- **FIVE (5) years** for metal video monitor mounts; all racks and non-electrical rack accessories
- **TWO (2) years** for gaslifts and sit-stand workstations
- **ONE (1) year** for all motorized and/or automated products, plastic speaker mounts; all speaker stands; all furniture; all wood (MDF) accessories


For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on [www.multibrackets.com/support](http://www.multibrackets.com/support) to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges.

This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.


Multibrackets™ Stockholm Sweden 2016.  
[www.multibrackets.com](http://www.multibrackets.com)

The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: [www.multibrackets.com](http://www.multibrackets.com)

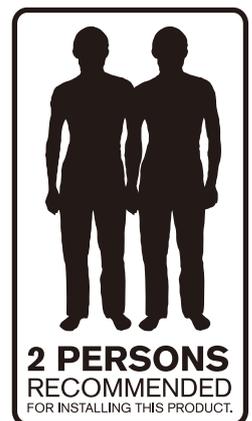


# Installing the foot

1

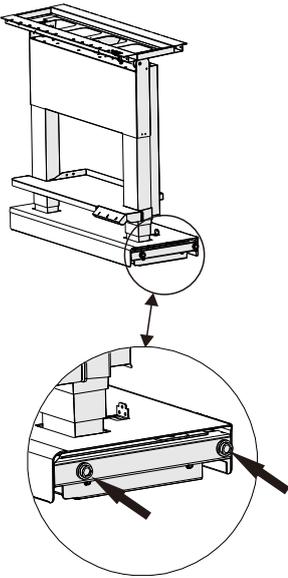


First remove the screw C indicated by the arrow and washer E, There are 4 left and right.

2

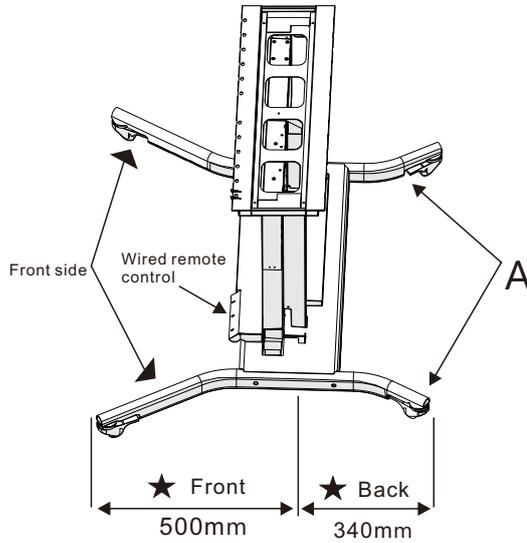

The direction of the feet can't be wrong


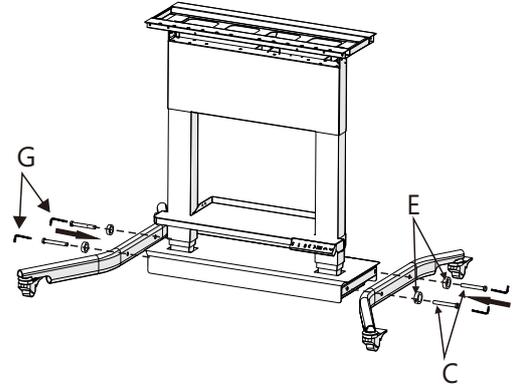


# Install TV

3


TV hole spacing: H: 100/200/300/400/500/600mm  
V: 200/400/600mm

According to the actual situation of TV screw hole, select the appropriate screw.

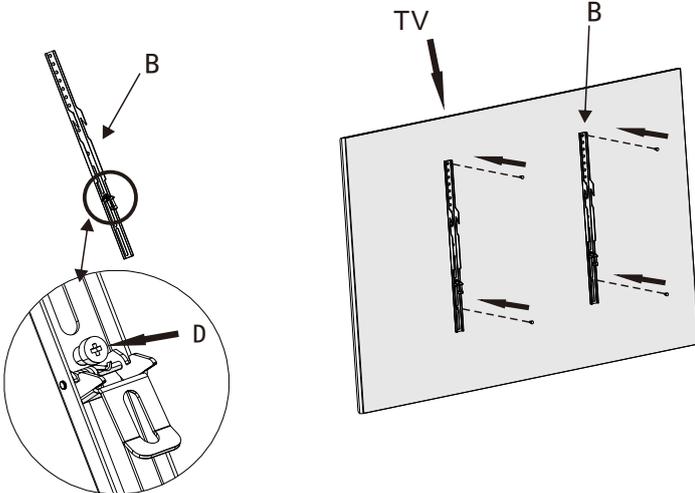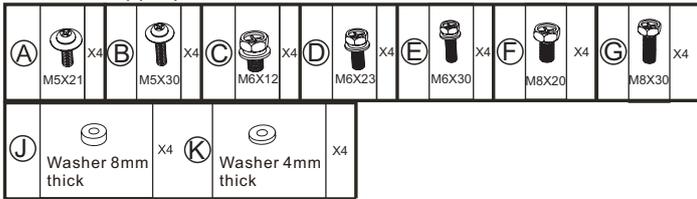

Please remove the screw D indicated by the arrow first

4

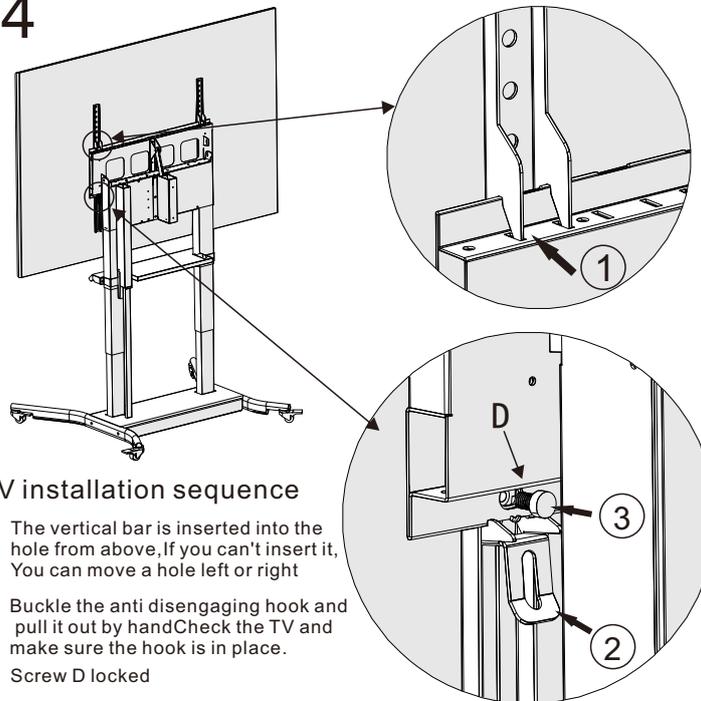

## TV installation sequence

- ① The vertical bar is inserted into the hole from above, if you can't insert it, you can move a hole left or right
- ② Buckle the anti disengaging hook and pull it out by hand. Check the TV and make sure the hook is in place.
- ③ Screw D locked

## TV removal sequence

1. Remove screw D (③)
2. Pull off the anti disengaging hook (②)
3. Lift the TV from the bottom up, Pull the vertical bar (①) out of the hole

## Caution


Screw D must be locked tightly, otherwise the TV may fall down.

# 5

# Caution

Don't pull out the plug when the cart is working, or the remote control will show an error message.

- If the remote control displays an error message "ER1" or "ER2" during the lifting process,
- ① Press  (Wired remote control) until "res" shows up.
  - ② Keep pressing  (Wired remote control) and release it after 1 or 2 seconds, cart will move down 1cm.
  - ③ Repeat step ②.
  - ④ Cart will be restored when it moves down to the bottom.

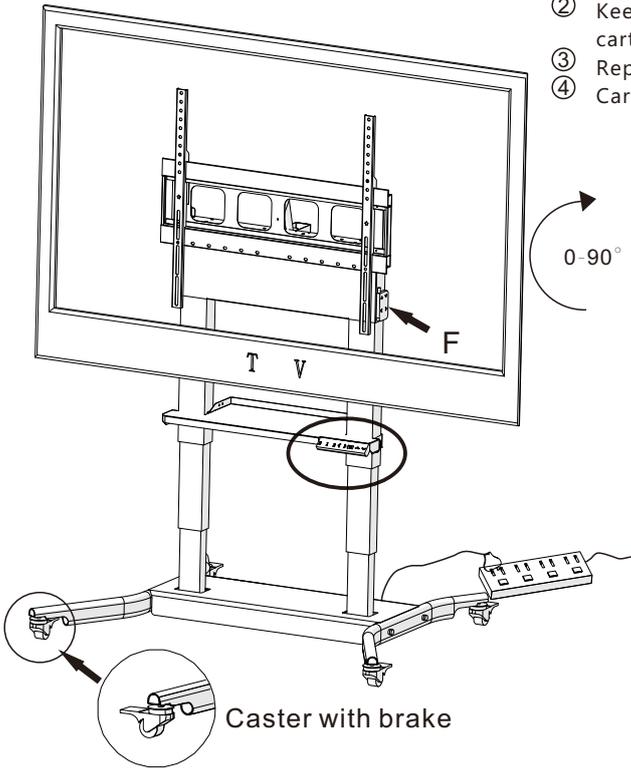

- ① After the position is fixed, please lock the wheel to prevent the mobile frame from moving.
- ② Please release the brake before moving, otherwise it will shake when moving.


Remote control



-  - Move up
-  - Move down
-  - Flip forward
-  - Flip back

All four buttons are free. Every time you press it, you'll keep moving. And press any key, it will stand stop moving.



Wired remote control

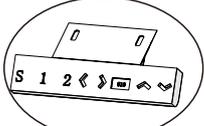


-  - Flip forward
-  - Flip back
-  - Move up
-  - Move down

"S+1": Record current height, when you press "1", the cart will restore to this height.  
 "S+2": Record current height, when you press "2", the cart will restore to this height.

When the horizontal direction required by vertical bars (B) is from 600 mm to 800mm

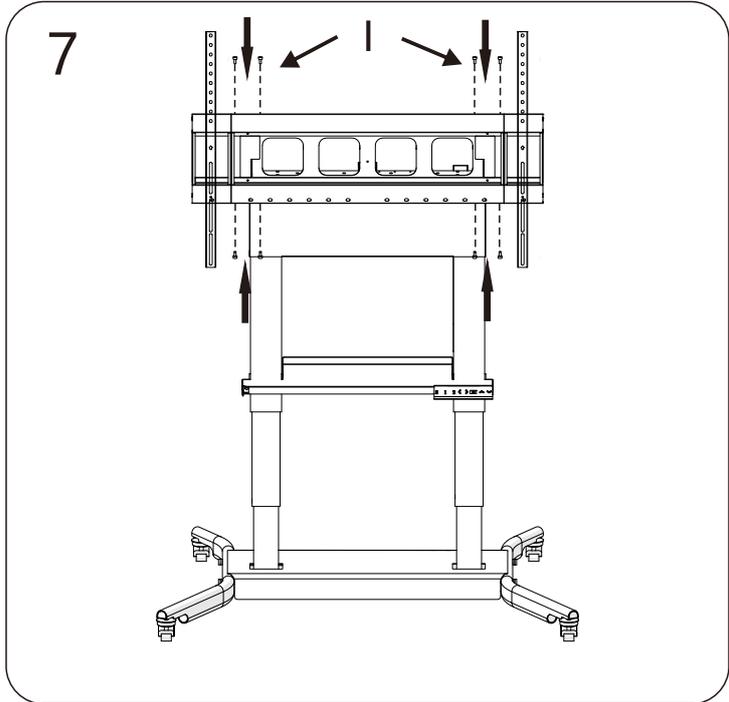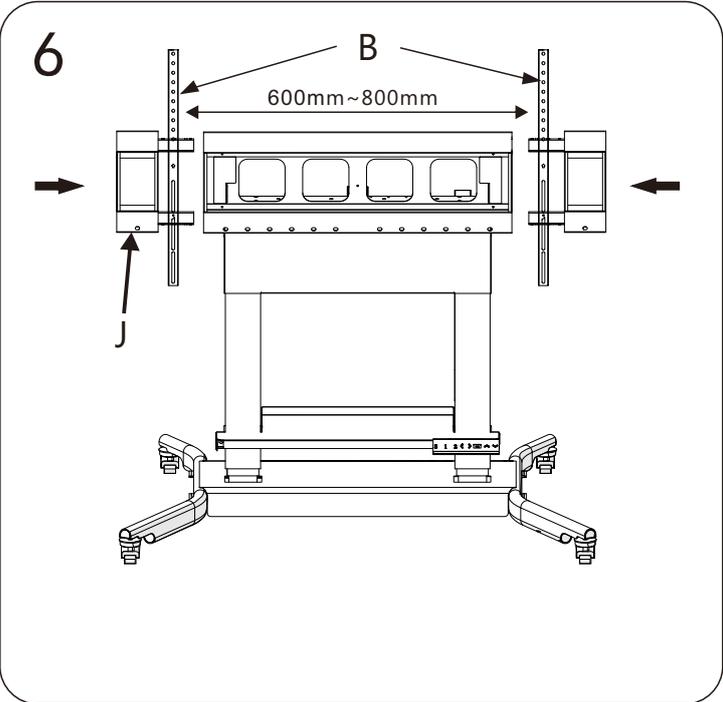

# Flippable Electrical Mobile Cart

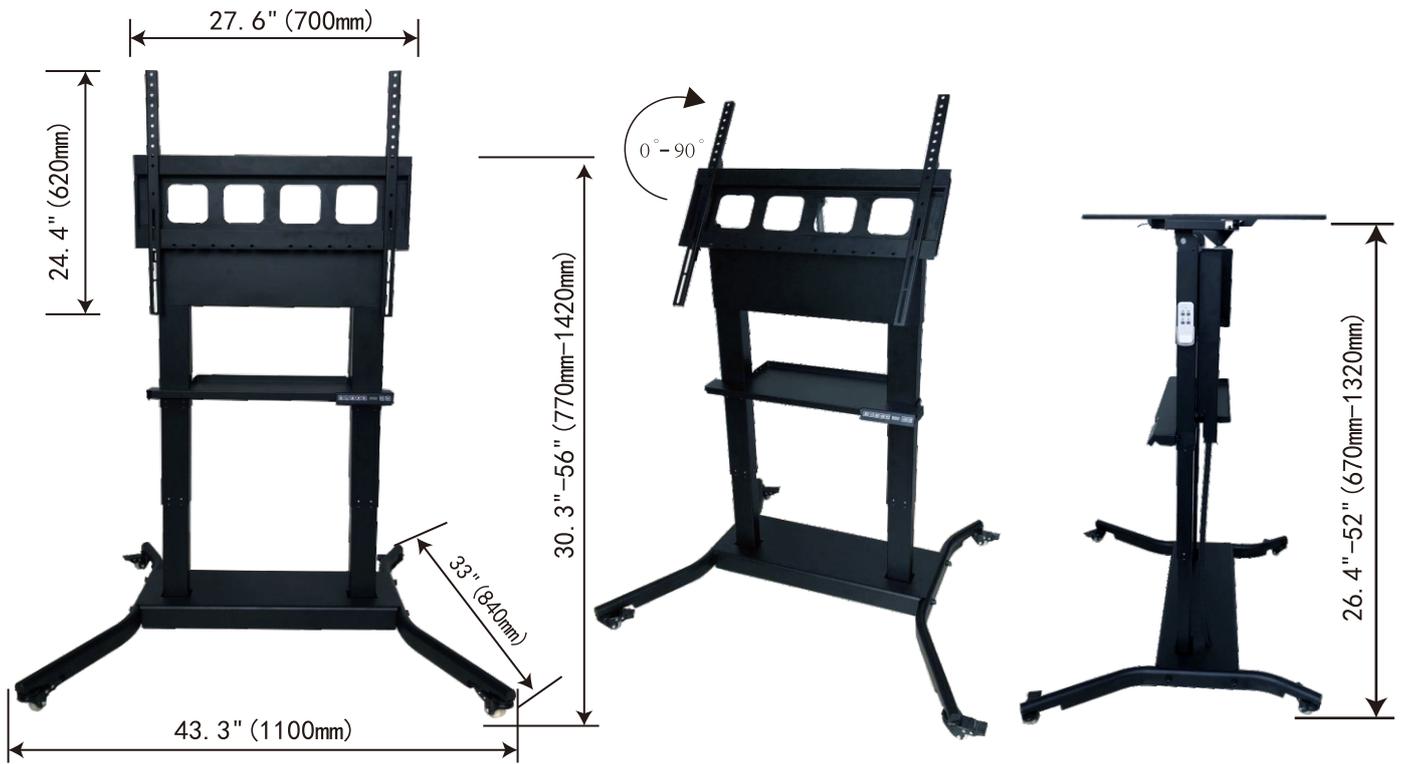

## Product information

Model	M Motorized Public Floorstand 160kg Black SD
Net Weight	45kg
Maximum Load (Lift up/down)	120kg
Flip Angle	0°–90°
Maximum Load(Flip)	80kg
Height Adjustment	770mm–1420mm
Applicable TV Size	40"–70" (16:9 wide screen)
Battery Type	LR23A 12V