


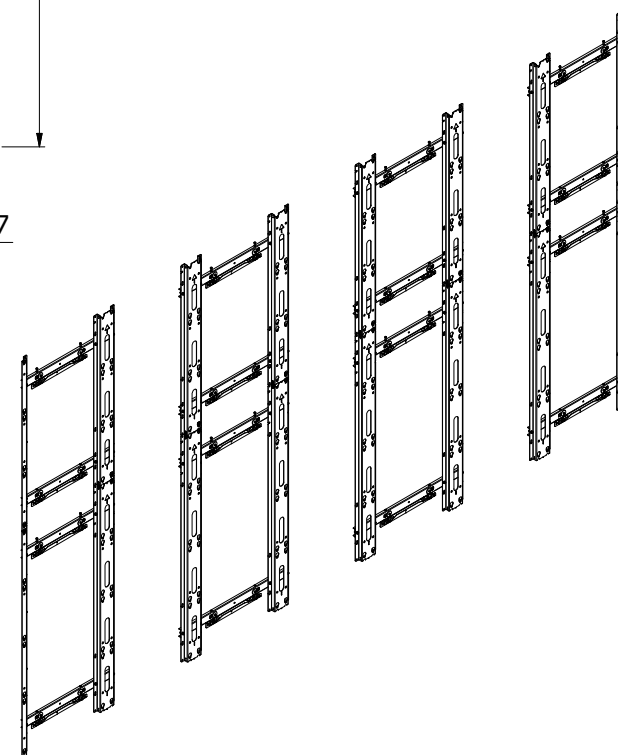
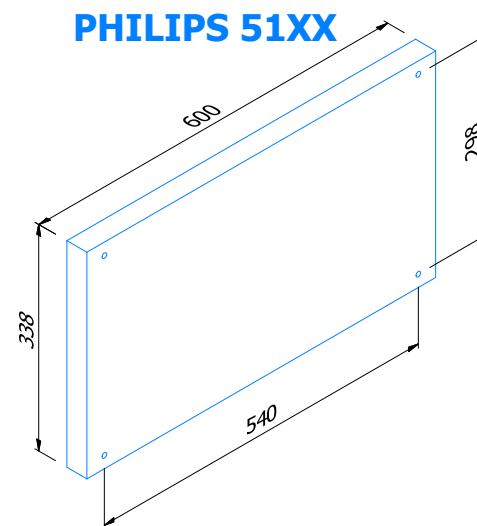
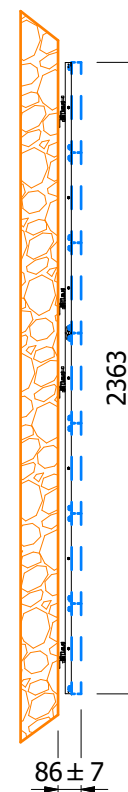


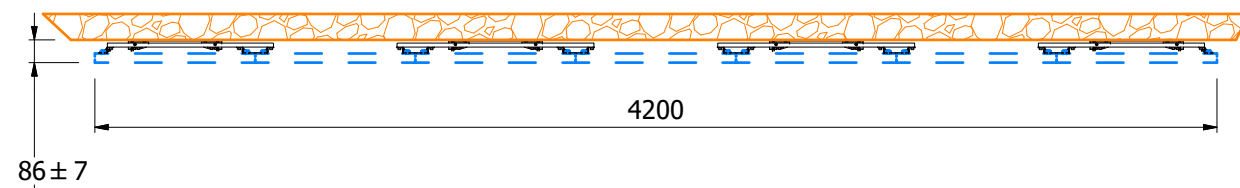

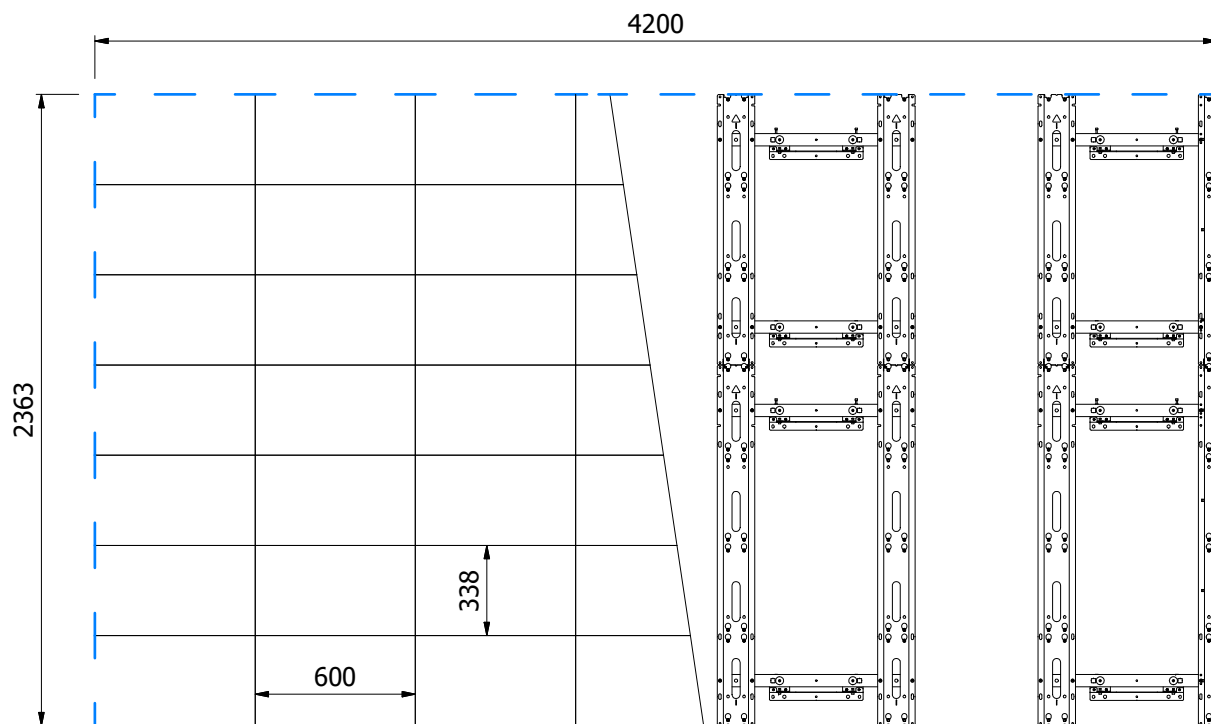


LEDWALL WALLMOUNT PHILIPS 51XX 7x7


FRAME 1x3 LT
(x 1)

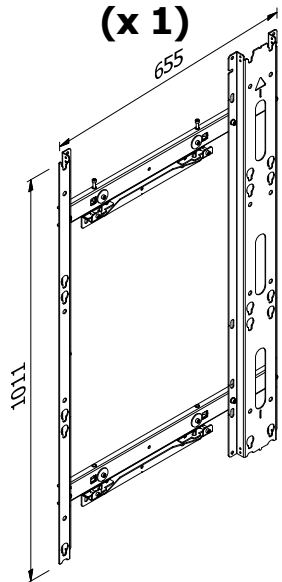


FRAME 1x3 CEN
(x 2)

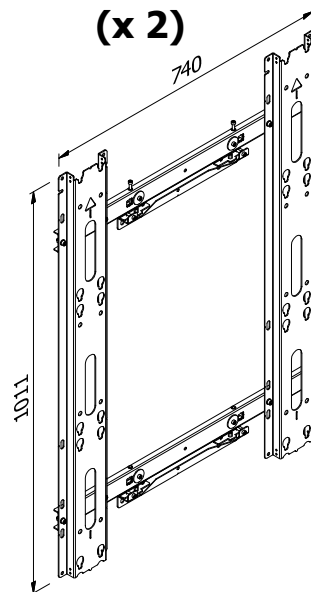


FRAME 1x3 RT
(x 1)

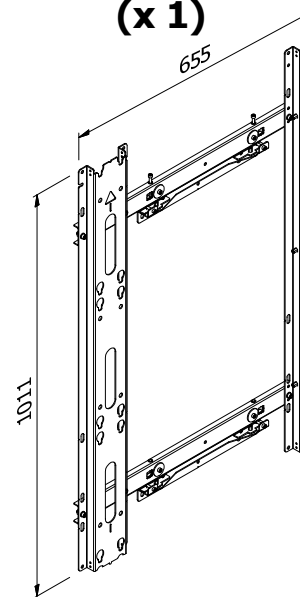


SPACER
(x 2)

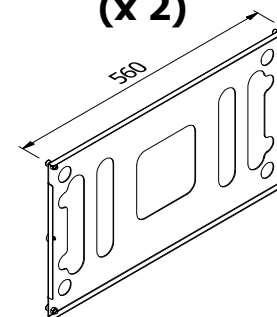


FRAME 1x4 LT
(x 1)

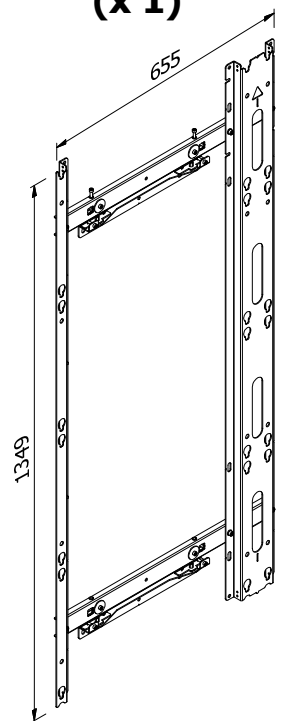


FRAME 1x4 CEN
(x 2)

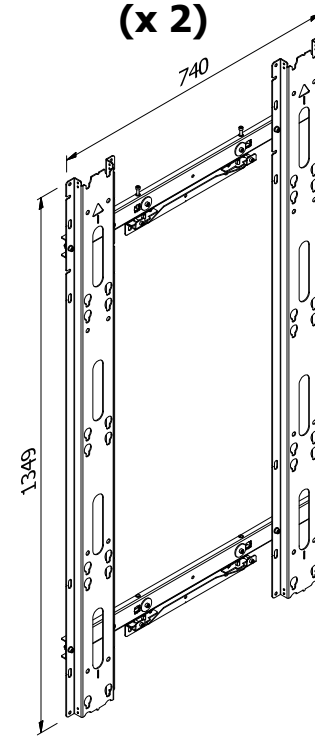

FRAME 1x4 RT
(x 1)

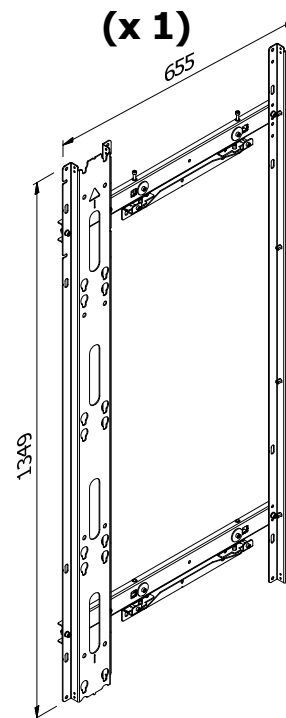


**VERTICAL
SPACER**
(x 4)

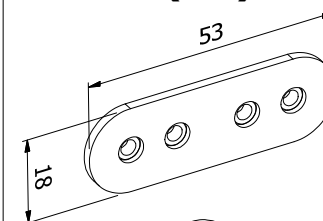


SCREW M4

SCREW BAG

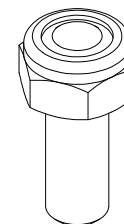

PAWL
QTA' 196

LEDWALL WALLMOUNT PHILIPS 51XX 7x7

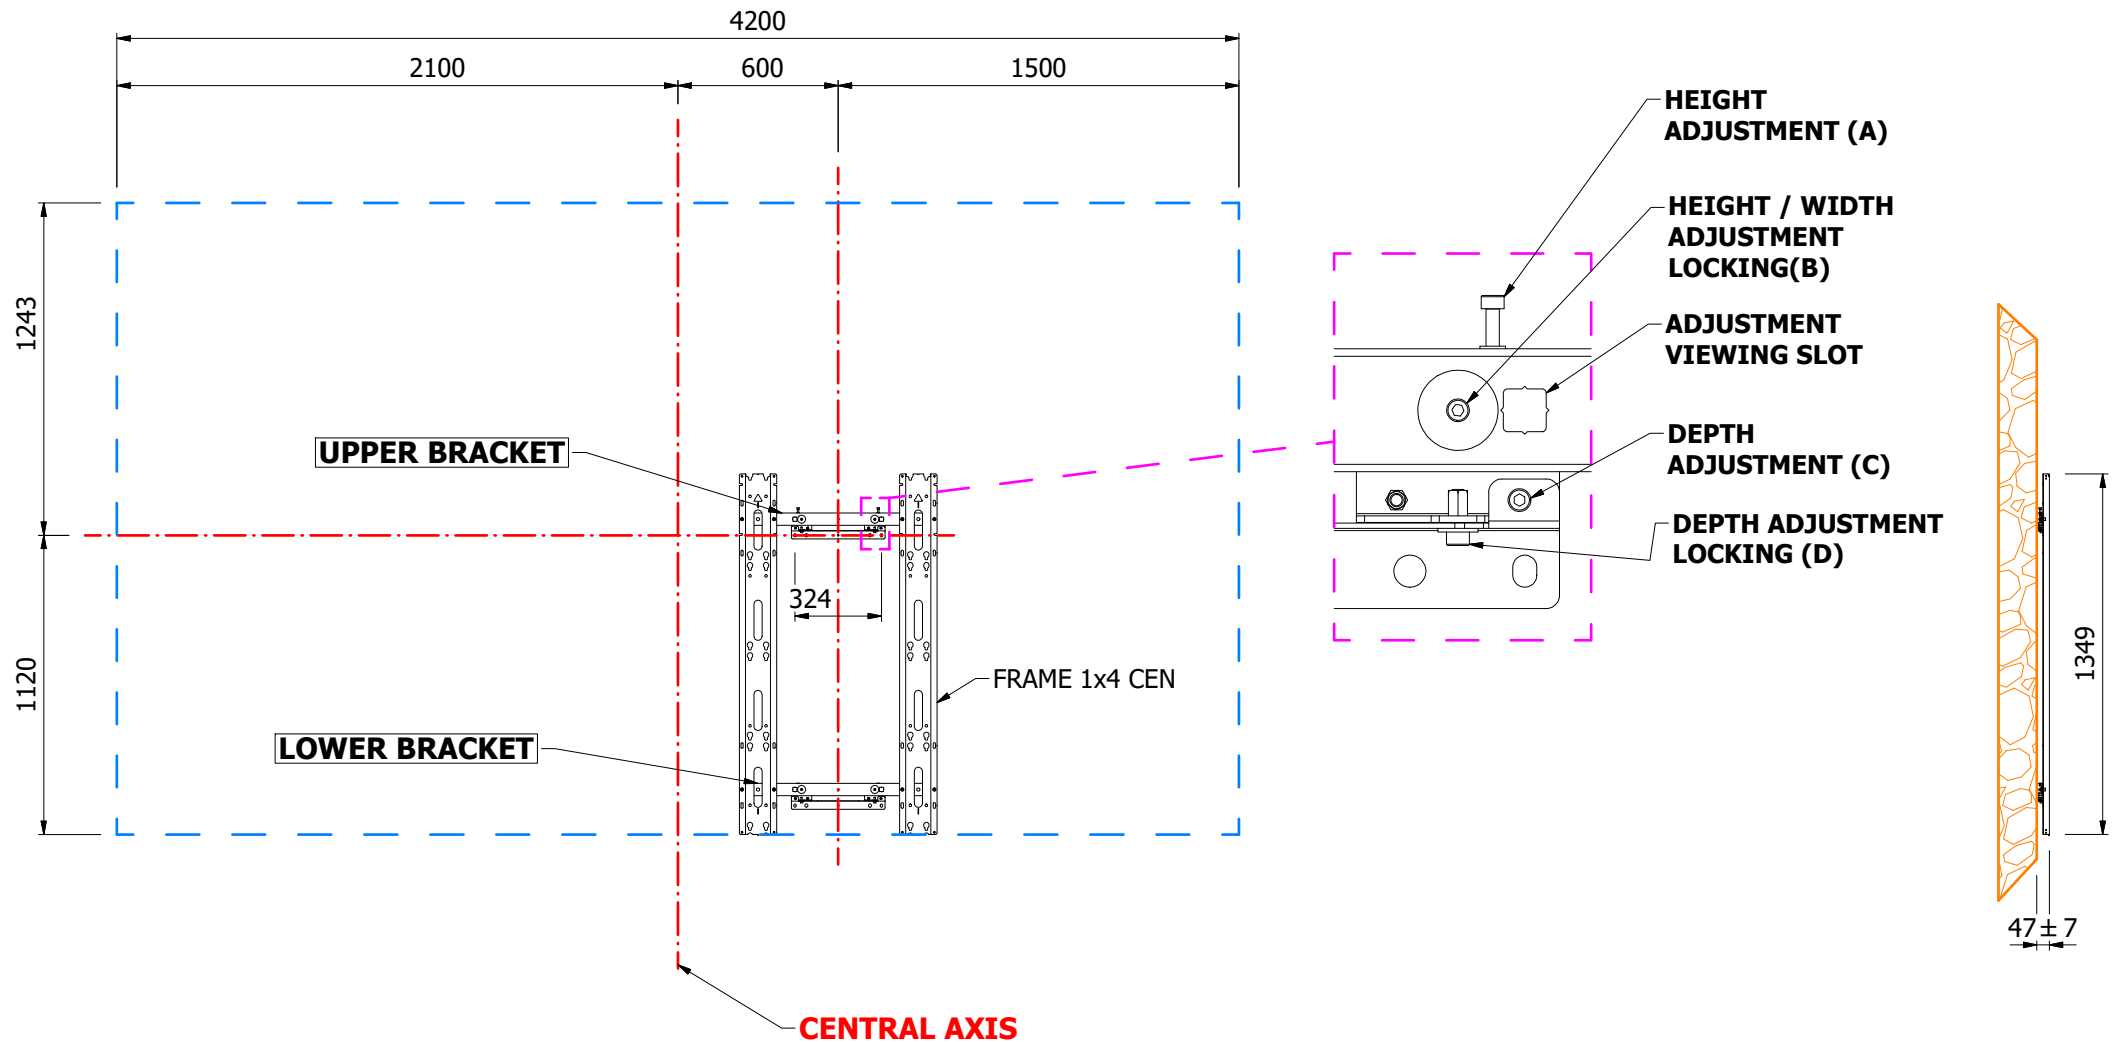


Secure the upper bracket using the adjustment screws

Fix the lower bracket AFTER adjusting the frames


The anchors are not supplied, the installer must use suitable anchors to the fixing wall. Minimum diameter of the screw Ø 5 mm

LEDWALL WALLMOUNT PHILIPS 51XX 7x7

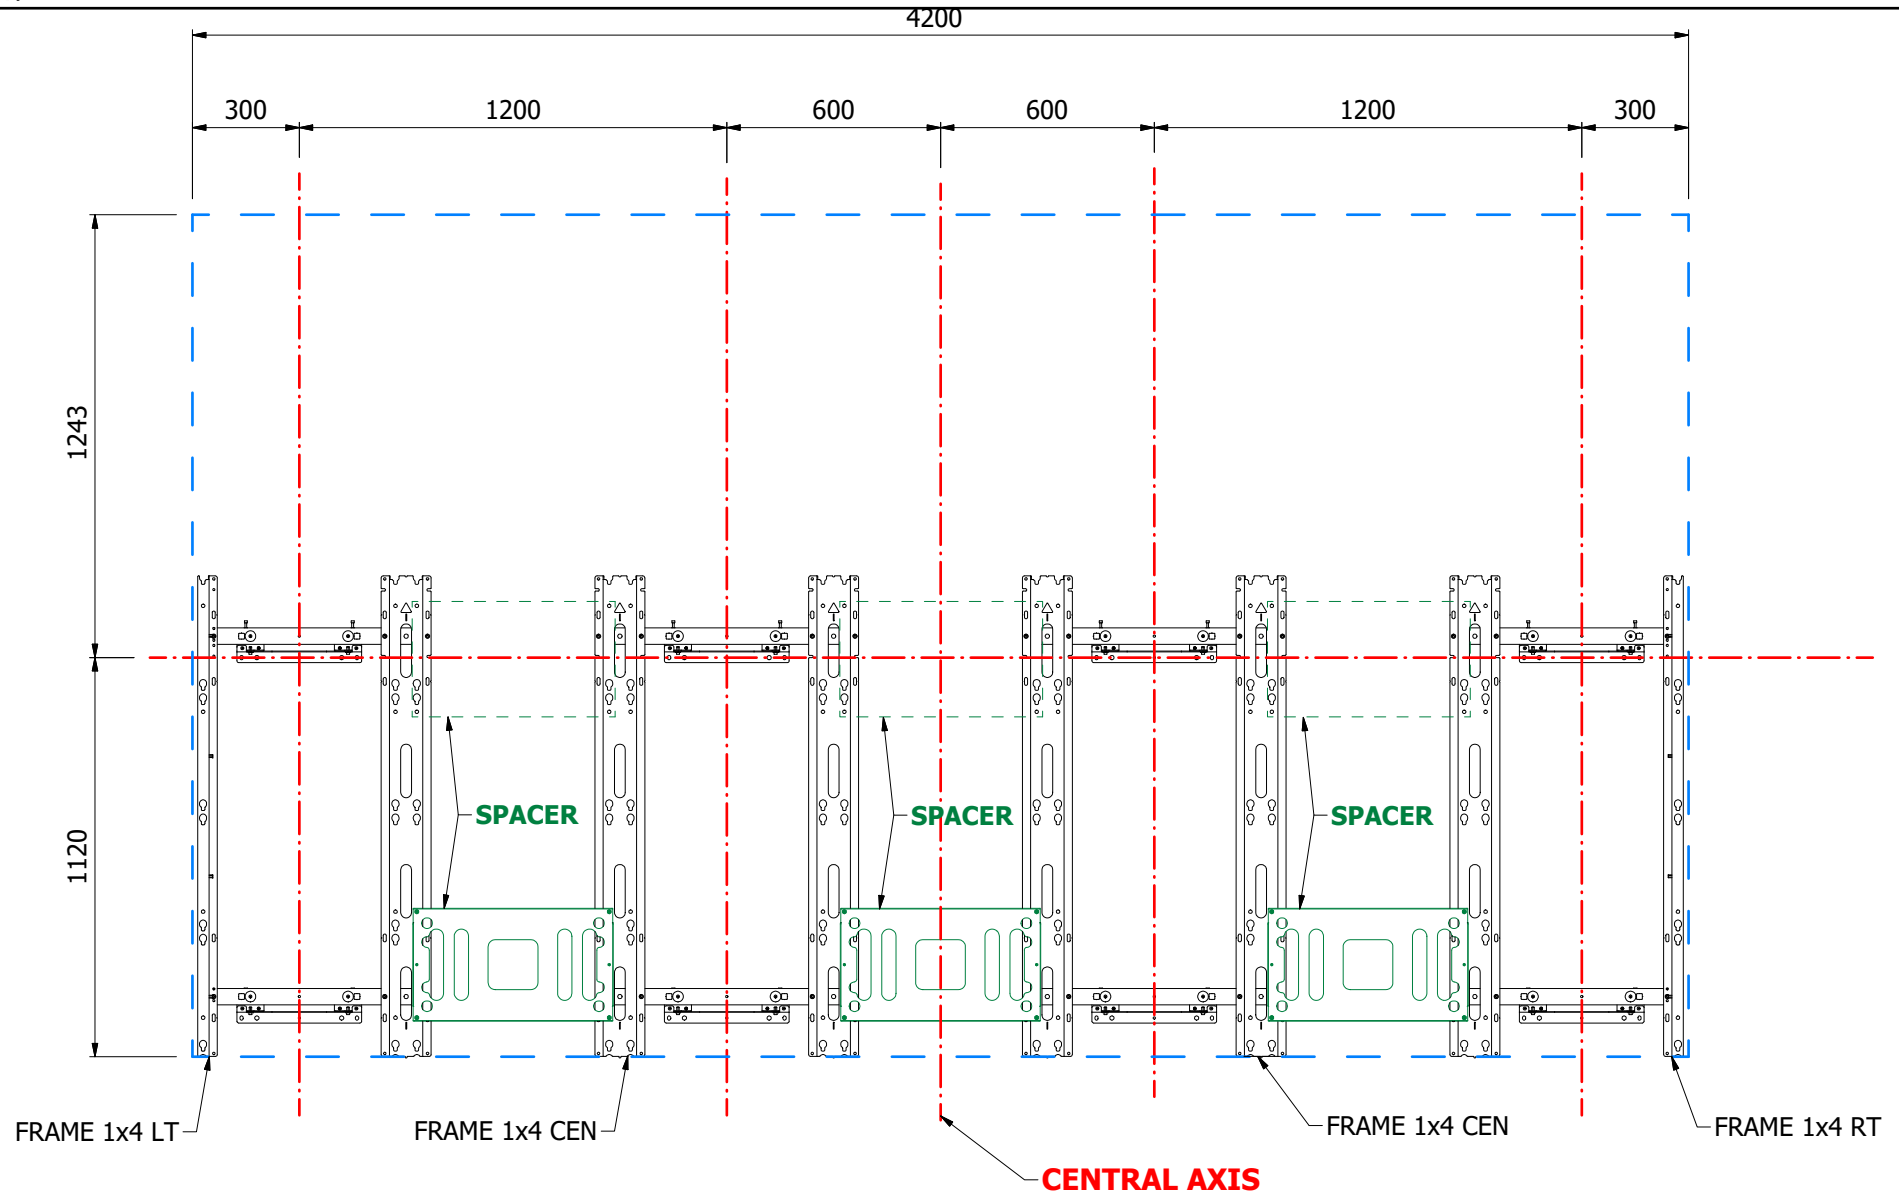

ATTENTION,
Space the frames correctly with the help of the 2 templates and repeat the same steps on the previous page.

LEDWALL WALLMOUNT PHILIPS 51XX 7x7

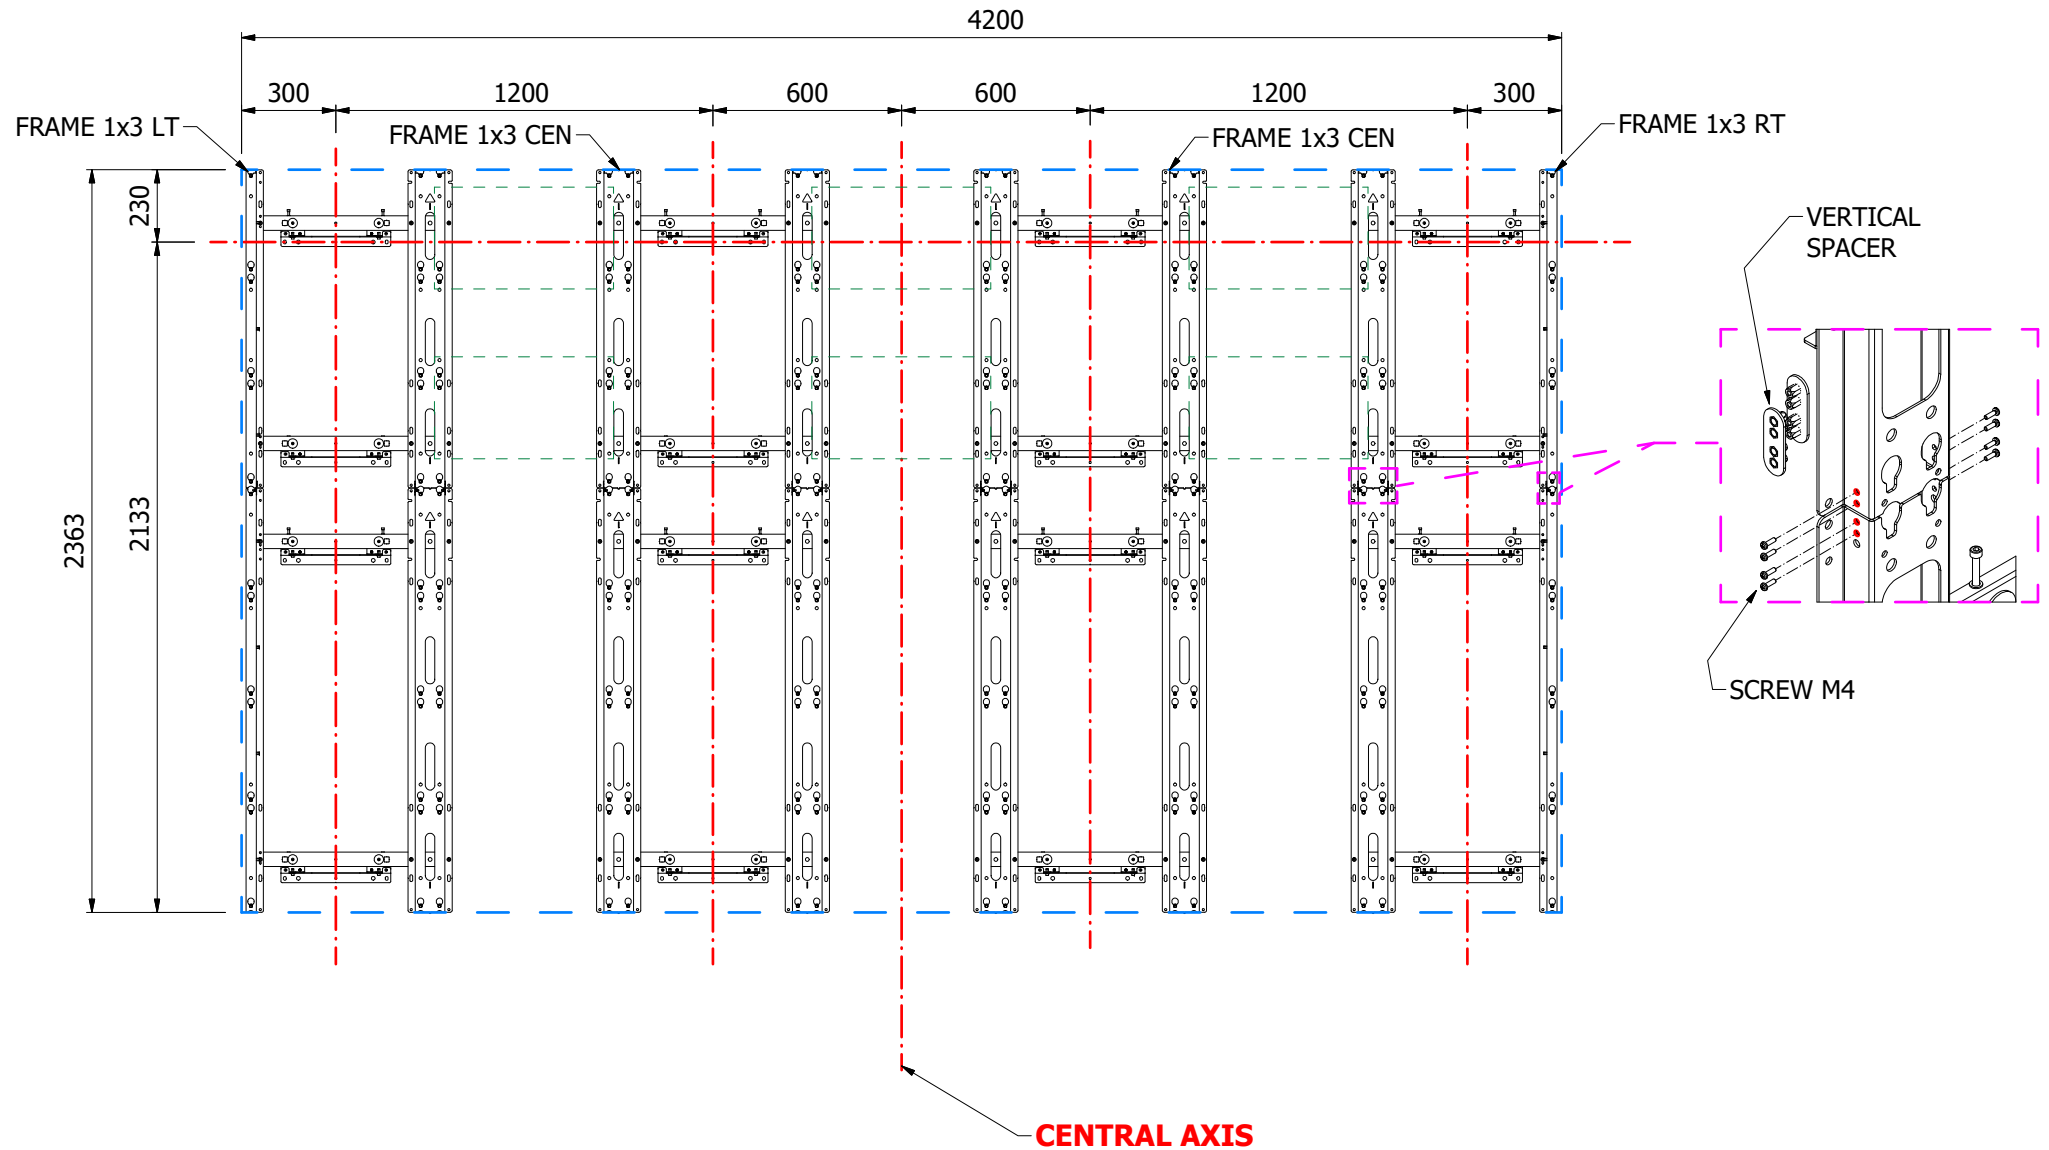

ATTENTION:
Space the frames correctly using the template and vertical spacer.

LEDWALL WALLMOUNT PHILIPS 51XX 7x7

